Step 1 FJ Cruiser Blitz Sliders Install Instructions






Step by step on how to install the Blitz Sliders on a Toyota FJ Cruiser (07-14). Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=64T1-I-DNK4

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts & Hardware

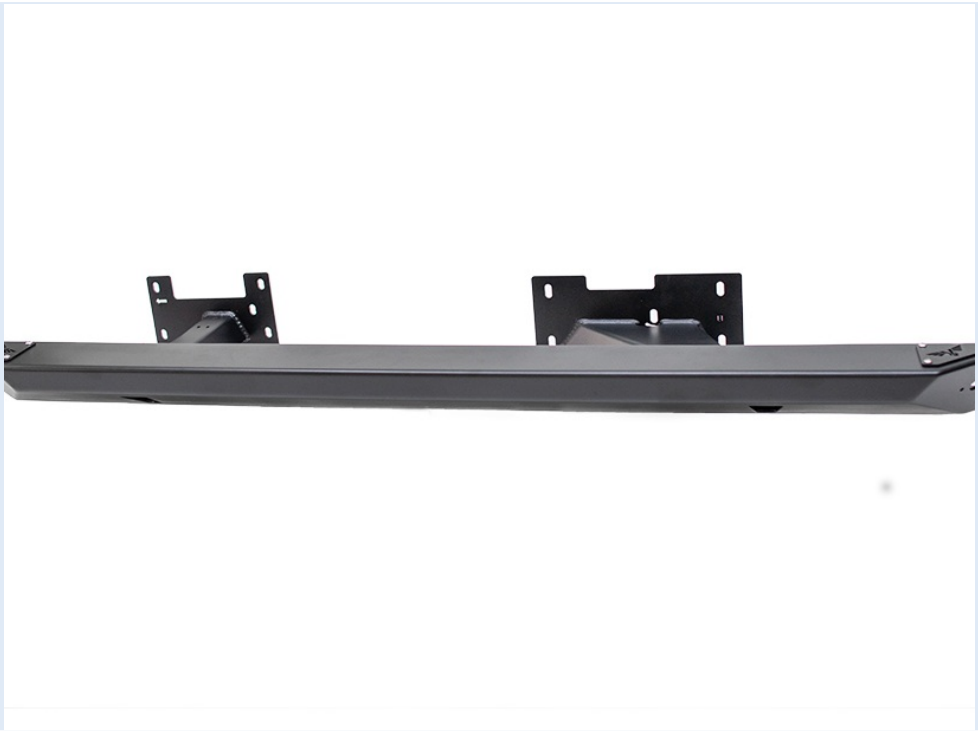

Check that you have all of the parts and hardware shown before starting.

Step 3 Install LED Lights





Install the LED lights using the provided button head bolts, washers, and lock nuts. Make sure the lights are centered in the hole and tighten them down using a 3mm allen and a 5/16″ socket or wrench.
Video timestamp: 0:30

Step 4 Install Logo Plates



Install a logo plate on each end of the slider with 1/4 in. button head bolts and serrated flange nuts. Start all three bolts before tightening with a 5/32 in. hex.

Video timestamp: 1:30

Step 5 Install Front Slider Mount



The sliders are symmetrical until the mounts are on. The front mount has an arrow that faces the front of the vehicle. Bolt it to the center-most holes on the slider with the 1/2 in. button head hardware and serrated flange nuts.

Video timestamp: 2:20

Step 6 Install Rear Slider Mount



Bolt the rear mount to the center-most holes on the back of the slider with the same 1/2 in. button head hardware. The rear mount should angle from the slider forward toward the frame rail. Leave all mount hardware loose for now. A 5/16 in. Allen wrench reaches the tight bolt.

Video timestamp: 2:50

Step 7 Prep the Frame Rail



Remove any factory steps. Remove the parking brake cable bracket bolt on each side toward the rear and let it hang. Remove any plastic clips or plugs from the holes behind the slider mounts so the frame is flat.

Video timestamp: 3:55


Step 8 Remove Front Mud Flap



Remove the front mud flap: three fasteners in the wheel opening and one on the back side, all with a 10mm socket.

Video timestamp: 4:32

Step 9 Hang the Slider

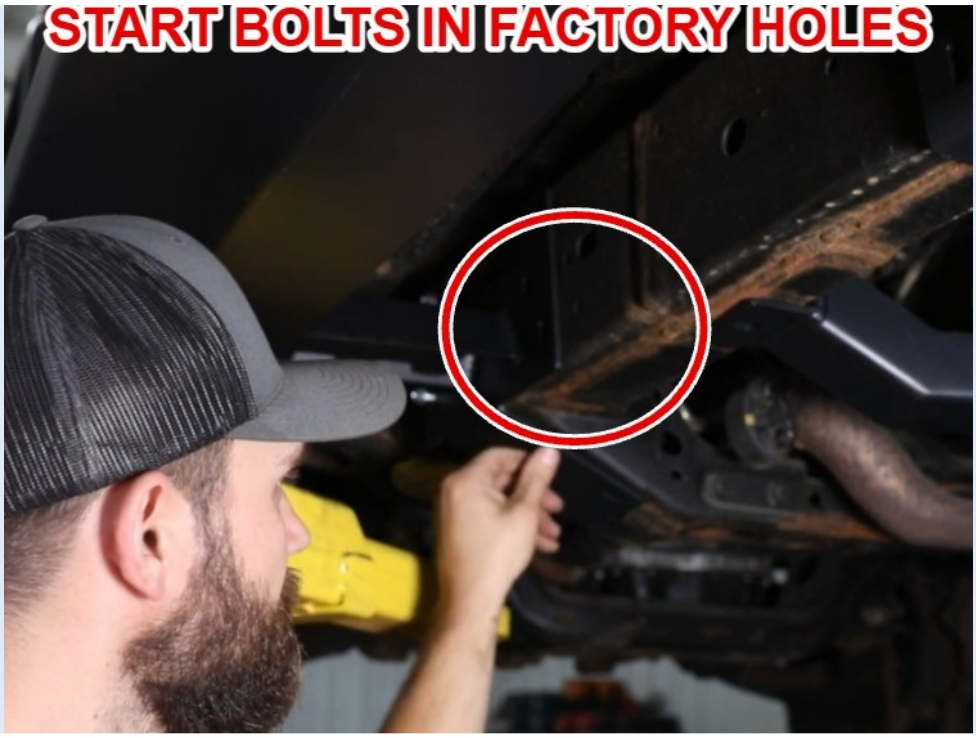

Lift the slider into place and start a couple of bolts. Then install the rest of the 8mm flange head bolts into all the factory threaded holes and lightly snug them.

Video timestamp: 4:50

Step 10 Install Front Self-Threading Bolts



Install two 3/8 in. self-threading bolts into the two rearward-most holes on the front mount.

Video timestamp: 5:05

Step 11 Drill Front Mount Bottom Hole



Using the bracket as a guide, center punch and drill a 5/16 in. hole, stepping up through smaller bits. Install a 3/8 in. self-threading bolt.

Video timestamp: 5:40


Step 12 Drill Rear Mount Hole



Repeat on the rear mount: drill the empty hole to 5/16 in. using the bracket as a guide and install a 3/8 in. self-threading bolt.

Video timestamp: 6:35

Step 13 Tighten and Reinstall Brake Cable

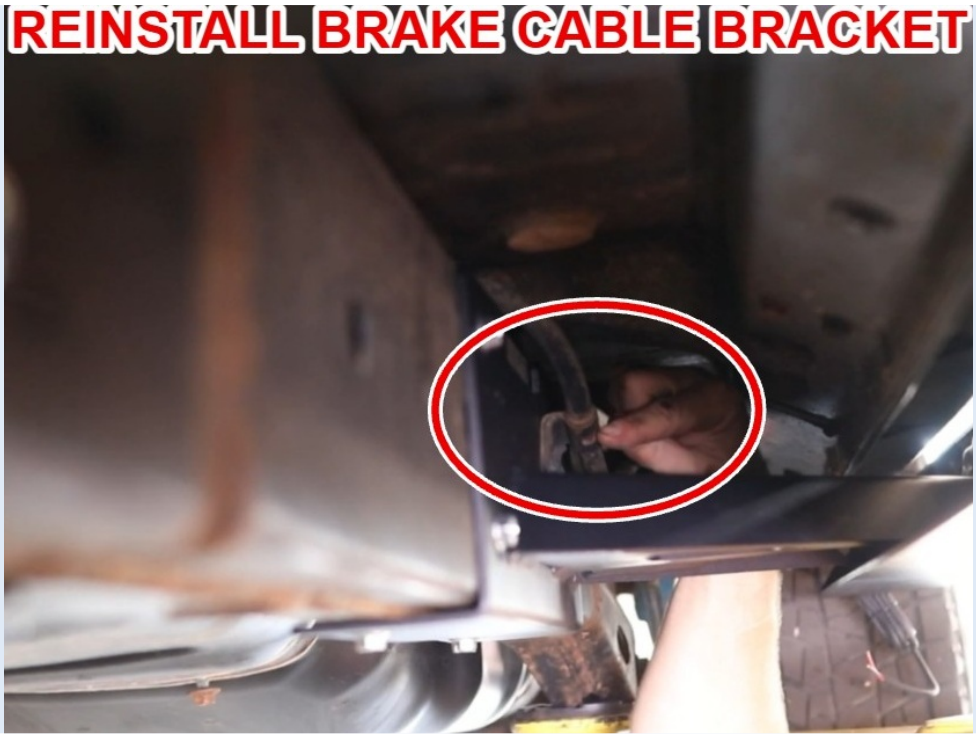

Push the slider up with a helper or a jack, then tighten the side mount hardware into the frame followed by the bottom hardware. Reinstall the parking brake cable bracket, nesting its tab down into the slider bracket.

Video timestamp: 7:20

Step 14 Passenger Side



The passenger side is the same except on the back of the front mount you will use three self-threading bolts, and you will drill all three bottom holes and install 3/8 in. bolts.

Video timestamp: 7:55

Step 15 Final Adjust and Wire Lights



Installing the LED lights using the provided button head bolts, washers, and lock nuts. Make sure the lights are centered in the hole and tighten them down using a 3mm allen and a 5/16" socket or wrench

Make any front to rear adjustment of the slider, then tighten it to the legs with a 5/16 in. Hex socket and Allen wrench. If a nut spins, reach through the hi-lift holes to hold it. Wire the rock lights to a switch or the dome light.

Video timestamp: 8:30

Step 16 Installation Complete



Congratulations, you have completed the install of your new FJ Cruiser Blitz Sliders! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com