Step 1 Jeep JK Lower Bumper Skid Install Instructions





Step by step on how to install the Jeep JK Lower Bumper Skid. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0331 BOLT PACK

JLLS-BP • Bill of materials (per 1 bag)

PIECES / BAG 8

BIN	QTY	PART #	DESCRIPTION
1	4 ×	040-0010	3/8-16 x 1 BUTTON HD SOC CAP SS
2	4 ×	040-0026	3/8-16 SERR FLANGE NUT HARD ZNC

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description


Check that you have all of the hardware shown before starting.

Step 4 Set Skid in Place



If your Jeep has a factory plastic skid, remove it first. Then set the provided skid on the frame, viewed from behind, and put the 3/8-16 button head bolts and flange nuts through the holes in the side of the skid. Start all the bolts and thread them in hand tight.

Step 5 Install Remaining Bolts

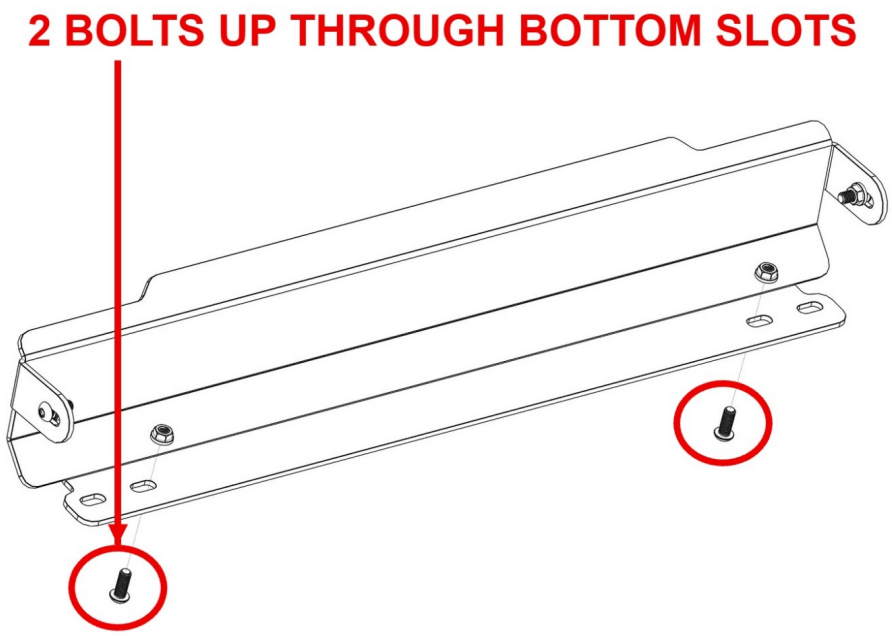

With the side bolts hand tight, install the 2 other 3/8-16 button heads and nuts up through the bottom of the skid into the frame, through the 2 slots. Use the inside slots for a 2012-18 Jeep and the outside slots for a 2007-11.

Step 6 Tighten Hardware



With the skid in place and all the hardware started, go around and tighten everything fully to finish the install.

Step 7 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Jeep JK Lower Bumper Skid is now complete. Enjoy!