






INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



1

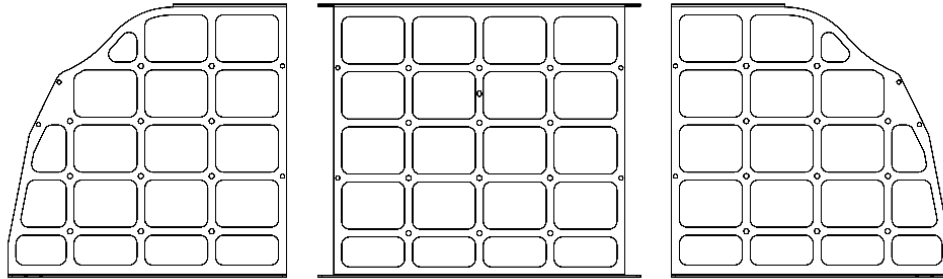

2

Included Hardware: (23x) 1/4"-20 x 1/2" Button Head Bolt | (23x) 1/4"-20 Serr. Flange Nut | (2x) 55mm long M6 Button Head Bolt | (2x) 1-1/2" Nylon Spacer

Included Parts: (1x) Center Panel | (L&R) Side Panel | (2x) Upper Bracket | (L&R) Lower Bracket



INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



3



Begin by connecting the three panels together as shown using the 1/4" hardware.

4



Inside the vehicle, mount the upper brackets to the molle panels as shown, again using the 1/4" hardware. If installing with our upper shelf, line the bracket up with the front face of the shelf. Tighten the bolts most of the way to hold it in place but keep in mind the bracket may need to be adjusted later. Repeat on the other side.



INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



Loosely mount the pet divider to the upper brackets as shown, again using the 1/4" hardware. Repeat on the other side.



If installing with our upper shelf, use the 1/4" hardware to mount the center section of the pet divider to the shelf. This will replace the front divider panel that comes with the shelf.



INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



7 Use a pry tool to remove the plastic cap located in the cavity for the cargo cover. Repeat on the other side.



8 Remove the bolt behind the plastic cap using a 10mm socket. Repeat on the other side.



INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



9



Prepare the lower brackets to install. Insert the long M6 bolt through the slot in the bottom of the bracket with on of the long spacers on the other side of the bracket as shown. Repeat for both brackets.

10



Install the lower brackets on the panel as well as to the threaded hole in the cargo cover cavity as shown. The spacer should be within the cavity, behind the bracket. The front flange of the bracket should sit on top of the lower flange of the pet divider. Repeat on the other side.



INSTALL DOC - 6G 4Runner Pet Divider

Feedback?



11

Make sure all bolts are tightened to complete the install.

12

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184



**SQUATCH
PROOF**

**FAT
AMERICAN MFG.**