Step 1 Jeep JL Air Compressor Mount Install Instructions





Step by step on how to install the Jeep JL Air Compressor Mount. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts




Check that you have all of the parts shown before starting.

Step 3 Included Hardware

Check that you have all of the hardware below before starting:


- 1/4-20 x 3/4 in button head bolts
- 1/4 in washers
- Serrated flange nuts
- M8 washers
- Nylon-insert nuts
- T-nuts and 3/8 in button head bolts (light bar option)

Step 4 Mount Compressor to Bracket

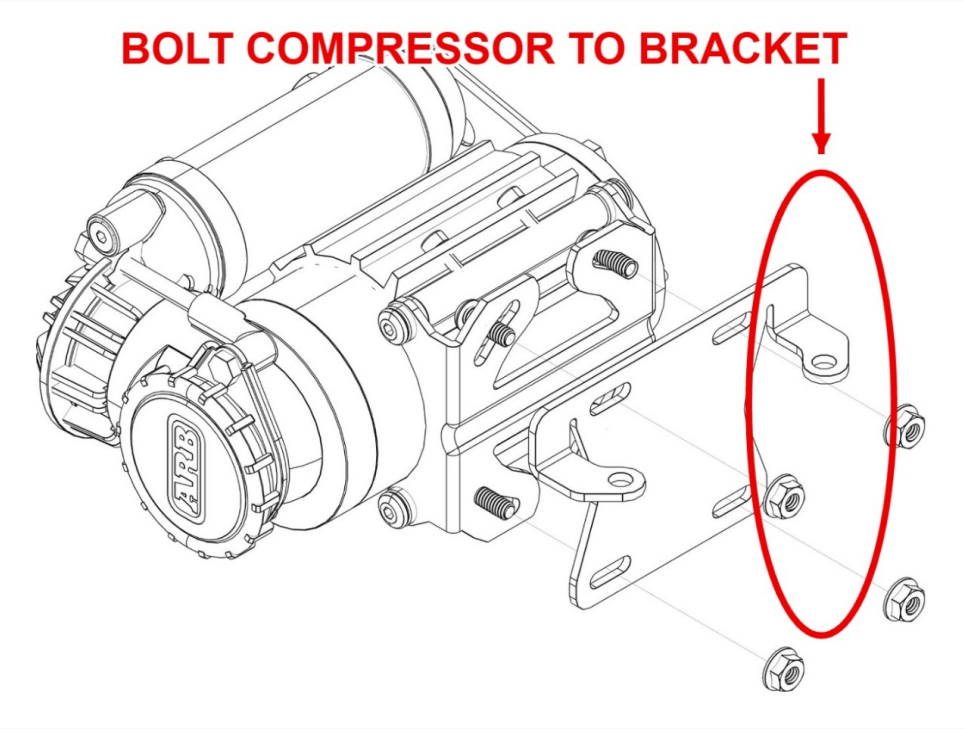

Bolt your compressor to the provided bracket with 4 1/4 in nuts and bolts, as shown. Some compressors have different clearances, so you may need to flip the nuts and bolts around to reach and tighten them from the inside.

Step 5 Install Bracket

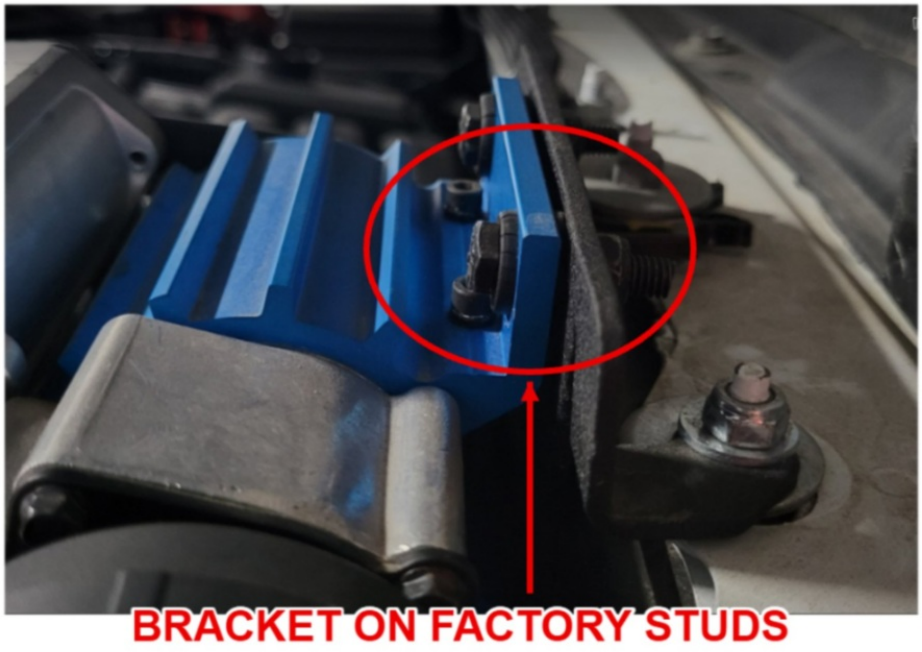

Open the hood and remove the 2 factory nuts from the studs at the driver side corner of the engine bay. Set the bracket over the studs and secure it with the nuts you just removed.

Step 6 Wire Compressor



With the bracket secure, the install is done. Route and wire the compressor however you like to make it operable.

Step 7 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Jeep JL Air Compressor Mount is now complete. Enjoy!