Step 1 Roof Rack Side Accessory Panel Install





Step by step on how to install the Roof Rack Side Accessory Panel. Please read all steps carefully before starting the install.


Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Included Hardware

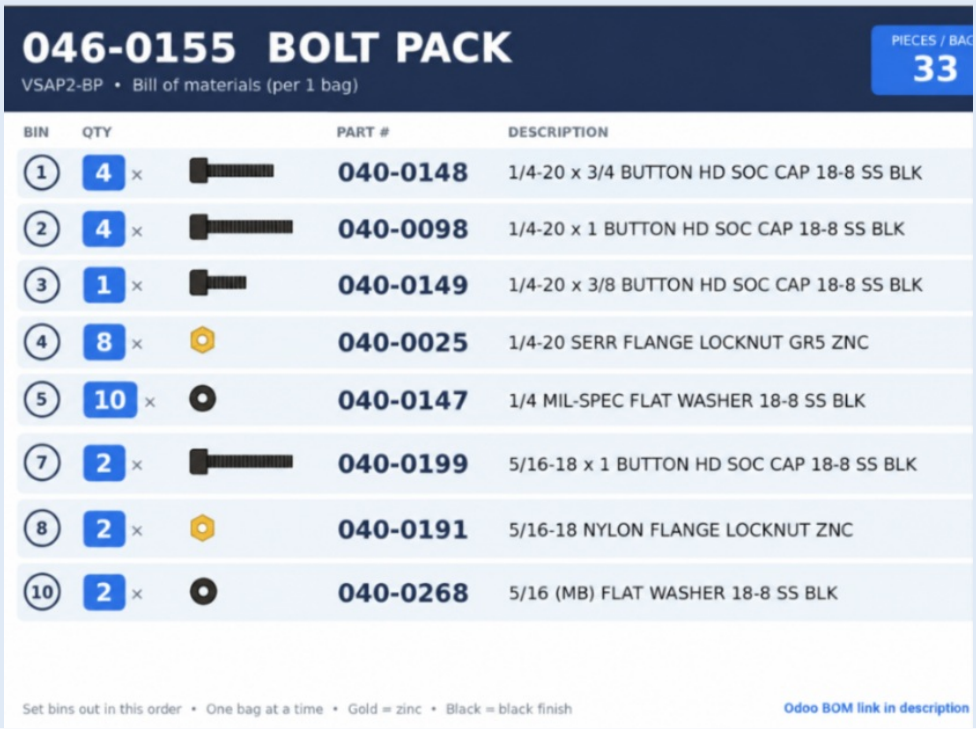

046-0155 BOLT PACK

VSAP2-BP • Bill of materials (per 1 bag)

PIECES / BAG: 33


BIN	QTY	PART #	DESCRIPTION
1	4 ×	040-0148	1/4-20 x 3/4 BUTTON HD SOC CAP 18-8 SS BLK
2	4 ×	040-0098	1/4-20 x 1 BUTTON HD SOC CAP 18-8 SS BLK
3	1 ×	040-0149	1/4-20 x 3/8 BUTTON HD SOC CAP 18-8 SS BLK
4	8 ×	040-0025	1/4-20 SERR FLANGE LOCKNUT GR5 ZNC
5	10 ×	040-0147	1/4 MIL-SPEC FLAT WASHER 18-8 SS BLK
7	2 ×	040-0199	5/16-18 x 1 BUTTON HD SOC CAP 18-8 SS BLK
8	2 ×	040-0191	5/16-18 NYLON FLANGE LOCKNUT ZNC
10	2 ×	040-0268	5/16 (MB) FLAT WASHER 18-8 SS BLK

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description


Check that you have all of the hardware shown before starting.

Step 4 Install Mounting Bracket

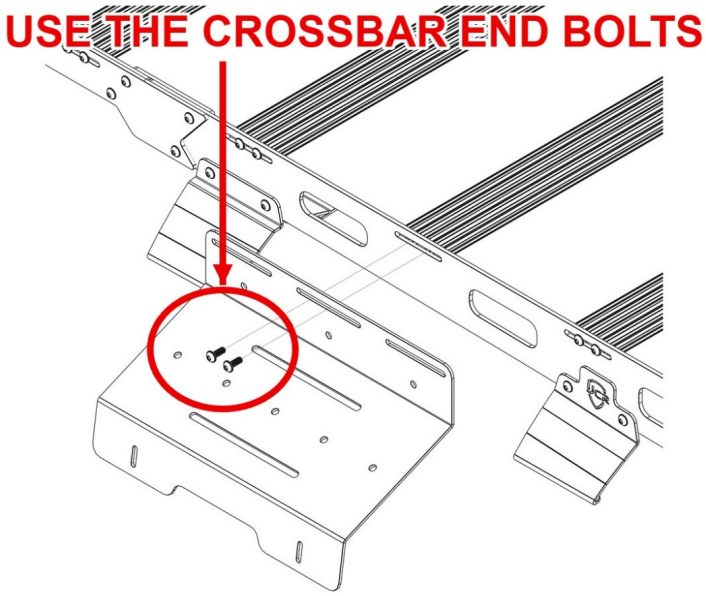


Loosely install the mounting bracket on your roof rack. Pick the crossbars that put the panel over the rear window. Remove the bolts from one end of those crossbars and use them to mount the bracket to the side of the rack and back into the bars. Bronco 4-door: center slot to the 2nd crossbar from the rear. 2-door: outer slots to the 2nd and 3rd.

Step 5 Mount Suction Cup

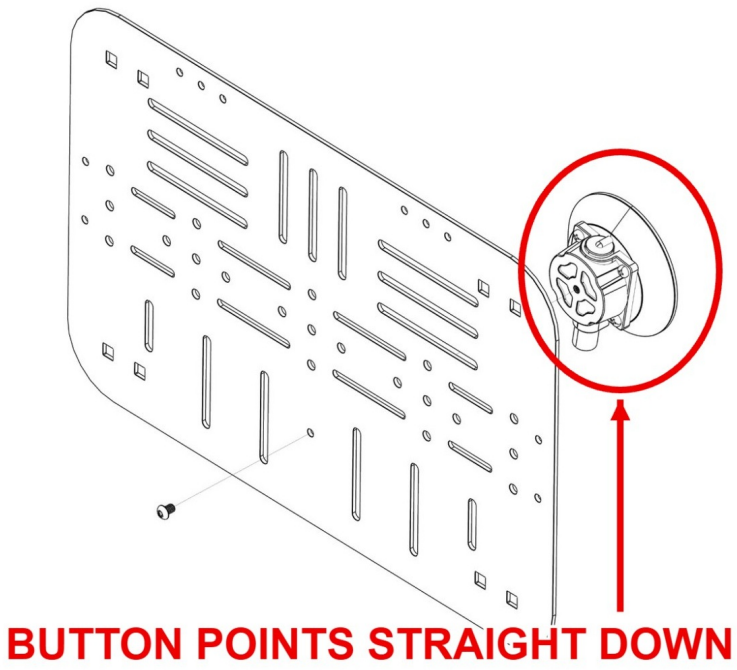


Mount the suction cup on the back of the panel with the 1/4-20 x 3/8 in bolt. Make sure the button points straight down.

Step 6 Mount Panel

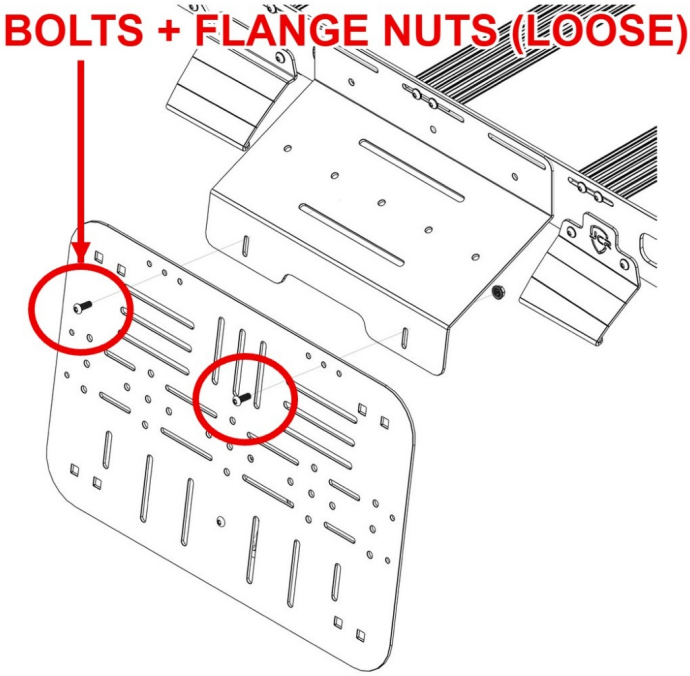


Loosely mount the panel to the outside of the mounting bracket with the 1/4-20 x 3/4 in bolts and 1/4-20 serrated flange nuts.

Step 7 Adjust Panel

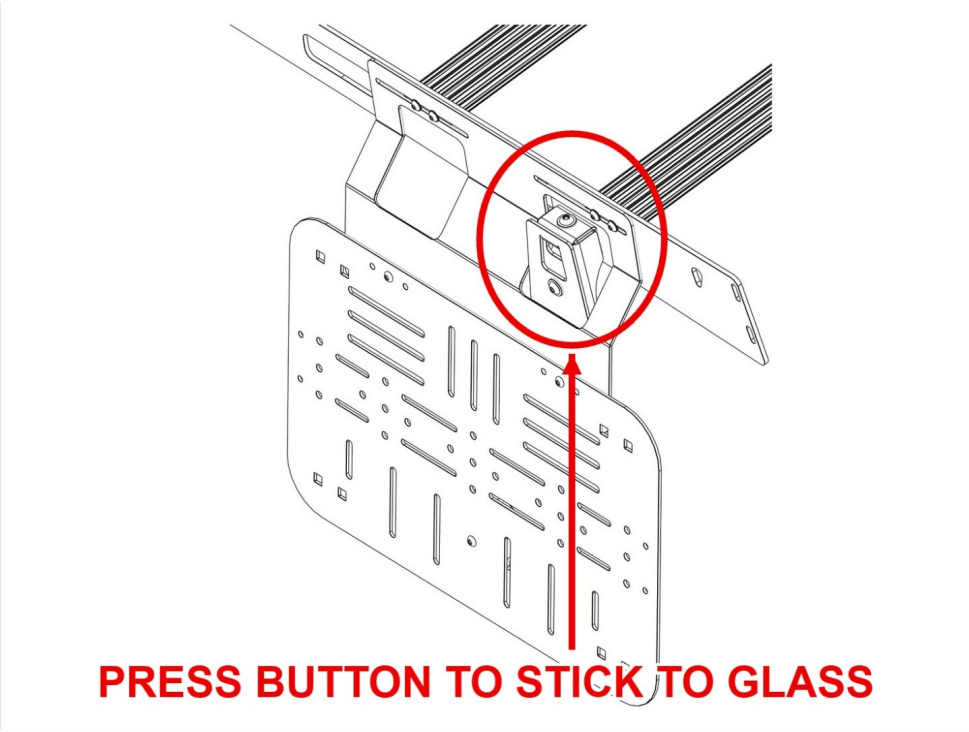

Adjust the mounting bracket until the panel is centered in the window. Push the bottom against the window, then press the button on the bottom of the suction cup to stick it to the glass. Now tighten all the hardware.

Step 8 Clamp Bracket to Rack

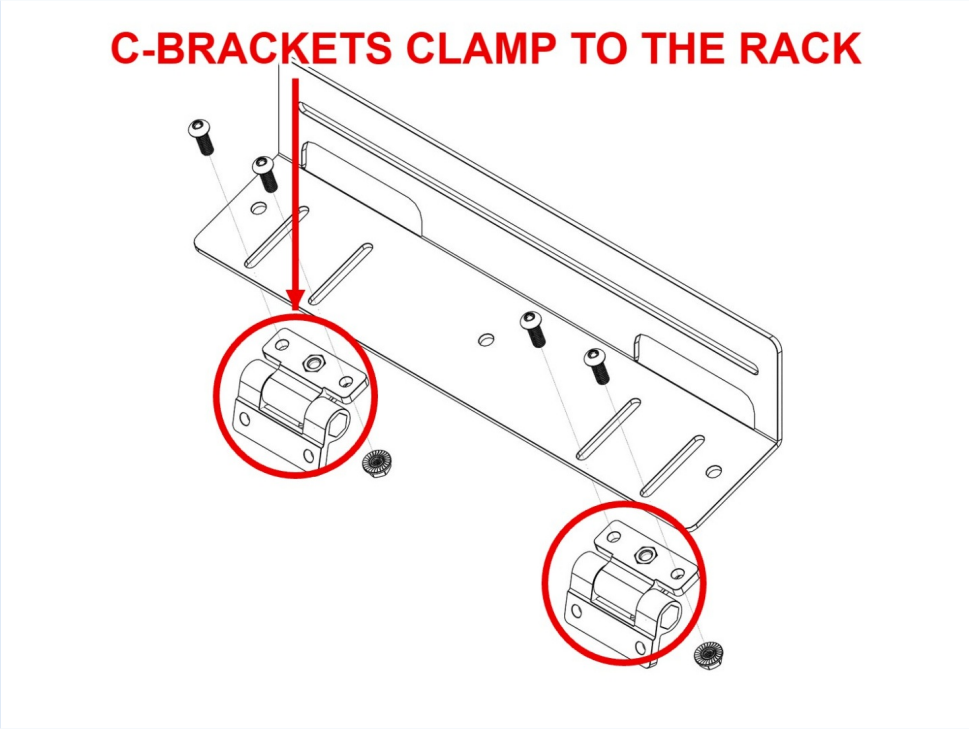

Clamp the bottom of the mounting bracket to the rack with the small C-shaped brackets. Bolt each one inside the side rail through a bracket hole that lines up with a rack cutout, using a 5/16-18 x 1 in bolt and flanged nylock nut. Keep the 90 degree bend toward the top. Use two brackets on the 4-door, one on the 2-door. JL/JK and XJ kits follow the same steps.

Step 9 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Roof Rack Side Accessory Panel is now complete. Enjoy!