INST: UNI-SJC-PC

Feedback?

1




Using the 1/4-20 button heads, washers and flange nuts, loosely fasten to front and back pieces to the bottom. Ensure that the flanges on the bottom are pointing downward.

2




Using (5) 1/4-20 button heads, washers and flange nuts per side, loosely install the side panels as shown. Note: The carriage bolt tab should be located on the left (pointing inward), as shown above with the green circle.

3

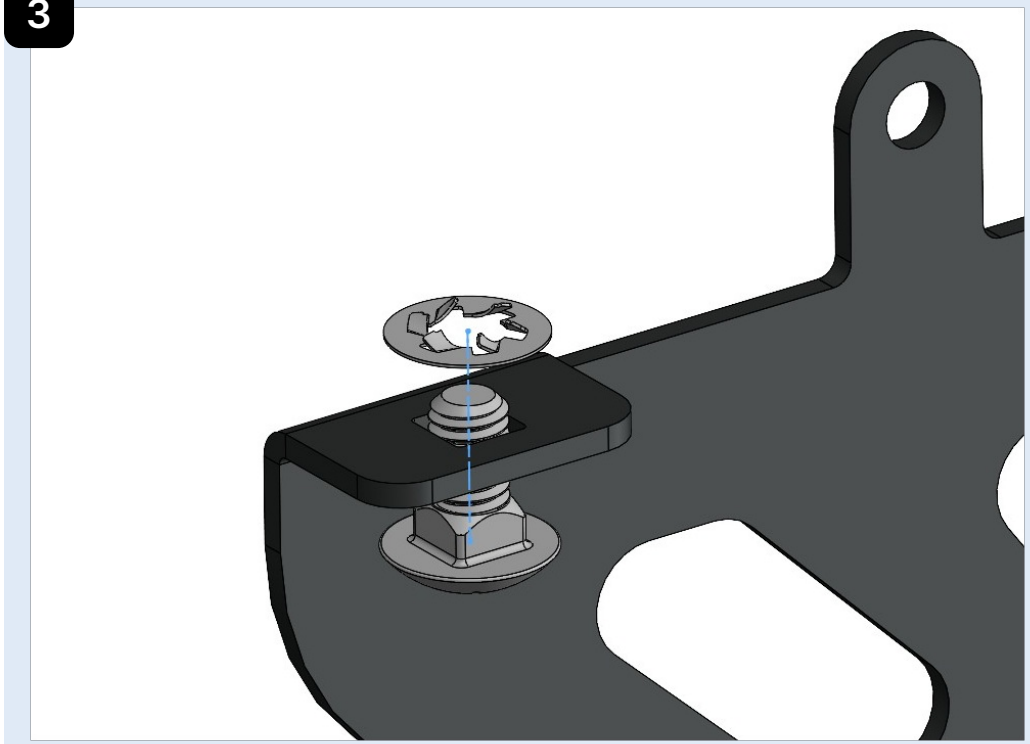

Install the carriage bolt pointing up through the divider as shown. Press the push-nut onto the carriage bolt threads to retain the bolt in the upmost position.

4

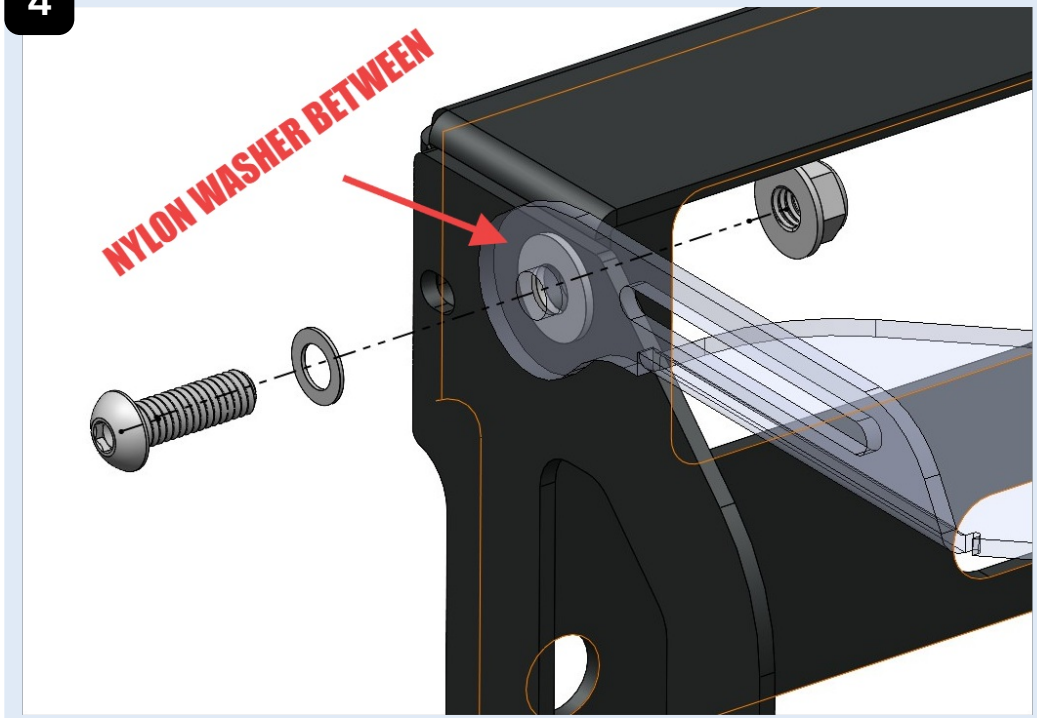

Install the lid using the provided 5/16-18 button head, washer, and nylock nut. Be sure that the nylon washer is between the lid and the main assembly (to prevent metal on metal rubbing with the door movement).

5 Tighten all hardware. Your installation is complete!