




INST: VPALMP-4G-PC

Scan To Edit



1 Remove your factory panels using a T30 torx.

2

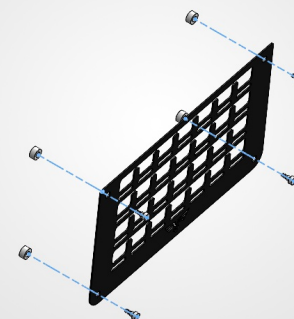

Using your factory M6 hardware, fasten the panel into place using the provided spacers as shown.

3

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com
269-353-1184



**SQUATCH
PROOF**

**FAT
AMERICAN MFG.**