Step 1 270 Degree Awning Mounts Install Instructions





Step by step on how to install the 270 Degree Awning Mounts. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0157 BOLT PACK

VRKAWN270-BP • Bill of materials (per 1 bag)

PIECES / BAG 28


BIN	QTY	PART #	DESCRIPTION
1	8 ×	040-0157	1/4-20 x 3/4 T-SLOT STUD (SLIDE-IN)
2	8 ×	040-0190	1/4-20 NYLON FLANGE LOCKNUT ZNC
3	4 ×	040-0196	5/16-18 x 1-1/2 HEX CAP 18-8 SS FULL THRD
4	4 ×	040-0012	1/4 USS FLAT WASHER ZNC
5	4 ×	040-0191	5/16-18 NYLON FLANGE LOCKNUT ZNC

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting.

Step 4 Choose Install Order

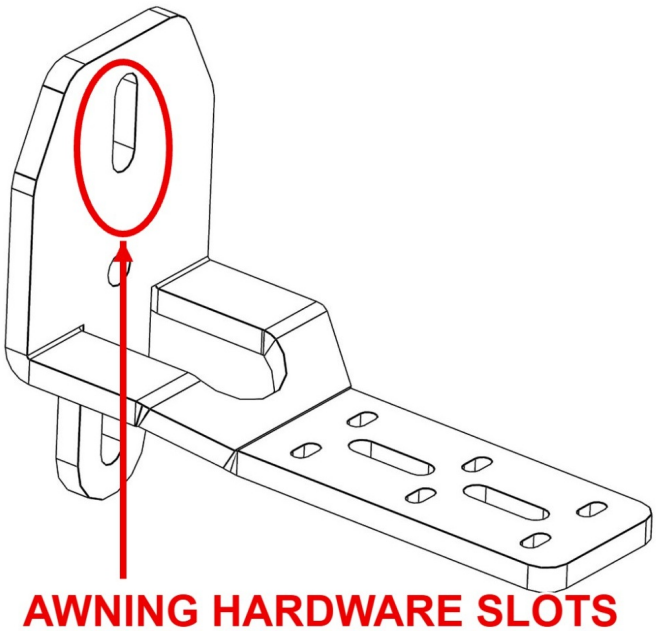


Choose your order: loosely install the 270 brackets on your awning first with the awning maker hardware, leaving room for side-to-side adjustment, or loosely mount the brackets to your rack first and lift the awning up afterward. Kit hardware: 8 T-slot studs, 8 flange locknuts, 4 hex bolts, 4 flat washers, 4 flange locknuts.

Step 5 Mount Awning to Brackets




Awning first: use the slots on the front face of the brackets for your awning hardware, as shown. Leave them a little loose so you keep vertical adjustment when positioning the awning on the rack.

Step 6 Mount to Crossbars

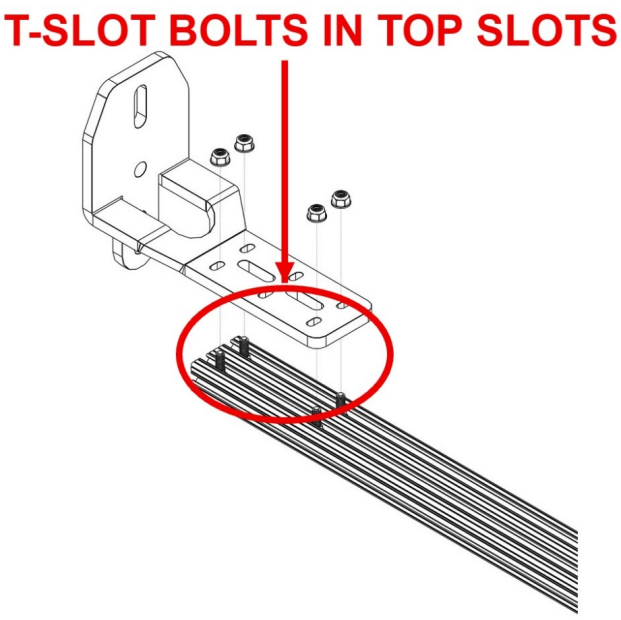

Mounting to crossbars: measure your awning against the rack to find the best bracket spots. Slide the 1/4-20 T-slot bolts into the top slots of the crossbars, set a bracket over them on the outside slots, and secure with the 1/4-20 locknuts. Repeat on the opposite side.

Step 7 Mount to Bed Rack

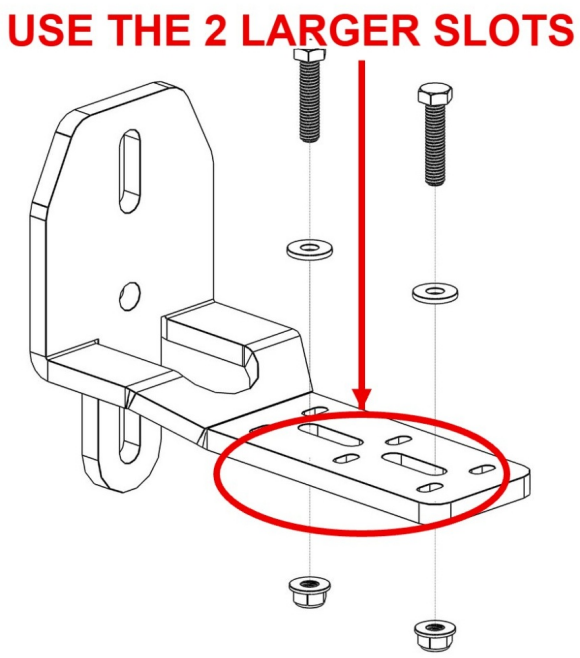

Mounting to a bed rack: use the 2 larger slots on the top face of the brackets with the supplied 5/16-18 x 1-1/2 inch hex bolts, flat washers and flange nuts, as shown.

Step 8 Mount Awning



With the brackets on your rack, mount the awning to them as in the awning-first step. Make final adjustments for clearance to the vehicle, rack and accessories, then go around and tighten all hardware to finish.

Step 9 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the 270 Degree Awning Mounts is now complete. Enjoy!