



Step 1 Hardware:


- A. (x12) M8 Flat Washers
- B. (x4) 1/4" Flat Washers
- C. (X8) Thick 1/4" Flat Washers
- D. (x4) 1/4"-20 x 3/4" Button Head Bolts
- E. (x4) 1/4"-20 Serrated Flange Nuts
- F. (x12) 5/16"-18 Serrated Flange Nuts
- G. (x12) 5/16"-18 x 3/4" Button Head Bolts
- H. (x8) M6 x 1.0 x 20mm Button Head Bolts

***Some of our products use universal bolt packs; not all included hardware may be used.



Step 2 Don't Mix Up "D" & "H" Hardware:

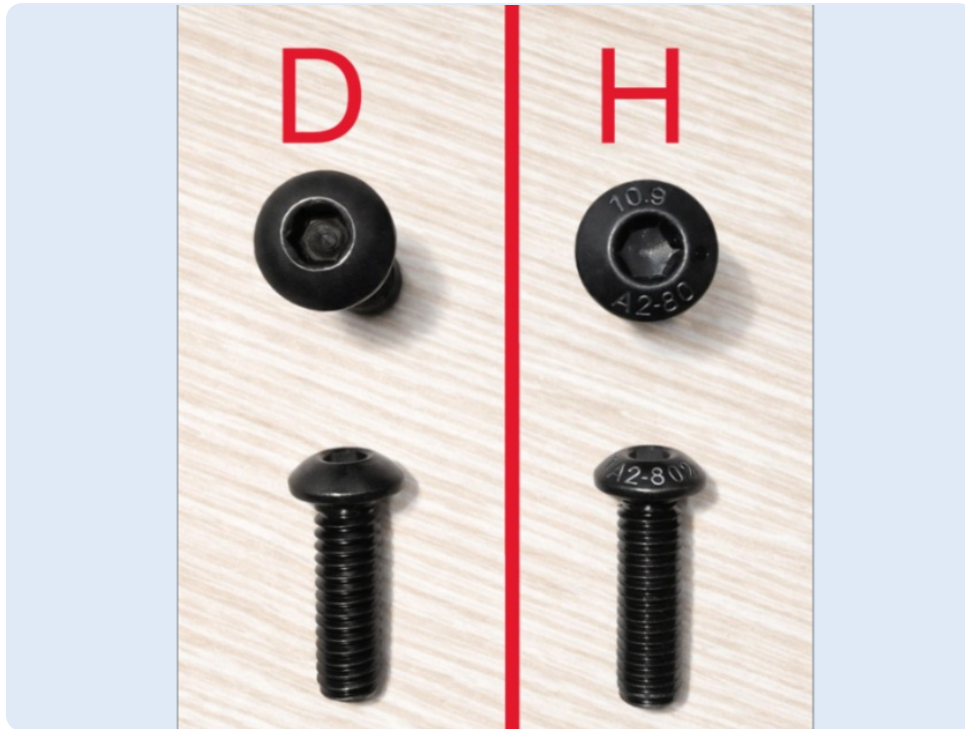

Identify "H" hardware before install - they are the only bolts with writing on the bolt head.

Step 3 Required Tools:



4mm Allen



5/32" Allen



3/16" Allen



1/2" Wrench or Socket



7/16" Wrench or Socket



10mm Wrench or Socket




Step 4 Included Parts:



- A. Front Fairing
- B. Side Rails (L&R)
- C. (x3) Cross Bars

Step 5 Start Install:

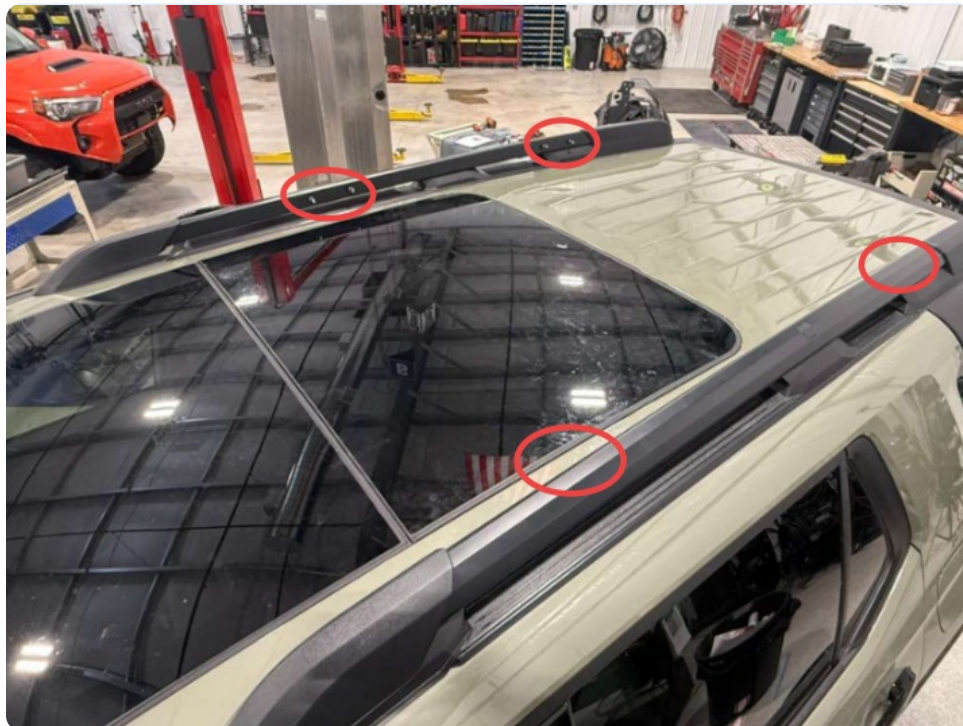

Remove the factory (8) bolts shown above using a 10mm wrench. (If applicable)


**Step 6**

Install the supplied side rails onto the inside of the factory risers using the factory hardware. Be sure that the rails are pointing in toward the center of the vehicle, **the victory logo will be towards the back of the vehicle**. Leave these fasteners finger tight for now.

NOTE: If your vehicle did not come with factory hardware installed, use the supplied M6x1x20mm button heads and 1/4" USS Flat washers.



Step 7

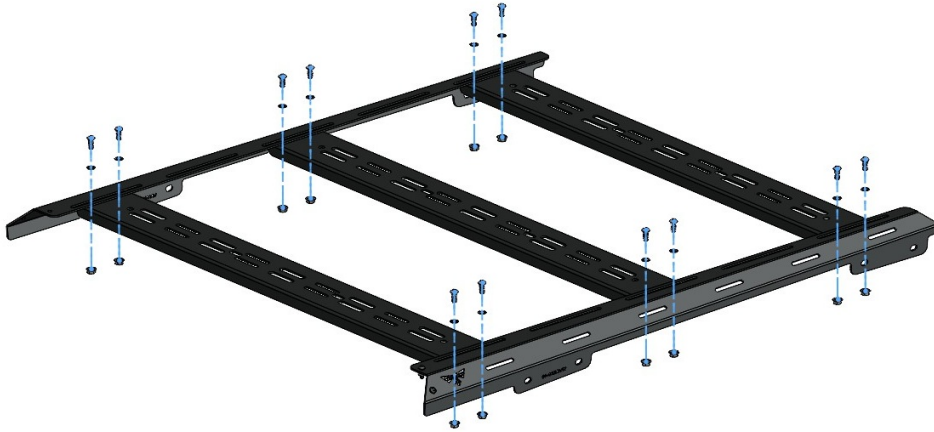

Using (4) 5/16"-18 button heads, washers and flange nuts per cross bar, install the (3) included crossbars in your preferred configuration.

Step 8



Using (4) of the 1/4"-20 button heads, washers, and flange nuts, fasten the front fairing to the side rails as shown.

**Step 9**

Go back and fully tighten all hardware. Your installation is complete!

Step 10

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184



**SQUATCH
PROOF**

**FAT
AMERICAN MFG.**