Step 1 Jeep JK Door MOLLE Panels Install Instructions






Step by step on how to install the Jeep JK Door MOLLE Panels. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts

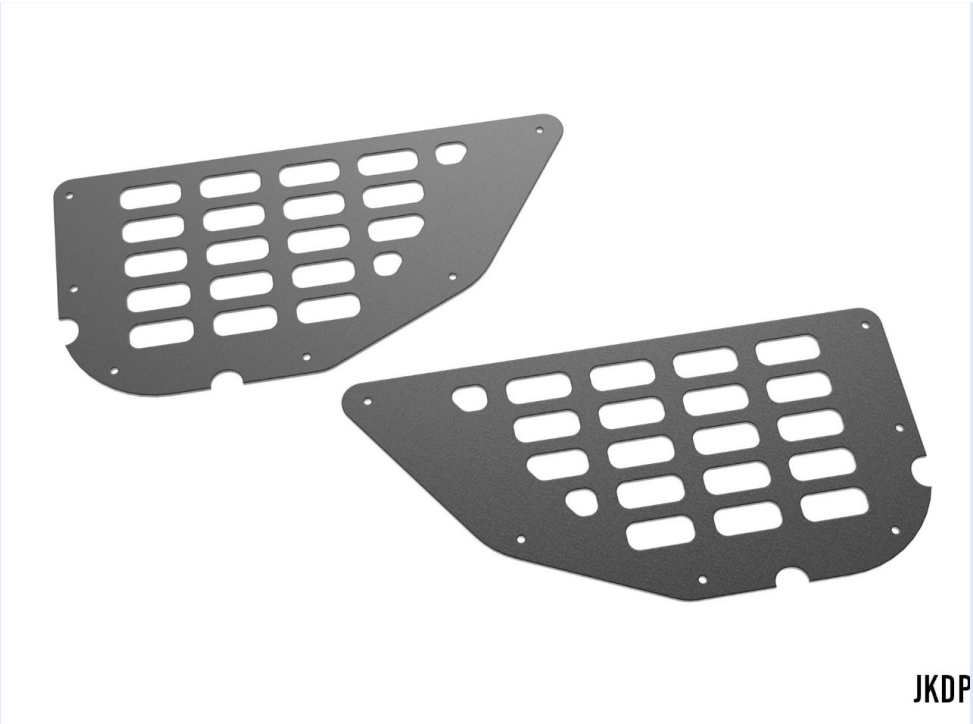

Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0044 BOLT PACK

VCC-BP • Bill of materials (per 1 bag)

PIECES / BAG 16


BIN	QTY	PART #	DESCRIPTION
1	8 ×	040-0132	#8 x 3/4 PHILLIPS ROUND HD SCREW SS BLK
2	8 ×	040-0130	NYLON SPACER 1/2 OD x 3/8 L BLK

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description


Check that you have all of the hardware shown before starting.

Step 4 Remove Pocket Net

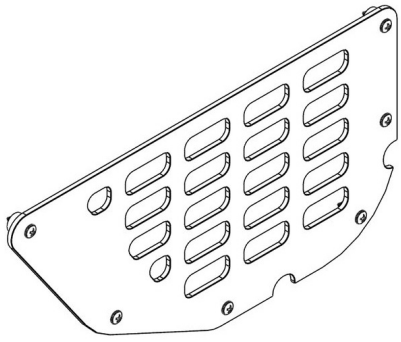

Decide whether to cut the net out of the factory door pocket. If you do, cut the netting as close to the edge as possible and pull it out of the door.


Step 5 Line Up Panel

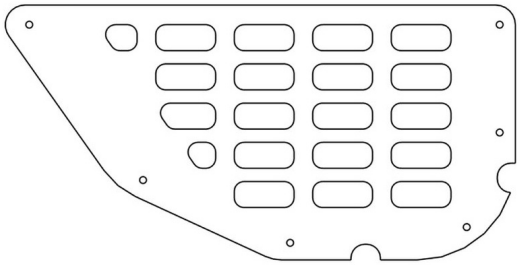




Place the panel over the frame of the pocket and line the panel up with the screw cutouts in the door (rear door: line it up with the pocket trim). Once it sits where you like it, mark the door through each hole with an awl so the screws have a starting point.

Step 6 Pre-Thread Screws

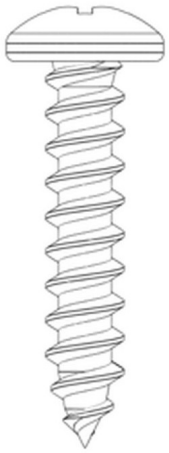


Thread each provided screw into its marked spot with a screwdriver, then back it out. This pre-starts the holes and makes the panel easier to install.

Step 7 Install Panel

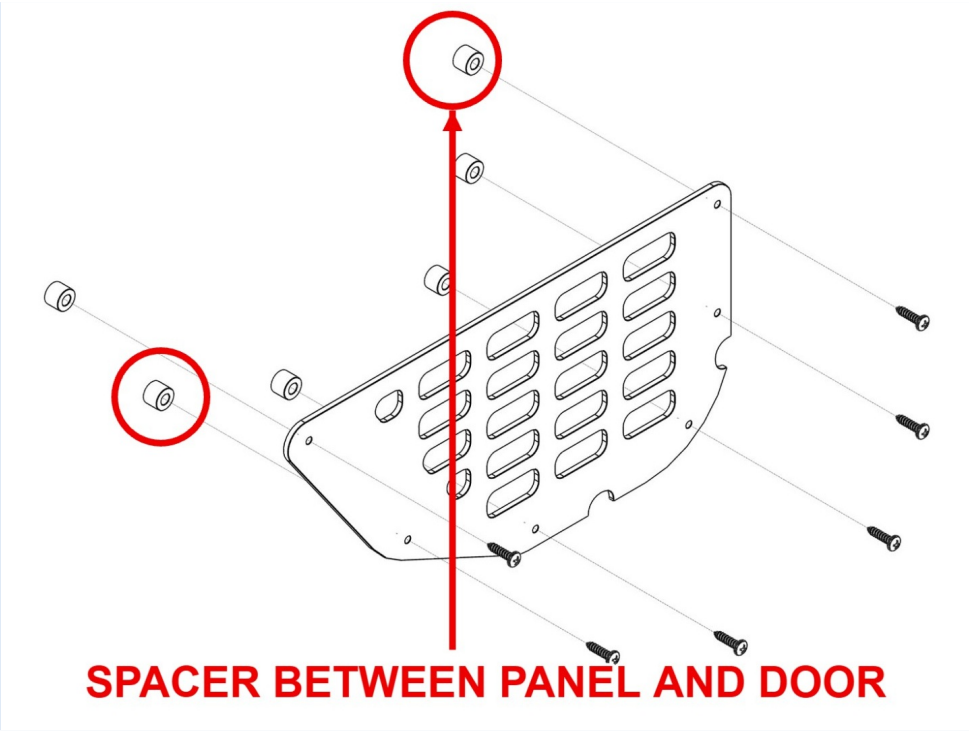

Install the panel with the provided screws, placing a spacer between the panel and the door at each screw. The kit includes 12 spacers and 12 screws for the front door, or 8 of each for the rear door.

Step 8 Installation Complete

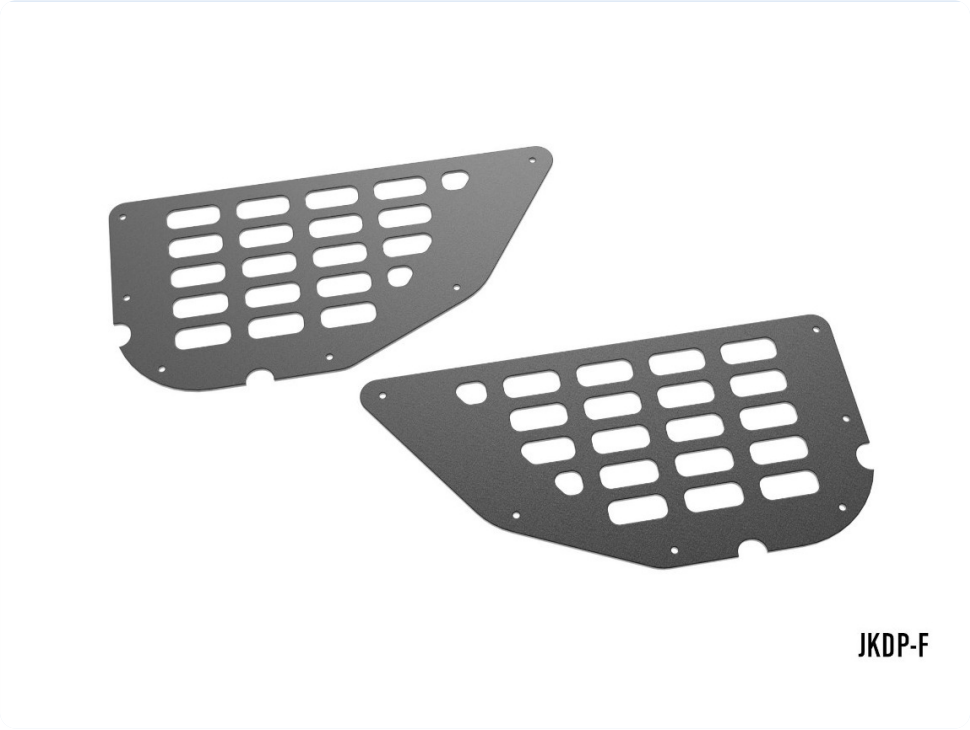



Confirm all hardware is tightened. Congrats! Your installation of the Jeep JK Door MOLLE Panels is now complete. Enjoy!