




1

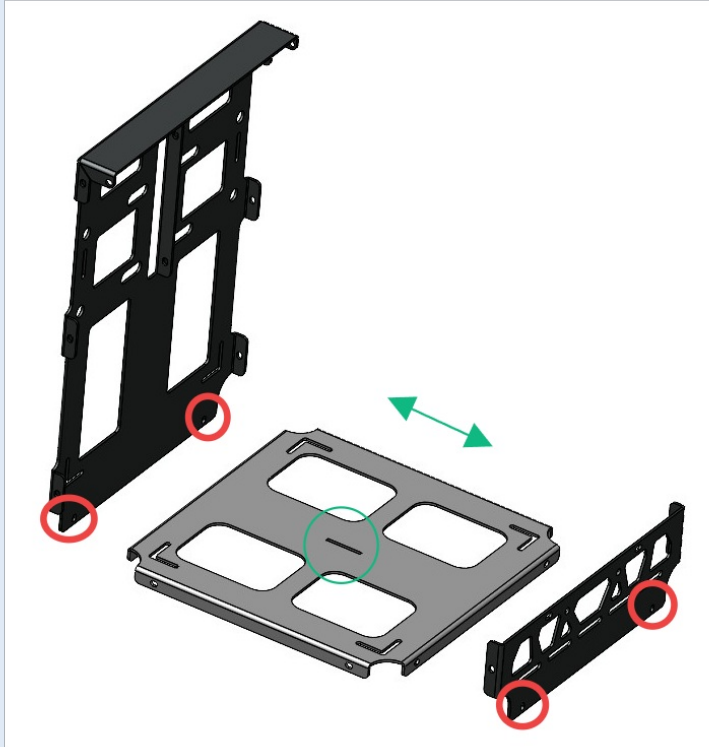

Using the 1/4-20 button heads, washers and flange nuts, loosely fasten to front and back pieces to the bottom. **Ensure that the flanges on the bottom are pointing down and the middle divider slot is pointing forward to back.**


2



Using (5) 1/4-20 button heads, washers and flange nuts per side, loosely install the side panels as shown.




3

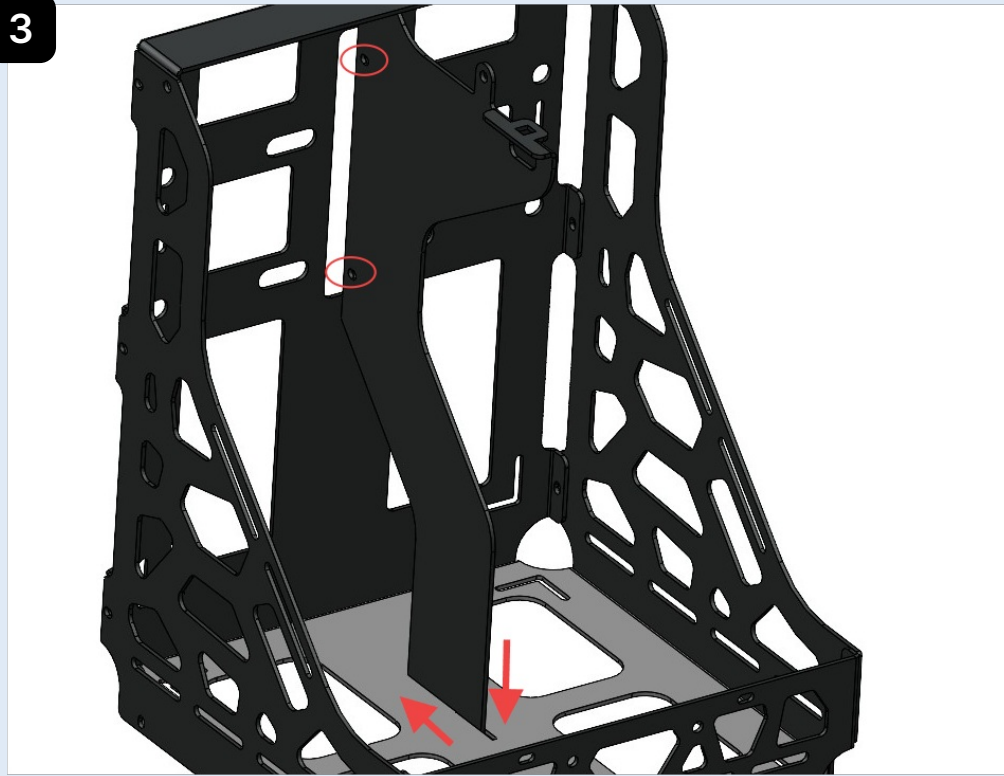

Install the center divider as shown, by inserting the tab into the bottom, and then sliding it backwards to lock in the tab. With tab secure, install 1/4-20 button heads, washers, and flange nuts in the two locations shown above.


4

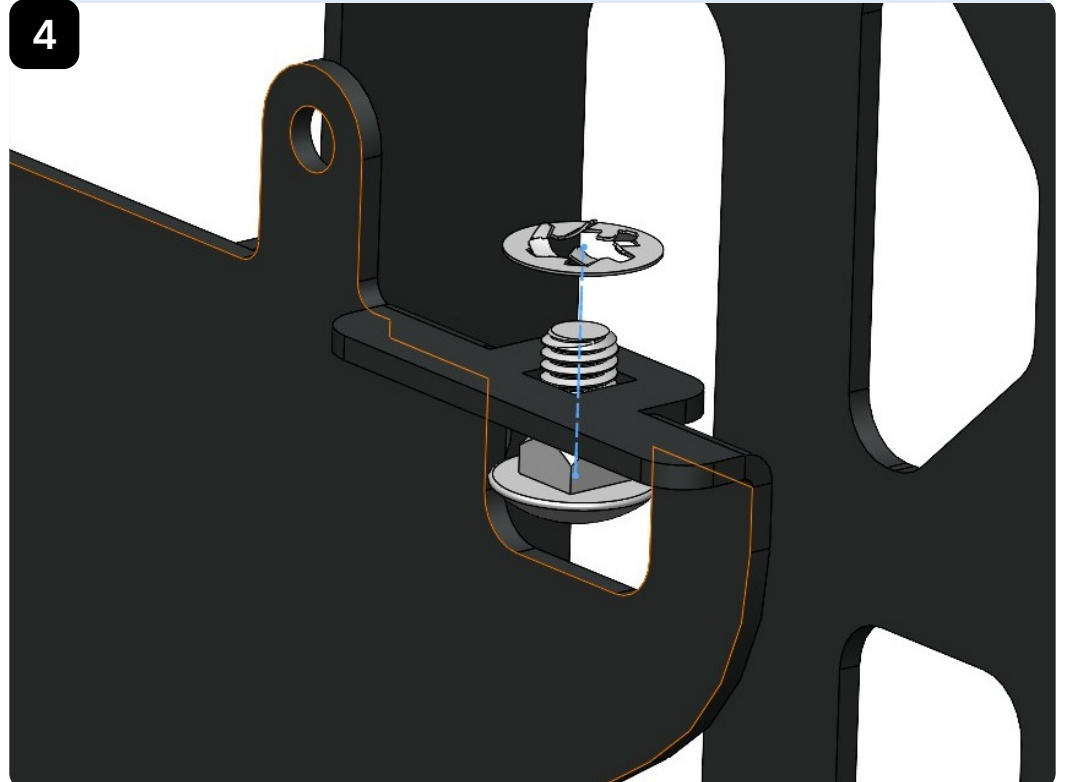

Install the carriage bolt pointing up through the divider as shown. Press the push-nut onto the carriage bolt threads to retain the bolt in the upmost position.



5

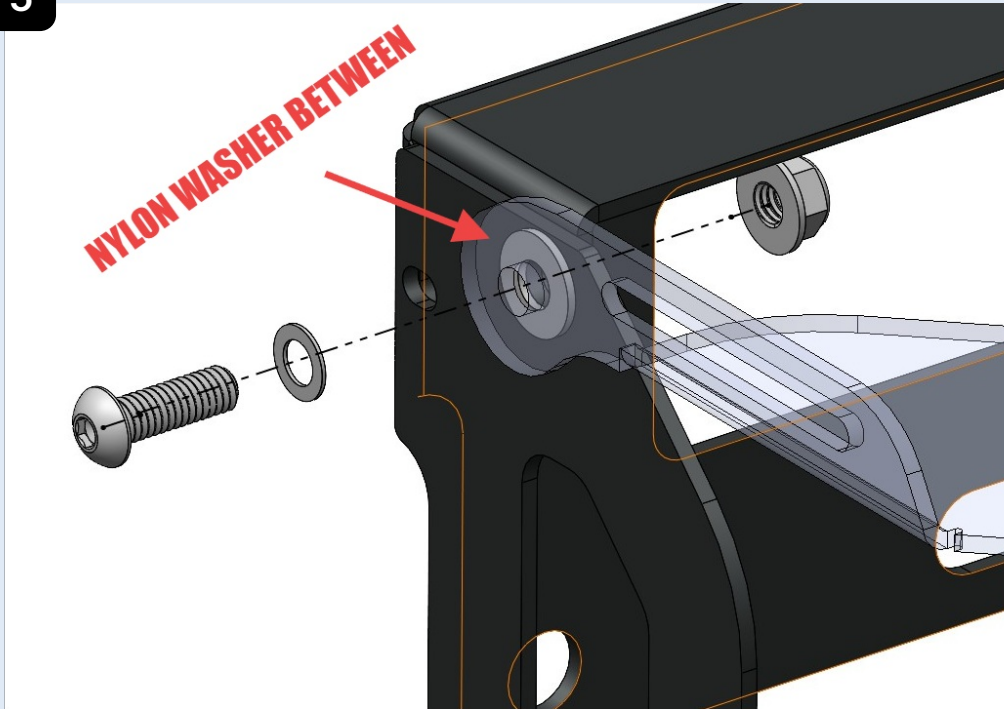

Install the lid using the provided 5/16-18 button head, washer, and flanged nylock nut. Be sure that the nylon washer is between the lid and the main assembly (to prevent metal on metal rubbing with the door movement).

6

Tighten all hardware. Your installation is complete!