




1



To mark holes, hold molle panel ~1/4" above the panel seam on each side of the center console (as shown).

2

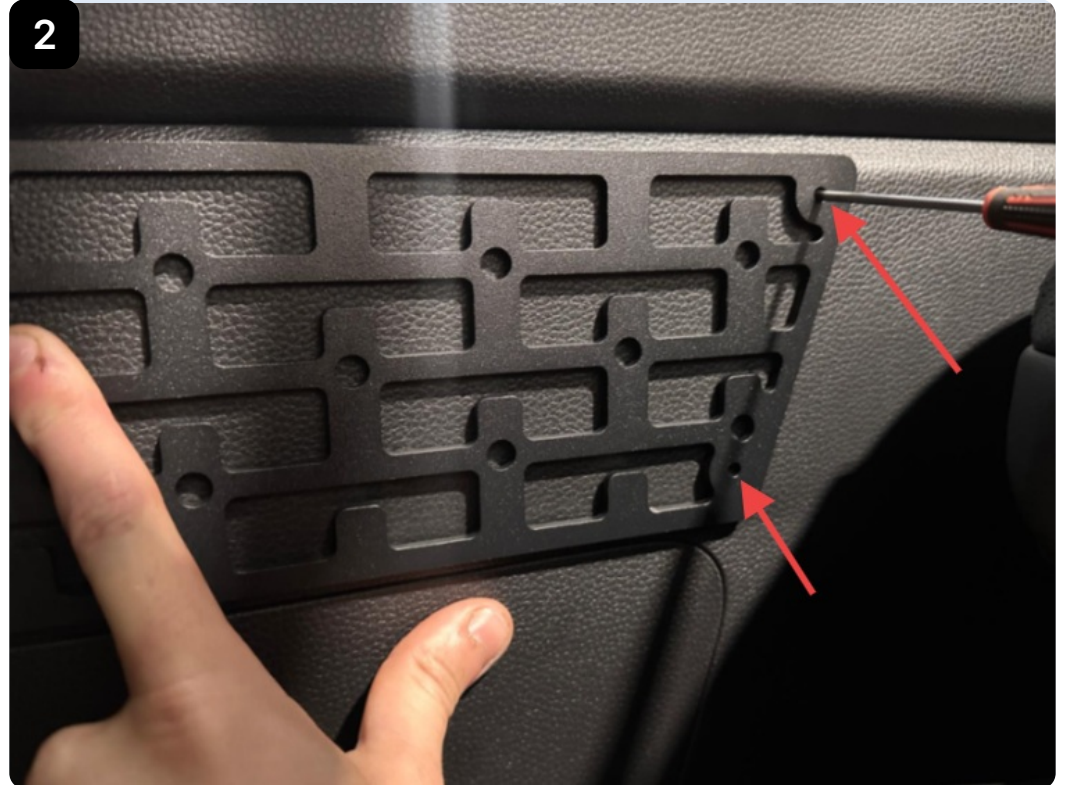

Press a pick or screwdriver through 4 holes per panel to mark drilling spots on the plastic.




3



Using a 1/16" drill bit, drill JUST through the plastic on your 4 marks.
Warning: drilling too deep may cause damage to the components hidden behind the plastic.

4

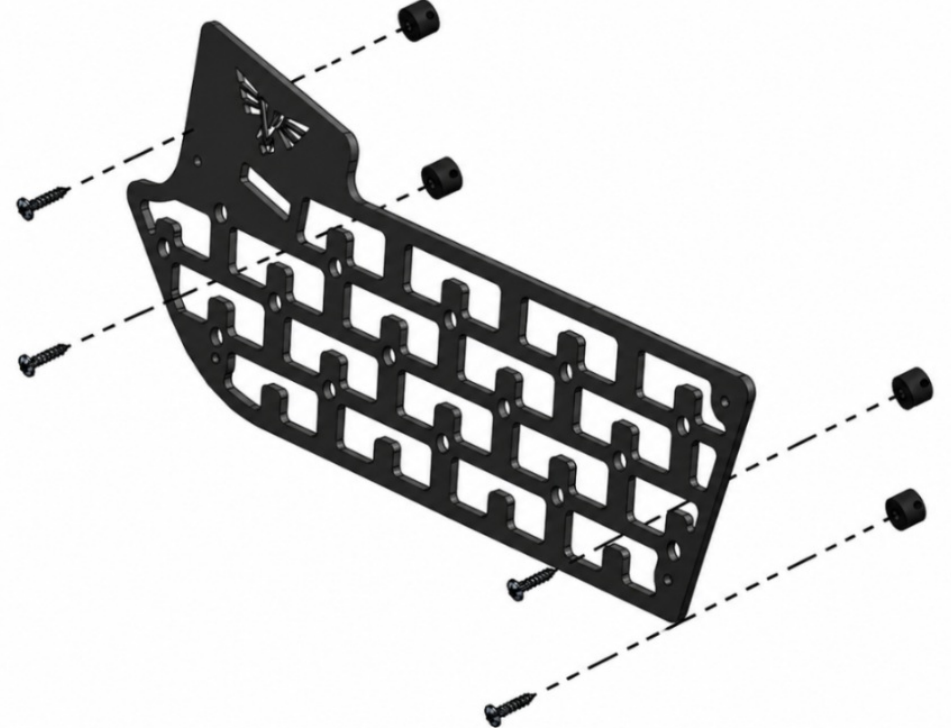

Install the panel to your drilled holes as shown. Be sure to place the spacers between the panel and the console. **WARNING: Do not overtighten the screws. We recommend using a regular P2 screwdriver to install - not a power drill. These screws need to be snug, not tight.**



INST: VPACC-4G-PC

Feedback?



- 5** Repeat on other side of console. Note: The panel on the passenger side should be lined up with the curve on the console, and will sit ~1" further from the dash than the driver side.

6 **Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184



**SQUATCH
PROOF**

FAT
AMERICAN MFG.