
INST: VPARMP-4G-PC

Feedback?

1

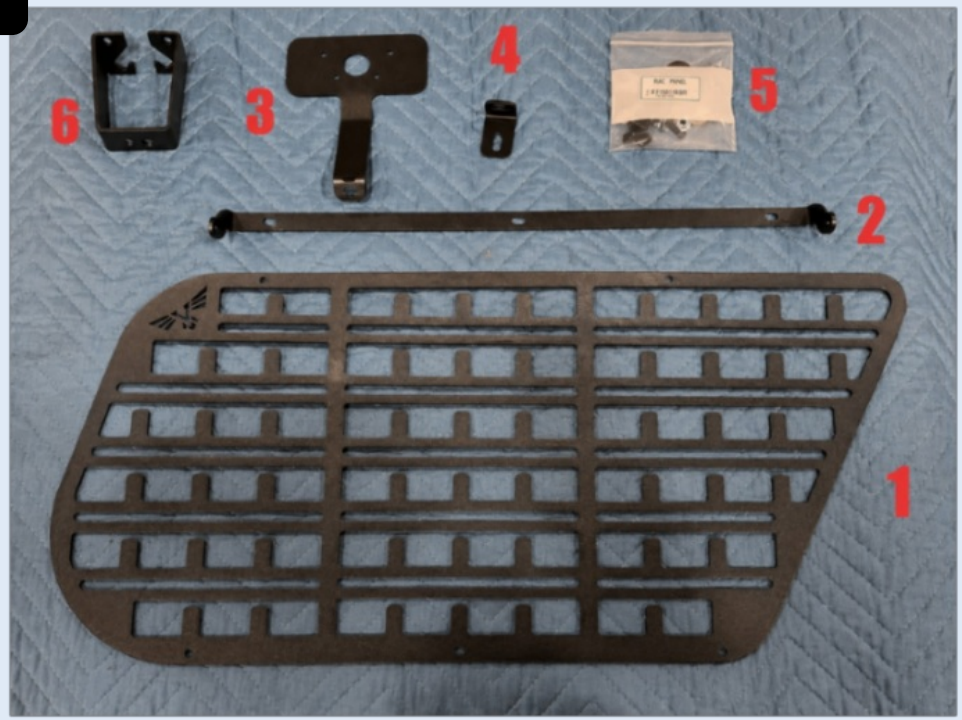

Included parts: (1) Molle panel, (2) Bottom mounting bracket, (3) Top mounting bracket (front), (4) Top mounting bracket (Rear), (5) Hardware pack (046-0224),(6) Upper inner mounting bracket

2



Use a small screwdriver or pry tool to remove the factory trim pieces shown above. Once they are pried loose, they can be removed fully by pulling the plastic tethers out of their retainers.

3




Using an 8mm socket with an extension, carefully remove the bolt and bracket shown above (if equipped). In this step, leave the socket on the bolt head and remove the bracket and bolt together. **TAKE CARE TO NOT DROP THE BOLT INTO THE HEADLINER.**

4



Using a 10mm socket remove the factory bolt from the upper rear mount, as shown.

5

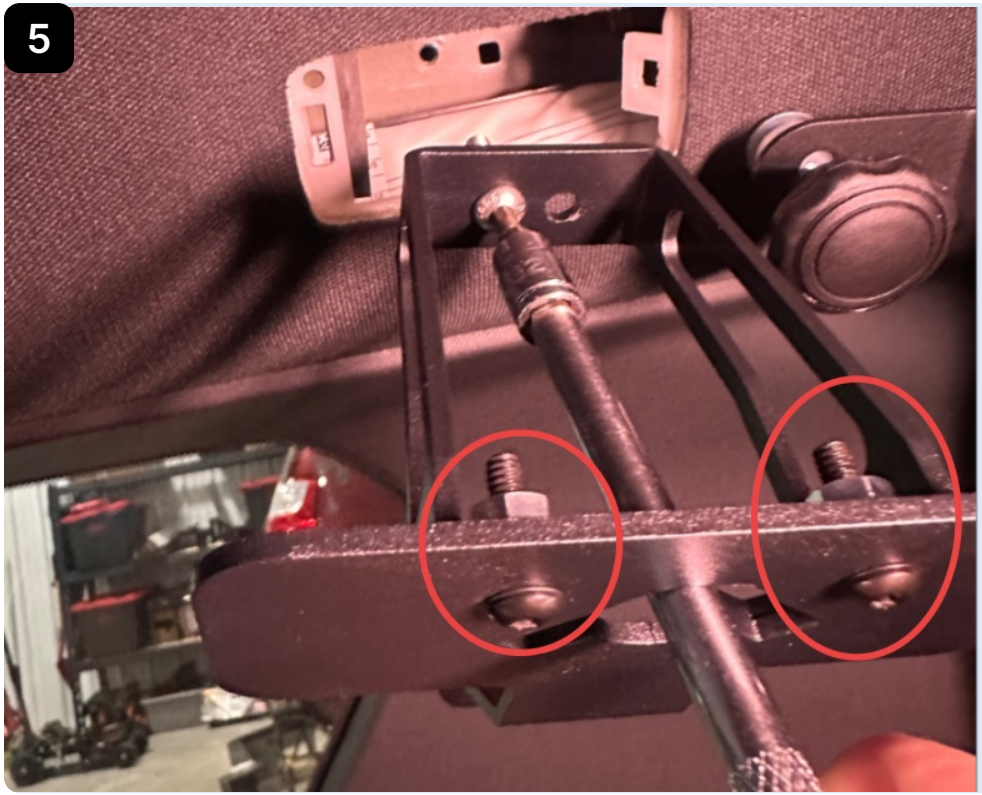


Using the (2) supplied 10-24 button heads, washers, and flange nuts, fasten the supplied bracket to the factory bracket as shown. Snug these bolts up by hand, we will fully tighten in a later step. **NOTE: These are the (2) skinnier bolts and smaller black washers in the bolt pack. (#10-24 x 3/4" button head).**

6



Install the assembly using an extension and socket as shown. If your vehicle did not have a bolt here, you can use the bolt you removed in step 4. Guide the bolt with the bracket into place as shown so you do not drop the hardware into the headliner. Make sure use the hole closest to the rear of the vehicle. **Leave this hand tight only, we will tighten fully in a later step.**

7

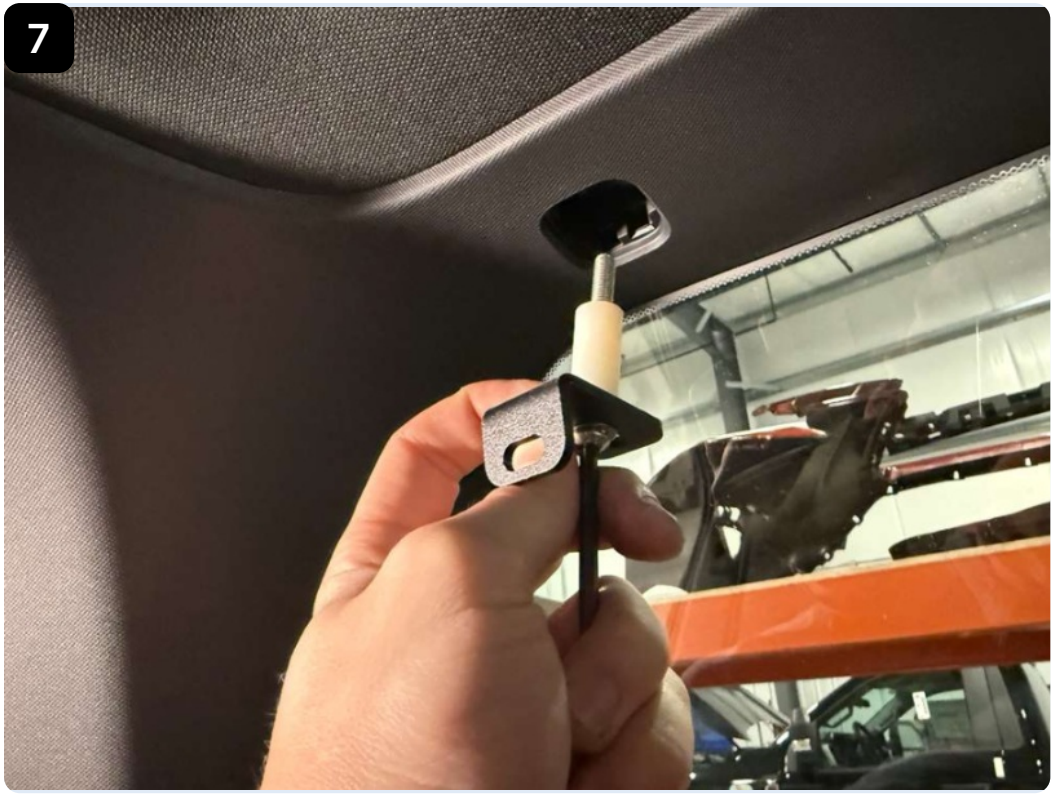

Using the long silver M6 bolt, silver flat washer, and white spacer, install the rear upper mount as shown. **Leave hand tight for now.**

8




Using the shortest black button heads (1/4"-20 x 3/8"), black flat washers, and acorn nuts, assemble the lower mounting bracket as shown. The acorn nuts should be pointing outward. Assemble the bolt and nut into both sides of this bracket.

9




Install the lower mounting bracket into the plastic detents under the rear window. The bracket should need to bow out slightly to fit into place.

10

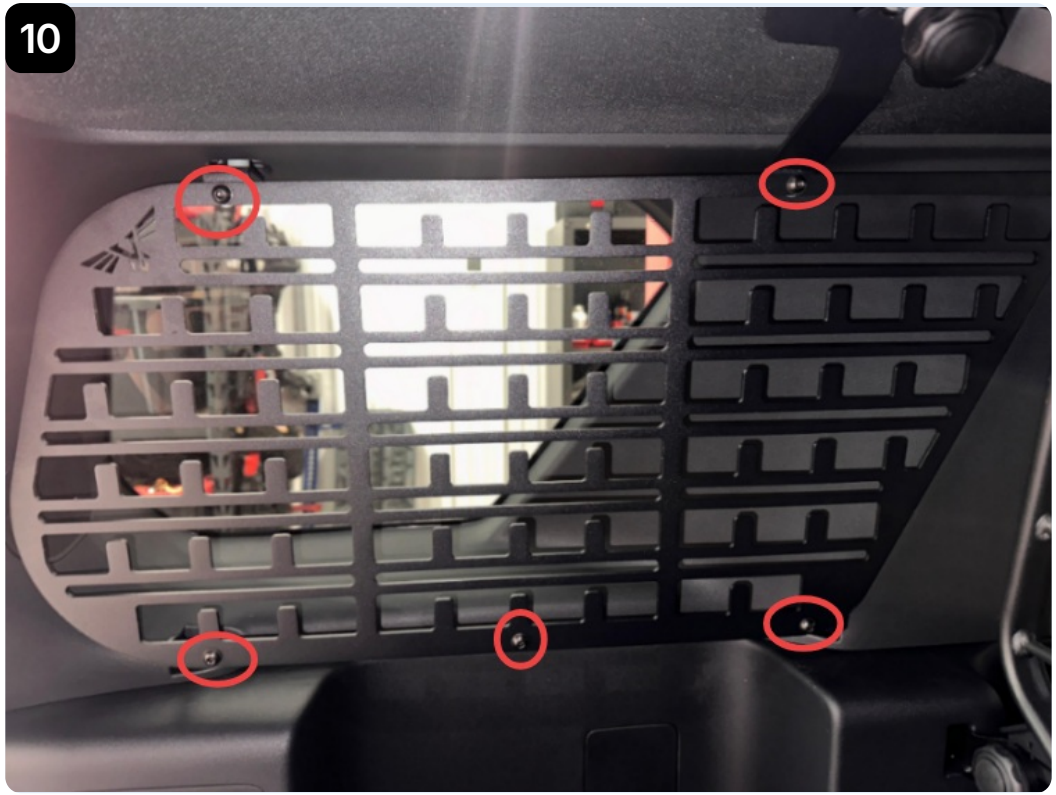

With all three mounts loosely in place, you can install the molle panel loosely using the 1/4"-20 x 1/2" button heads, washers, and flange nuts. Reaching up from the bottom is the easiest way to get the nuts started.

11

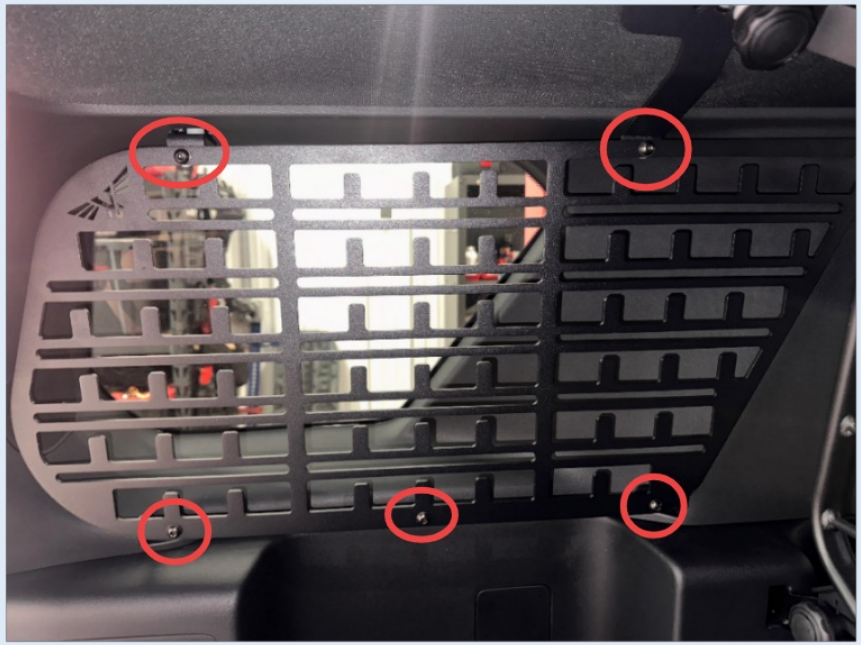

With all 5 mounting bolts installed, tighten them fully with a 5/32" allen wrench.

12



Reaching behind the panel, tighten the top rear mounting screw using a 5/32 allen wrench.

13



Using an 8mm or 10mm socket and extension, fully tighten the factory screw in the headliner. **NOTE: Take care when pulling the extension and socket out of the access hole to not lose socket behind headliner.**

14



Using a 1/8" allen wrench, tighten the mounting bolts into the top front mounting bracket.

15

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184