




1

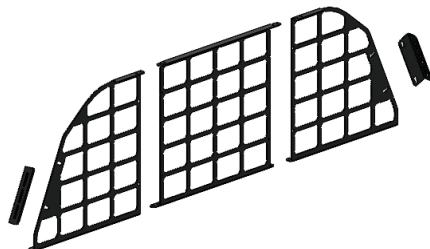

Included Parts:

2

Part	Description	Qty/...
040-0025	1/4"-20 Thread Size, Medium-Strength Steel Serrated F...	28.00...
040-0051	1/4"-20 x 1/2" Button Head Black Stainless	28.00...
040-0147	Black-Oxide 18-8 Stainless Steel Mil. Spec. Washer, Pas...	28.00...
040-0284	Black Phenolic Plastic Knob, 5/16"-18 Threaded Hole, ...	4.000...
040-0285	18-8 Stainless Steel Square-Neck Carriage Bolt, 5/16"-...	4.000...
040-0286	5/16" Self-Retaining Washer, 0.470" ID, 0.734" OD	4.000...

Included Hardware:

3



Begin by assembling the panel using the provided 1/4" bolts, washers and nuts. The top of the center section had a "T" between the bolt holes on one side to make it easier to tell the orientation. Make sure each panel is oriented correctly, as shown in the image, or the bolt holes will not lign up. Keep everything loose until all bolts are started, then tighten them all.

4



Loosely install a mounting bracket onto each molle panel with the flange towards the front of the vehicle using the provided 1/4" bolts, washers and nuts. The image shows the recommended starting position, however, they can be moved as needed.



INST: VGX-PET-46-PC

Scan To Edit



5



Orient the pet divider so that the flange on the bottom is pointing towards the front of the vehicle. Then, push the carriage bolts in through the front of the panel and retain them in place using the provided plastic retaining washers.

6



Lift the panel up into place on the mount as shown and secure it in place using the provided knobs. Note: The knobs can be flipped to provided easier access from the back seat rather than the cargo area if desired.

7

With the panel loosely installed, adjust the height and position of the panel and mounting brackets and tighten all hardware once it is how you want it. With that, the install is complete!

8

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com
269-353-1184

