Step 1 LC250 / GX550 Upper Shelf Install Instructions






Step by step on how to install the Upper Shelf on a Toyota Land Cruiser 250 (24+) and Lexus GX550 (24+). This one install doc covers both part numbers: VLC250-UPRS and VGX55-UPRS. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts & Hardware

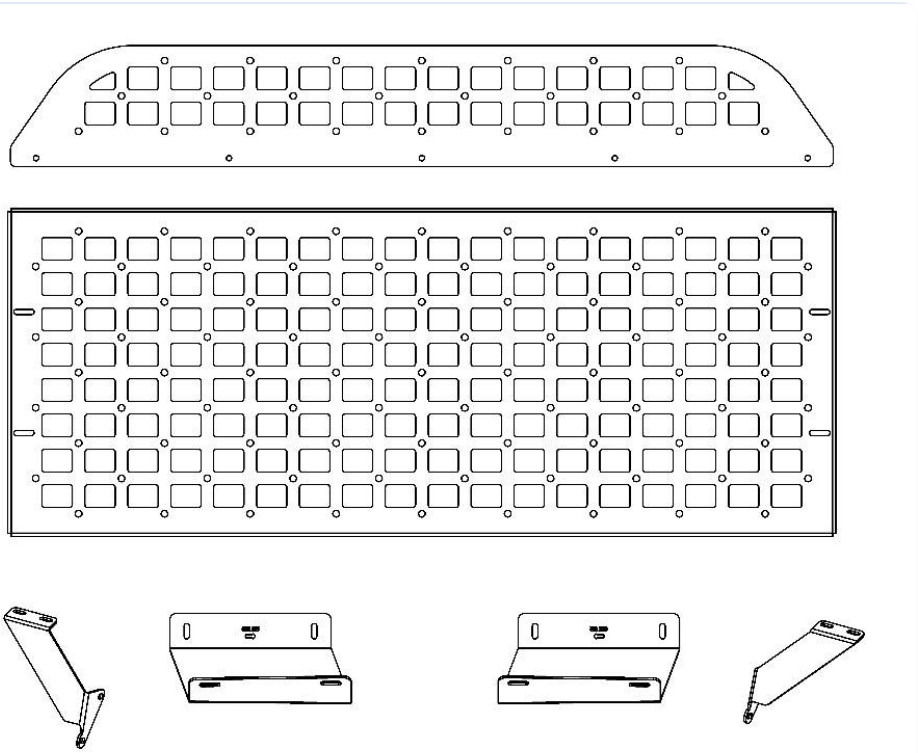






Check that you have all of the parts and hardware shown before starting.
Parts: 1x Upper Shelf, 1x Shelf Front Panel, 2x Upper Shelf Brackets, 2x Molle Panel Upper Front Brackets.
Hardware pack: 046-0103. Every bolt, nut and washer is listed in the bill of materials picture, including the short and long 1/4"-20 button head bolts, flange lock nuts, washers, and the longer M6 bolts used when stacking with the molle panel brackets.

Step 3 Remove Grab Handles

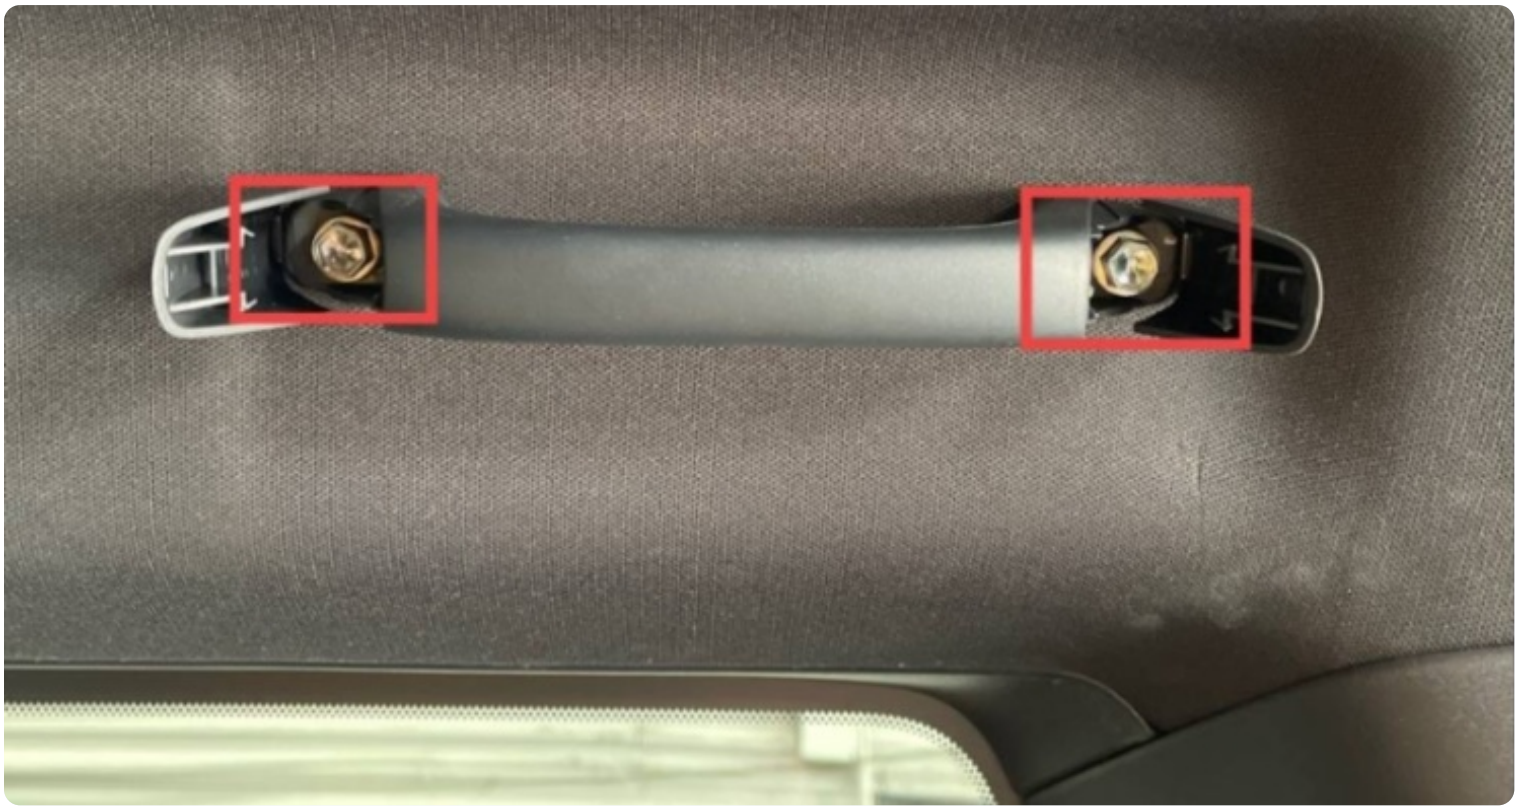

Pop off the plastic covers on the rear grab handles and remove the (2) factory hex bolts with a 10mm socket. Repeat on each side of the vehicle. Keep the factory bolts, they are reused.

Step 4 Install Shelf Brackets



Install the shelf mounting brackets in the grab handle holes with the factory hardware. They can go on with or without the grab handles. If you are also installing the rear window molle panels, stack the shelf bracket over the molle panel bracket. Longer M6 bolts and small washers are provided if the stack is too thick for the factory bolts.

Step 5 Set Shelf on Brackets



Set the shelf onto the mounting brackets and loosely secure it with the short 1/4" button head bolts, washers and serrated flange nuts.

Step 6 Install Front Panel



Install the front panel onto the shelf with the short 1/4" hardware (skip this if you are installing a pet divider instead). If you are installing the shelf by itself, center it and tighten all hardware to finish the install.

Step 7 Attach Molle Panels (Optional)





If you have the rear window molle panels, secure them to the shelf with the 1/4" hardware as shown. Use the longer 1/4"-20 x 3/4" bolt in the circled hole. The bracket mounts to the inside of the molle panel on one end and to the shelf and front panel (or shelf and pet divider) on the other end.

Step 8 Attach Pet Divider (Optional)



If you have a pet divider, secure the center of the divider panel to the shelf with 1/4" hardware.

Step 9 Adjust and Tighten



Adjust everything into the position you want, then tighten all of the hardware. The install is complete.