





Included Hardware: 9x 1/4"-20 x 1/2" Button Head Bolt | 11x 1/4" Washer | 11x 1/4"-20

Serr. Flange Nuts | 2x 1/4"-20 x 3/4" Button Head Bolt






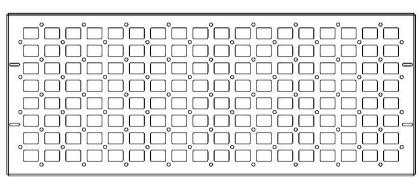









Included Part(s): 1x Upper Shelf | 1x Shelf Front Panel | 2x Upper Self Bracket | 2x Molle Panel Upper Front Bracket

Process Ref. No: 1775

Revision: 1.005 **Revision date:** 20/06/2025


Date: 26/07/2024

Page 1 of 5












Install the mounting brackets with the handle mounting holes and the factory hardware. This can be installed with or without the handles. If installing with the rear window molle panels, stack the shelf mounting bracket over the molle panel mounting bracket. Longer M6 bolts and small washers are provided if the stack up for your set up is too much for the factory hardware.












Install the front panel onto the shelf using the short 1/4" hardware (if installing without a pet divider). If you are only installing the upper shelf on its own, center the shelf and tighten all hardware to complete the install.











If installing with a pet divider, secure the center of the panel to the shelf with 1/4" hardware.

Process Ref. No: 1775

Revision: 1.005 Revision date: 20/06/2025

Date: 26/07/2024 Page 4 of 5





9

Finally, adjust the position of everything to get it in the desired position and then tighten up all hardware and the install is complete.

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com info@victory4x4.com info@squatch-proof.com info@fatamericanmfg.com

269-353-1184









Process Ref. No: 1775

Revision: 1.005 **Revision date:** 20/06/2025

Date: 26/07/2024

Page 5 of 5