


2

Included Hardware: 9x 1/4"-20 x 1/2" Button Head Bolt | 11x 1/4" Washer | 11x 1/4"-20 x 1/4"-20 x 3/4" Button Head Bolt

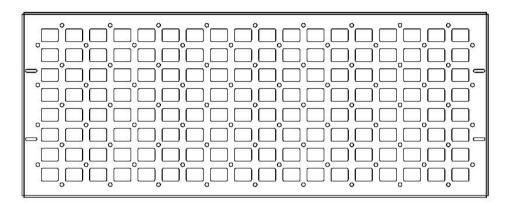









Included Part(s) (Molle Panels + Upper Shelf): 1x Upper Shelf | 1x Shelf Front Panel | 2x Upper Self Bracket | 2x Molle Panel | 2x Molle Panel Upper Rear Bracket | 2x Molle Panel Upper Front Bracket | 2x Molle Panel Lower Rear Bracket | 2x Molle Panel Lower Front Bracket | 2x Stainless Logo Plate

Process Ref. No: 1775


Date: 26/07/2024

Cycle Time: N/A
Author: Colin G











Install the mounting brackets with the handle mounting holes and the factory hardware. This can be installed with or without the handles. If installing with the rear window molle panels, stack the shelf mounting bracket over the molle panel mounting bracket. Longer M6 bolts and small washers are provided if the stack up for your set up is too much for the factory hardware.







Place the shelf onto the mounting brackets and loosely secure it using the short 1/4" hardware.




Install the front panel onto the shelf using the short 1/4" hardware (if installing without a pet divider). If you are only installing the upper shelf on its own, center the shelf and tighten all hardware to complete the install.











If installing with a pet divider, secure the center of the panel to the shelf with 1/4" hardware.

Process Ref. No: 1775

Date: 26/07/2024

Cycle Time: N/A
Author: Colin G

Revision: 1.004 Revision date: 25/04/2025





9

Finally, adjust the position of everything to get it in the desired position and then tighten up all hardware and the install is complete.

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com info@victory4x4.com info@squatch-proof.com info@fatamericanmfg.com

269-353-1184









Process Ref. No: 1775

Date: 26/07/2024 Page 5 of 5 Cycle Time: N/A

Author: Colin G