Step 1 Overhead MOLLE Panel Install Instructions





Step by step on how to install the Ford Bronco (2021+) Overhead MOLLE Panel. It installs the same way on 2-door and 4-door Broncos. Please read all steps carefully before starting the install. Tools needed: small pick or flat head screwdriver, T20 Torx, Torx Plus 50 (in the Bronco tool kit), 8mm socket, a saw or cutter for plastic, razor blade and a 5/32" hex.

Installation Video: https://www.youtube.com/watch?v=gh-EN2cFAwI

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware

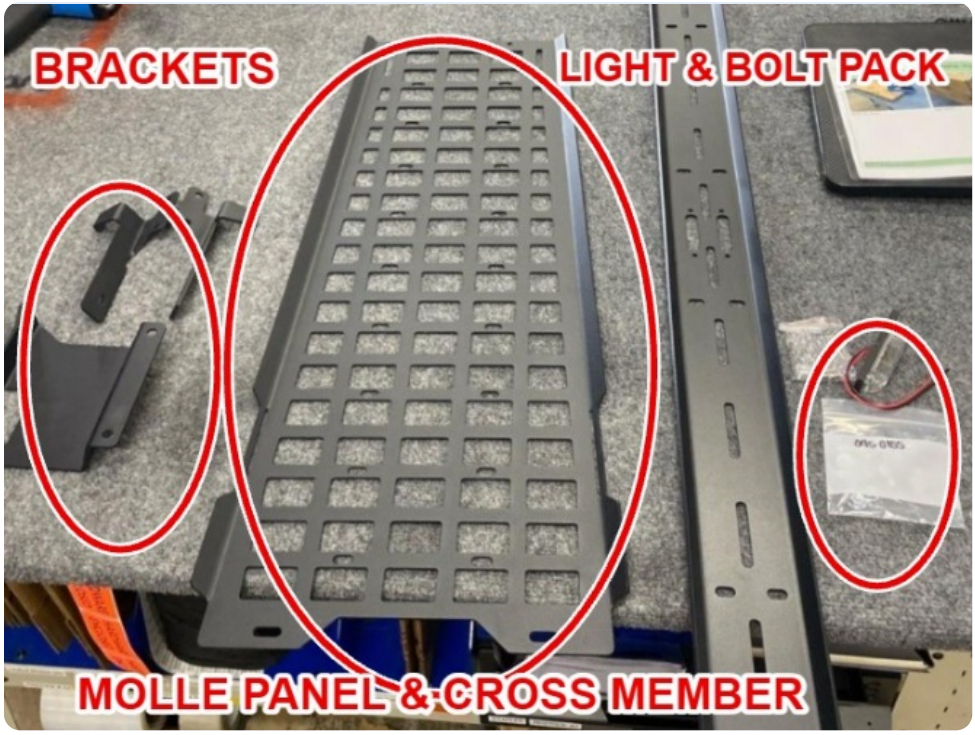

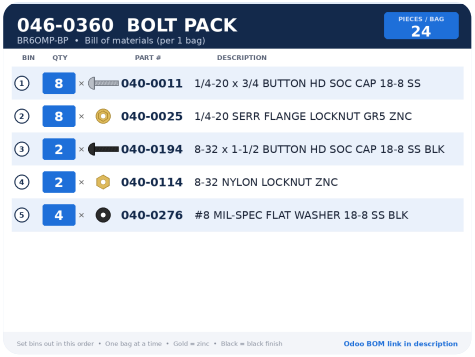

Check that you have all of the parts and hardware shown before starting. Hardware pack: 046-0360 (every bolt, nut and washer is listed in the bill of materials picture).

Step 3 Remove the Visor Clips





Pop open the small screw cover under each windshield visor clip with a pick or flat head screwdriver, then remove the screw with a T20 Torx. Do both sides.

Video timestamp: 0:17

Step 4 Lower the Overhead Console



Firmly pull down on the overhead console to release its clips and let it hang.

Video timestamp: 0:50

Step 5 Trim the Console Flange





Cut off the roughly 1/4" section of the back flange between the two openings. Keep your blade away from the wiring behind it. Smooth the cut with a sander or sharp razor blade.

Video timestamp: 1:08

Step 6 Install the Front Mounting Bracket







Remove the innermost bolt on each roof latch mount with the Torx Plus 50 driver. Install the front bracket with those factory bolts, push it up tight to the top, then tighten.

Video timestamp: 2:19

Step 7 Reinstall the Trim and Visor Clips





Realign and reinstall the clips holding the plastic trim, make sure the seal sits back over the plastic, then reinstall both visor clips.

Video timestamp: 3:43

Step 8 Install the Rear Mounting Brackets





Remove the single 8mm screw up top behind each front seat. Set the rear bracket with the long leg facing forward, drop its small tab into the slot, line up the hole and reinstall the screw. Do both sides.

Video timestamp: 4:18

Step 9 Install the Rear Cross Member





Slide the cross member in under both rear brackets and install the 1/4"-20 button heads with serrated flange nuts on top. Leave all four finger tight.

Video timestamp: 5:08

Step 10 Install the Dome Light





Mount the included light to the bottom of the cross member for more light, or to the top for a softer light, with the provided button heads and nylock nuts. Wiring is up to you; an upfitter switch is the easiest option.

Video timestamp: 5:42

Step 11 Install the MOLLE Panel





With the bent flanges up and the narrow end toward the front, lift the panel into place and install the 1/4"-20 button heads and flange nuts. A helper makes this easier.

Video timestamp: 7:07

Step 12 Center and Tighten Everything







Center the panel on the slots and tighten it with a 5/32" hex, then tighten the cross member bolts and the front bracket bolts.

Video timestamp: 7:56

Step 13 Final Check



Make sure all of your bolts are tight and enjoy your new Overhead MOLLE Panel! Be sure to check out jcroffroad.com for even more Ford Bronco products.

Video timestamp: 8:32

Step 14 Installation Complete



Congratulations, you have completed the install of your new Overhead MOLLE Panel! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com