
INST: VGX46RMP


Scan To Edit

1

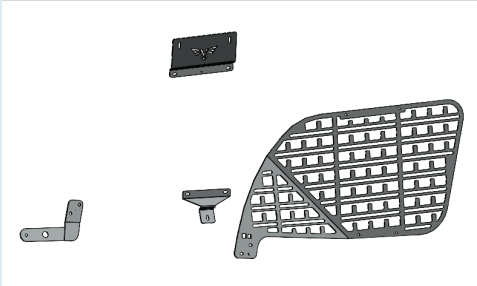

Included Parts (Left Side):

2

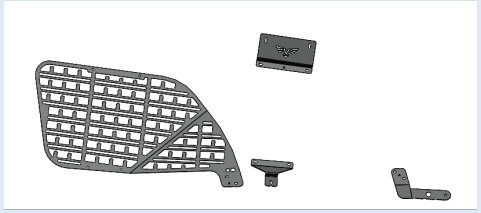

Included Parts (Right Side):

3

Description	Qty/Parent
Button Head Hex Drive Screw Passivat	2.00000000
Button Head Hex Drive ScrewPassivat	2.00000000
Off-White Nylon Unthreaded Spacer 1/	2.00000000
18-8 Stainless Steel Mil. Spec. Washer	4.00000000
1/4"-20 Thread Size, Medium-Strength	6.00000000
1/4"-20 x 1/2" Button Head Black Stainl	6.00000000
Black-Oxide 18-8 Stainless Steel Mil. S	6.00000000

Included Hardware:

4



Remove the cargo net hook by rotating the top towards the rear of the vehicle and pulling out.

INST: VGX46RMP

5



Use a screwdriver to remove the bolt located behind the cargo net hook.

6



Use a pry tool to remove the cover in the cargo cover retainer.

7



Use a screwdriver to remove the bolt behind in the cargo cover retainer

8



If you want to move the seatbelt clip to the molle panel in order to use it, use a pry tool to push in on the retaining clip on the back side and pull out to remove it from the plastic.

9



Pop the covers open on both side of the grab handle by punching and pulling away from the center.

10



Remove the bolts holding the grab handle in place.

11



Loosely install the upper bracket using the provided shorter m6 bolts and silver washers. This bracket will be labeled "L"

12



We recommend leaving the grab handles off, however, they can be installed over the upper bracket if desired. You will either have to leave the small protrusion and let the handle be spaced off the ceiling a bit (shown on the left side of the image) or cut it off if you want it to sit flat (shown on the right side of the image).

13



Loosely install the lower rear bracket using the provided longer m6 bolts and silver washers with a spacer on the other side of the bracket.

14



Loosely install the lower front bracket using the provided longer m6 bolts and silver washers with a spacer on the other side of the bracket.

15



Loosely install the panel onto the mounts using the provided black 1/4"-20 bolts, washers and flange nuts.

16

With everything loosely installed, adjust the position of the panel and tighten all hardware.

17



If you choose to, you can reinstall the seat belt clip into the two square cutouts in the panel as shown.

18



The cargo net hook can also be popped into the hole in the mounting bracket as shown.

19 With that, the install is complete.

20

