




1

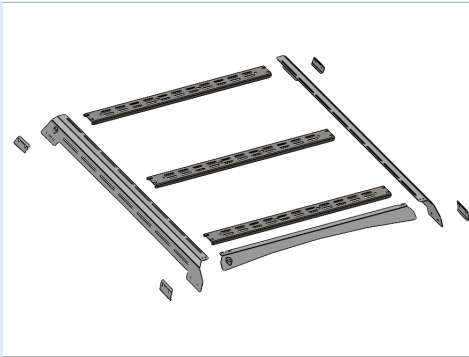


Included Parts:

2

Component	Quantity	Unit
[BA0-0140] Back Choke 10.0 Stainless Steel Bottom Head Box Drive Screws, 1/4" -20 Thread Size, 3/4" Long	0	4.000000 Lch
[BA0-0147] Back Choke 10.0 Stainless Steel MB, Spec: Washer, Passivated, 1/4" Screw Size, M2/NORM 15750-0000	0	4.000000 Lch
[BA0-0023] 1/4" -20 Thread Size, Medium Strength Steel Separated Flange Locknut Grade 5, Zinc-Plated	0	4.000000 Lch
[BA0-0190] 10.0 Stainless Steel Bottom Head Box Drive Screws Back Choke, 5/16" -18 Thread Size, 3/4" Long	0	20.000000 Lch
[BA0-0240] MB Screw Size, 5/8 inch O.D., 15.0 inch O.D. Back Choke 10.0 Stainless Steel Washer	0	20.000000 Lch
[BA0-0003] 5/16-18 UNF FLANGE NUT 15400 IN 15V ZINC	0	12.000000 Lch

Included Hardware:

3

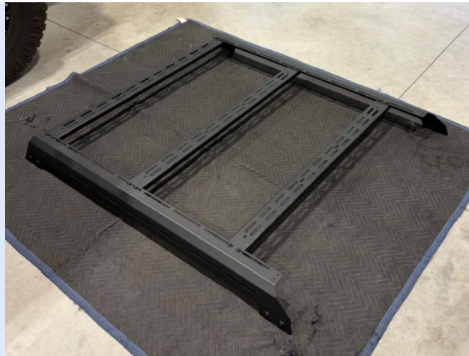

Install the three cross bars between the side rails using the provided 5/16" hardware. Push the side rails towards each other as they will go and snug the bolts up for now.

4



Set the rack onto the roof with the side rails going into the rain cutter on both sides. Loosen the cross bars at this point to allow for adjustment to the side rails.



5



Position the rack so that the front edge is roughly in line with the gap between the front and rear door.

6




With the rack in position, loosely bolt the outer clamp mounts onto the side rails using the provided 5/16" bolts and washers.

7



Insert a 1/4" bolt and washer into the inner hole in each side rail and loosely thread a nut onto the bottom as shown.

8

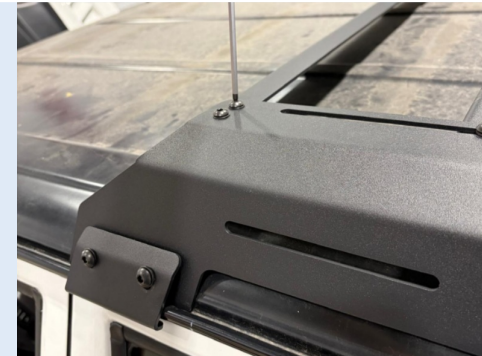

Slide the front fairing onto the 1/4" bolts started in the side rails and install the remaining 1/4" bolt on each side. Tighten them fully into place.




INST: XJRKCS-PC

Scan To Edit



9

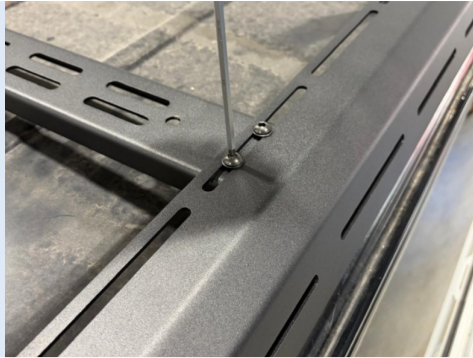

Adjust the position of the cross bars as desired and tighten them into place.

10



Push up on the outer mount while pushing down on the side rail and tighten the mounts fully into place.

11



With that, the install is complete!

12

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com
269-353-1184

