ASSY: FAM-AMR02


Feedback?

1



Lay out all parts as pictured

2

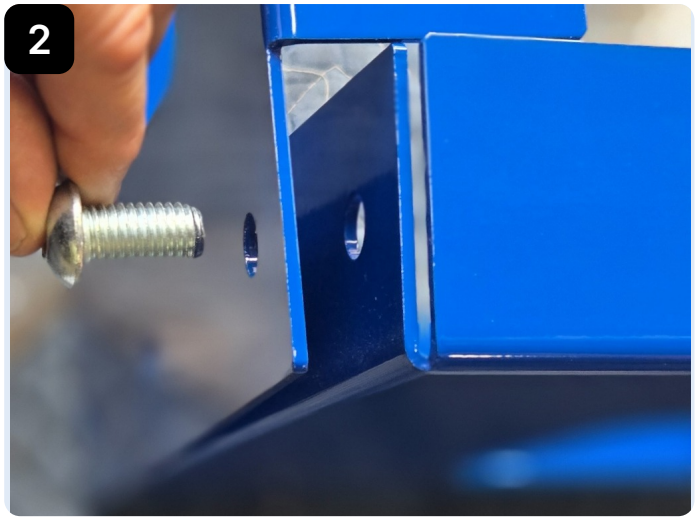

Bolt 4 sides together using provided 1/2 bolts and Nuts

3



Bolt on pallet retainers with square washer on Bolt prior to installing. Secure with supplied flange nut

4




Tighten all hardware to Finish assembly

5



Fasten AMR02 to AMR CART using supplied 3/8 hardware in outer 4 holes

6

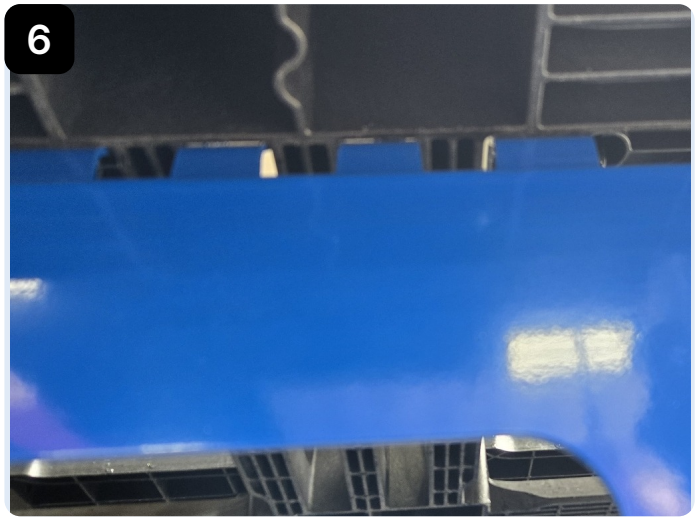

Align pallet with pallet retainer notches

7



Push pallet down to lock into place completing the assembly