
ASSY: FAM-AMR03- Minomi


Feedback?

1

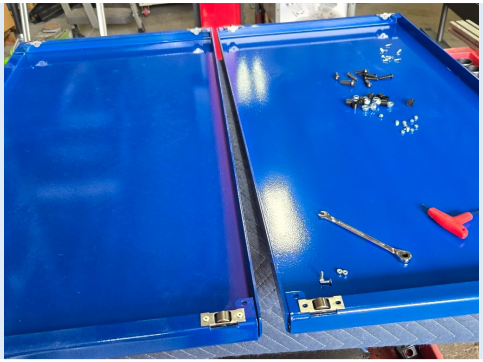

Assembly rollers on drawers using provided harware

2

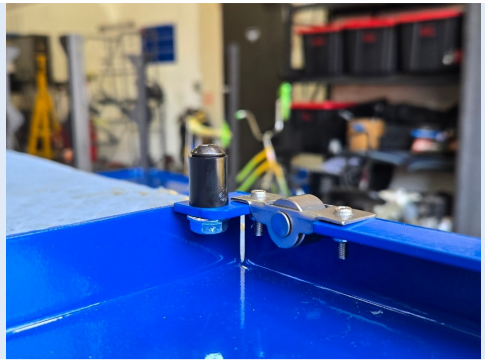

Assemble drawer guides with lock nuts and 1/4" button head. Tighten to just snug and then lossen 1/2 turn.

3



Bolt bottom base to AMR cart using hardware shown. This is bolted in 4 corners over AMR side rails

4




Bolt 2 rear and left front and right front corner brakets as shown. Leave these slightly loose

5



Bolt left drawer rail and right drawer rail to corner brackets using temporary longer bolts. Leave these very loose

6

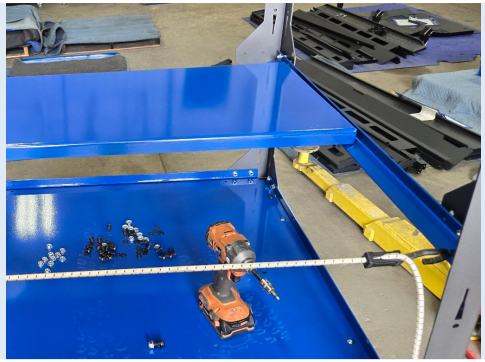


Install right rail. temporary hardware is longer and left loose to allow shelf to slide in just outside these rails.

7



This shows the gap needed. Use adjustable elastic strap across front holes and set drawer in place

8

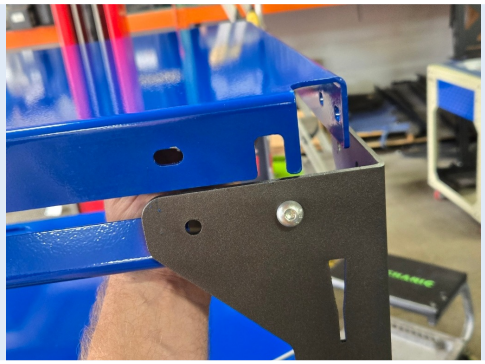

Place upper shelf on. It slides between drawer rails and outer brackets. A 2nd person may be required to help align it


ASSY: FAM-AMR03- Minomi

9




Install black hardware on inner holes and remove temporary bolts to use on upper shelf. Repeat these steps on upper shelf

10

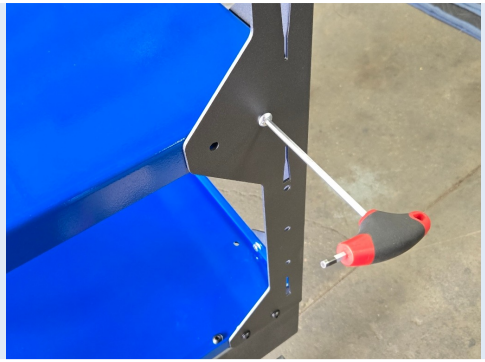

Install and tighten all hardware

11

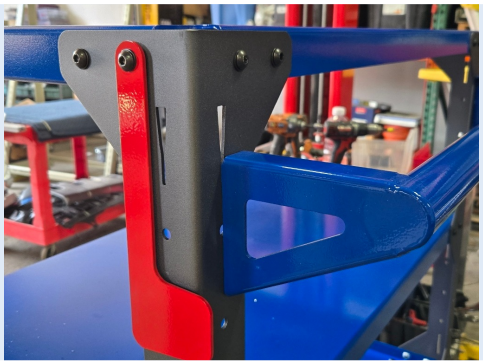

Install flag using bolt, flag, plastic washer, and lock nuts. Install handle by sliding it into self locking notches

12

You are finished!