



Lexus GX550 / 4th Gen Tacoma Shock Skid Install

Feedback?




1 Provided Hardware & Tools Needed:

- (8) 5/16" Hex Bolts
- (8) 1/2" Washers
- (8) 5/16" Nut Tabs

1/2" Wrench

2

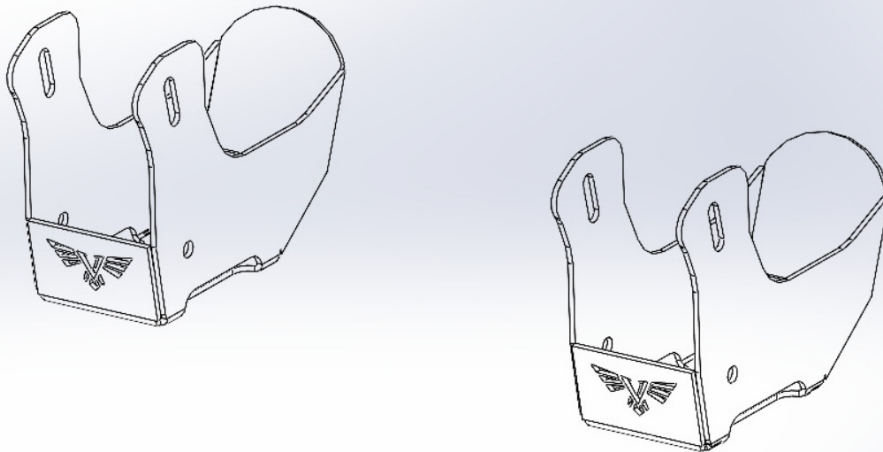

Included Parts: (2) Shock Skids

**3**


The (2) holes shown are the holes you will need to line your skid holes up to on each side of the shock, making (4) total.

4

Take the provided hardware and insert it through the skid into the holes stated in the previous step on each side of the skid. There is a slot in the skid to adjust height.



5

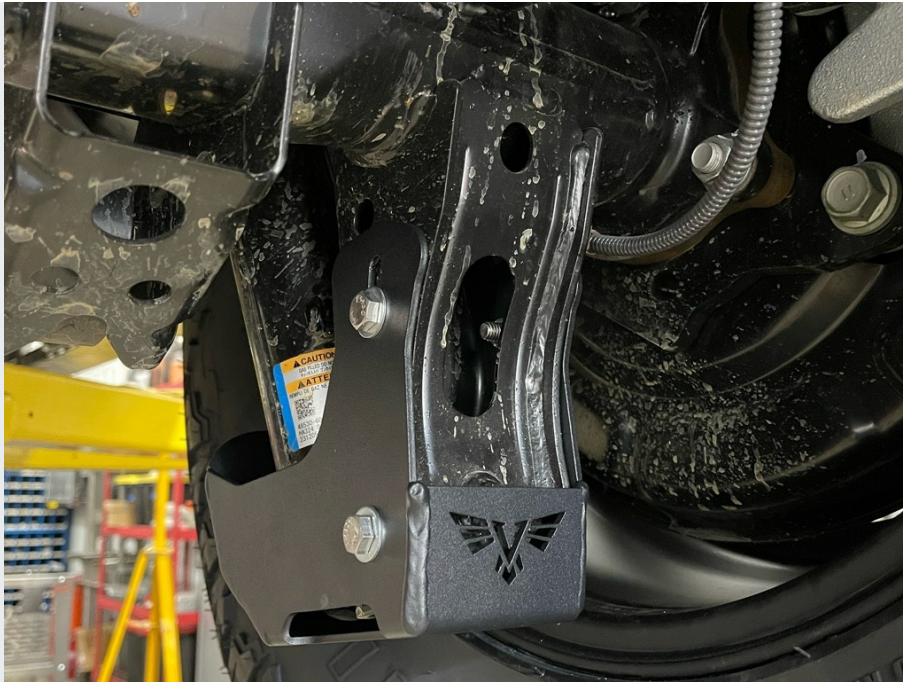

Once all (4) of your bolts are started into the nut tabs and the height is adjusted, use a 1/2" wrench and tighten them all down to finish your install.

6

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184

