Step 1 Maverick Console MOLLE Panel Install Instructions





Step by step on how to install the Maverick Console MOLLE Panel. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=h7jfACmNueE

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0092 BOLT PACK

V46CC-BP • Bill of materials (per 1 bag)

PIECES / BAG 20

BIN	QTY	PART #	DESCRIPTION
1	6 ×	040-0132	#8 x 3/4 PHILLIPS ROUND HD SCREW SS BLK
2	6 ×	040-0130	NYLON SPACER 1/2 OD x 3/8 L BLK
3	4 ×	040-0192	#8 x 1 PHILLIPS ROUND HD SCREW SS BLK
4	4 ×	040-0139	NYLON SPACER 1/2 OD x 5/8 L BLK

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting.

Step 4 Line Up Panel






Line the panel up on the side of your center console, driver or passenger side, matching the curve and spacing to your liking. Once it looks right, use a punch or Phillips screwdriver to press and mark the four smaller mounting holes in the plastic.

Video timestamp: 0:15

Step 5 Pre-Thread Screws



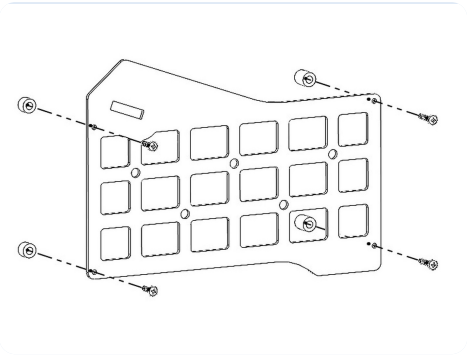


Remove the panel and thread the provided screws into the marked spots to establish the holes, then take them back out. Don't punch too far through the plastic. You can also start the holes with a drill and a 1/16 in bit.

Video timestamp: 2:26

Step 6 Install Panel



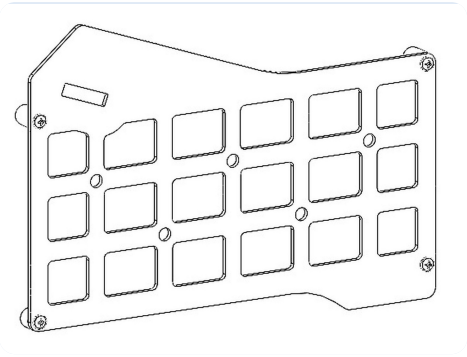

Place the panel back in line with the holes with the spacers behind it. The longer spacer and screw go at the top rear point. The 2 shorter spacers and screws go on the left (driver) side of the panel and the 2 longer ones on the right. Thread all 4 screws in until snug and secure, without over tightening.

Video timestamp: 2:41

Step 7 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Maverick Console MOLLE Panel is now complete. Enjoy!