




1 Remove your factory panels using a T30 torx.

2



Loop bungee ball through the panel as shown. This panel is designed to fit on either side of the vehicle, so we recommend looping the ball through the "front" of whichever side you are installing.

3

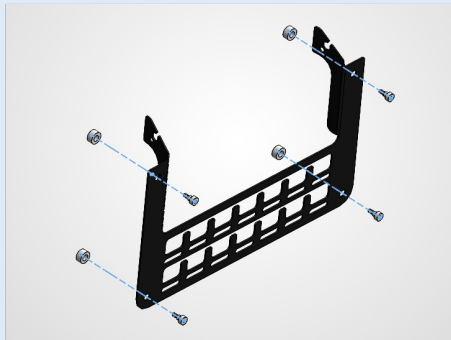

Using your factory M6 hardware, fasten the panel into place using the provided spacers as shown.

4



Hook bungee ball into panel as shown.



INST: VPALMC-4G-PC

Scan To Edit



5

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com
269-353-1184



**SQUATCH
PROOF**

**FAT &
AMERICAN MFG.**