Step 1 5th Gen 4Runner Strike Sliders Install





Step by step on how to install the Strike Rock Sliders on a Toyota 4Runner 5th Gen (10-24). Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=AbDP8RiZSwU

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts & Hardware



Check that you have all of the parts and hardware shown before starting.

Step 3 Install Rubber Insulators



If you have the logo step plates, start here. Clean the mounting surfaces, then peel and stick the adhesive rubber insulators: three rectangular pieces across the center and one triangle piece on each end.

Video timestamp: 0:55

Step 4 Install Step Plate



Set the step plate on the slider and install the 1/4-20 button head bolts with washers and serrated flange nuts underneath. Start all hardware, center the plate, then tighten with a 5/32 in. hex.

Video timestamp: 1:52

Step 5 Install End Caps



Install an end cap on each end of the slider with a bead of black RTV silicone to keep moisture out. Clean up any excess.

Video timestamp: 2:20

Step 6 Remove Parking Brake Bracket Bolt



On each side, remove the forward-most parking brake cable bracket bolt with a 12mm socket. A bolt goes back in this spot once the slider is in place.

Video timestamp: 2:52


Step 7 Remove Frame Plugs



Remove the black plastic caps and the round plug from the frame rail just ahead of that bracket. They are not reused.

Video timestamp: 3:15


Step 8 Position the Slider

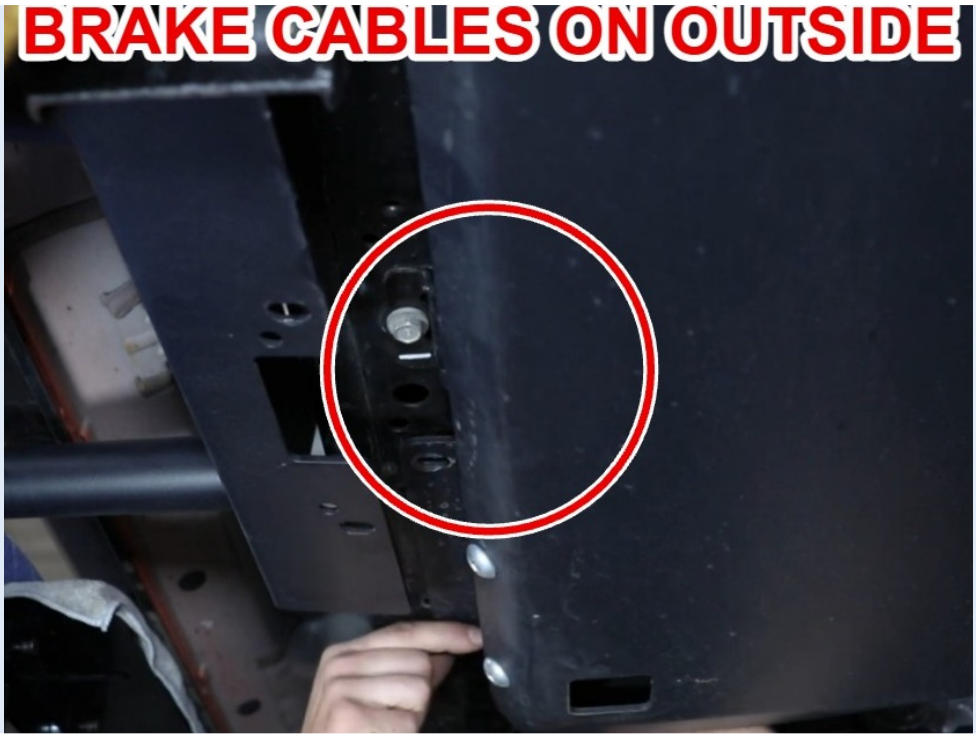

Lift the assembled slider into place, keeping the parking brake cables on the outside so they are not pinched. With our gas tank skid, remove the two bolts on the driver front mounting bracket so the slider can tuck between the frame and skid.

Video timestamp: 3:45

Step 9 Locate on Tank Strap

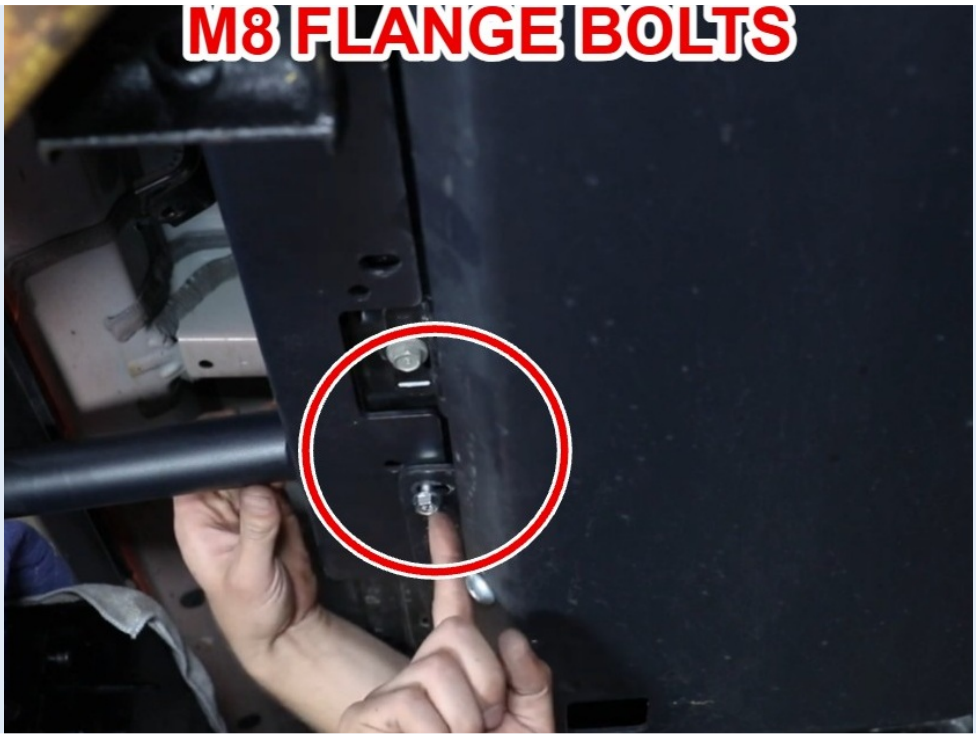

Use the front tank strap bracket and the slider cutout to locate the slider. Slide the leg over the bracket and start the M8 flange bolts, plus the one just behind the fuel tank strap.

Video timestamp: 4:20

Step 10 Install Leg Bolts



Start bolts in every mounting hole. The upper bolt goes through the parking brake cable bracket into the frame, and the locating tab fits the slotted cutout.

Video timestamp: 5:05


Step 11 Install Gusset Brackets



Bolt each gusset to the back of the welded tab on the leg with a flange bolt at the frame, and two 3/8 in. hex bolts, washers and flange lock nuts at the slider leg.

Video timestamp: 6:05

Step 12 Tighten Hardware

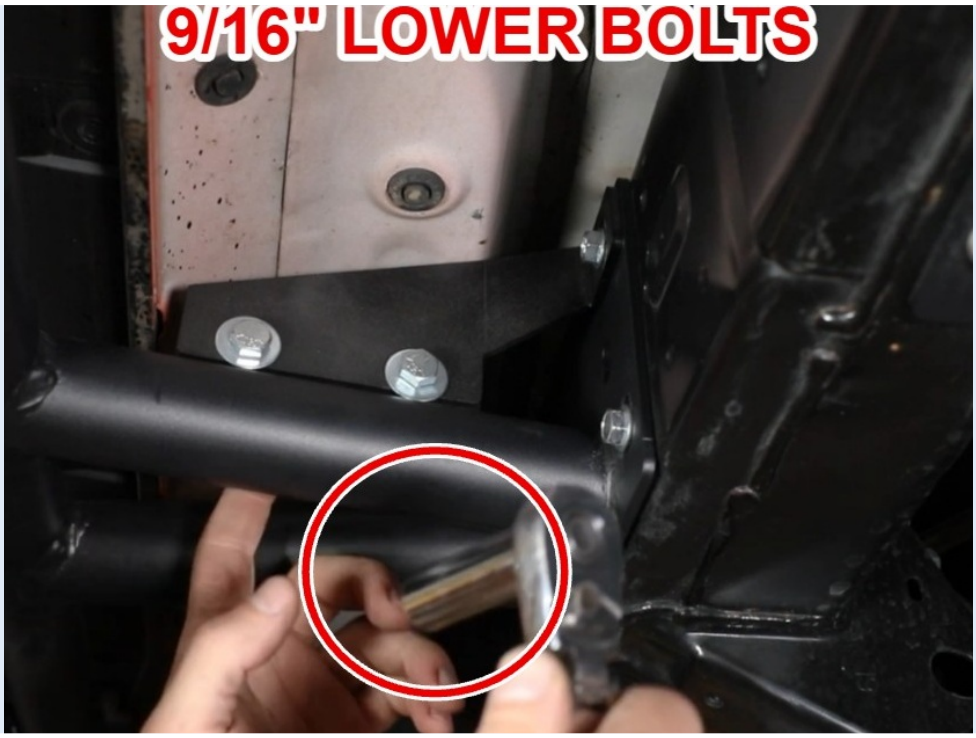

Check that the slider is parallel to the body. Tighten the frame side bolts with a 13mm socket, then the lower 3/8 in. bolts with a 9/16 in. socket. Repeat on the passenger side.

Video timestamp: 6:50

Step 13 Install Complete



Double check that all your hardware is tightened and you're all done!