Step 1 Rotopax / Maxtrax Carrier Install Instructions






Step by step on how to install the Victory 4x4 Rotopax / Maxtrax Carrier on the Victory 4x4 Adventure Carrier. It lets you carry a RotopaX or FuelPax (1 to 4.5 gallon) and a MAXTRAX (or other traction board) at the same time. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com


Step 2 Included Parts & Hardware



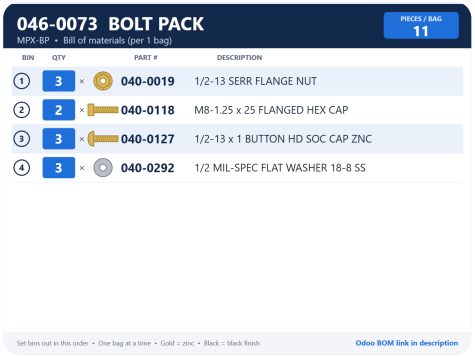


Check that you have all of the parts and hardware shown before starting. Hardware pack: 046-0073 (every bolt, nut and washer is listed in the bill of materials picture). To mount MAXTRAX you also need a TRACBO-BP bolt pack (sold separately) or the hardware that comes with your boards.

Step 3 Bolt the Carrier to the Adventure Carrier

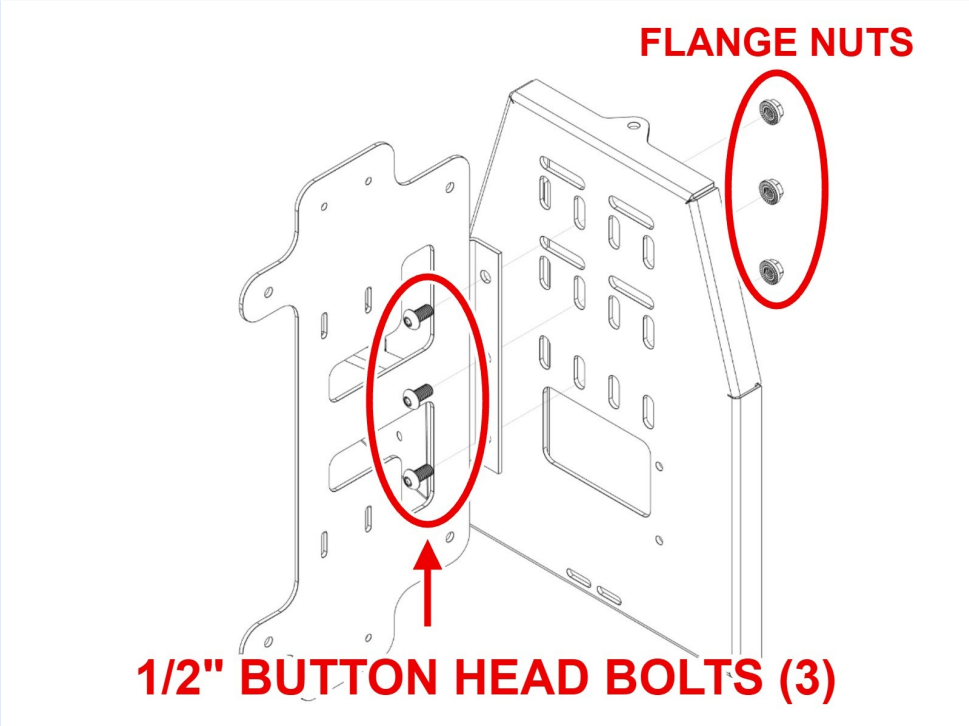

Line the carrier up with any column of slots on the Adventure Carrier. Bolt it on with the (3) 1/2"-13 x 1" button head bolts and 1/2"-13 serrated flange nuts. Tighten with a 5/16" hex and a 3/4" wrench.


Step 4 Mount the RotopaX

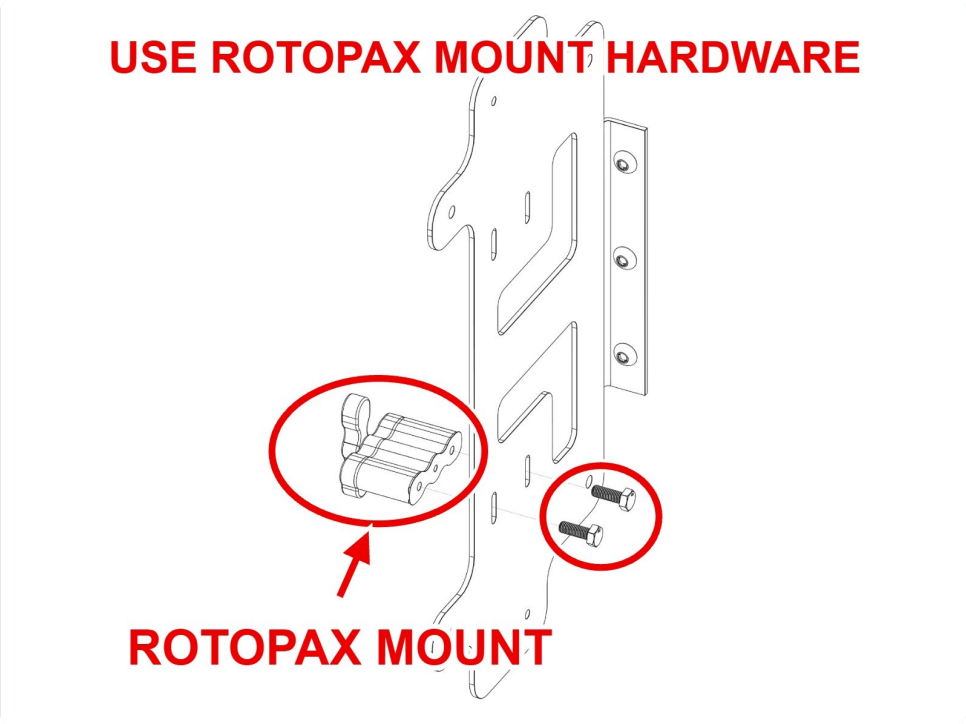




Attach the RotopaX mount to one set of slots on the carrier using the hardware that comes with the RotopaX mount. For a larger RotopaX, attach a mount to each set of slots.

Step 5 Insert the TRACBO-BP Carriage Bolts

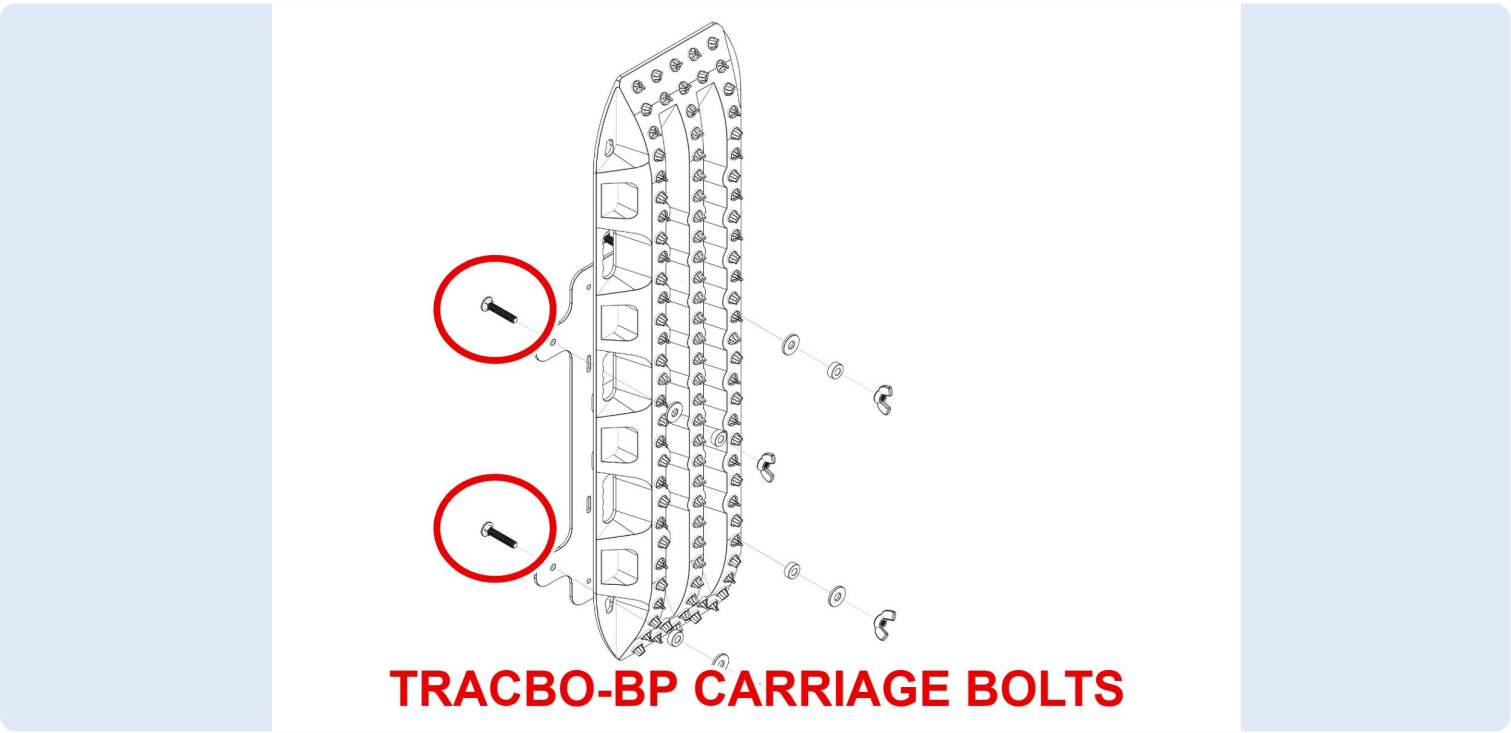

If you are mounting a MAXTRAX, push a carriage bolt from the TRACBO-BP bolt pack through each of the 4 larger holes in the carrier.

Step 6 Mount and Secure the MAXTRAX

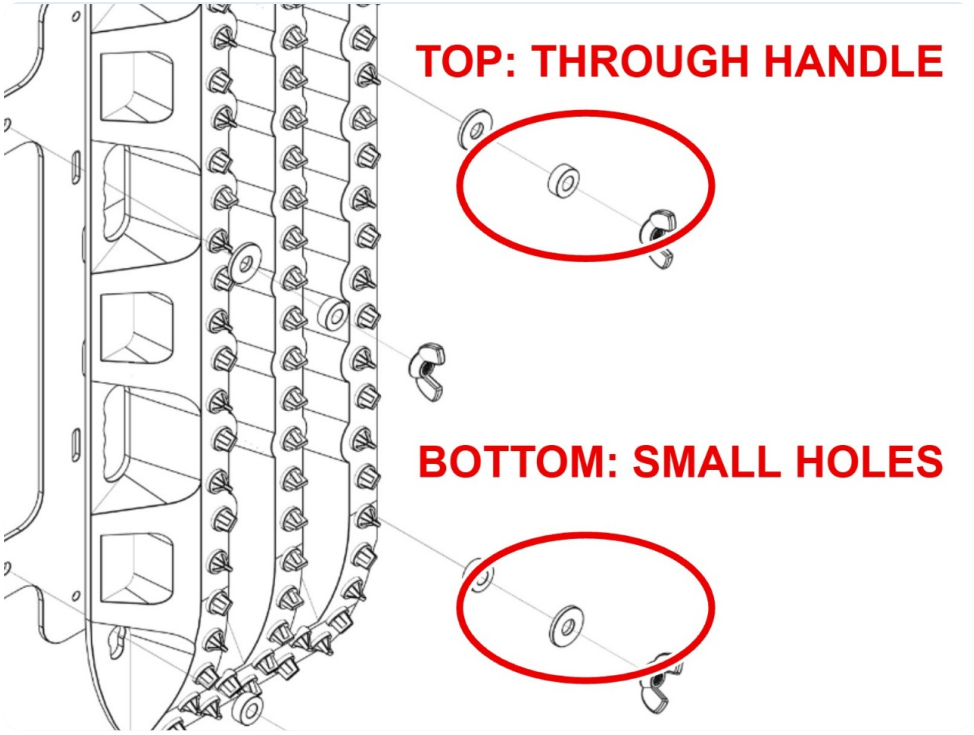



Set the MAXTRAX over the bolts so the bottom 2 bolts go through the small mounting holes at the bottom of the board and the top 2 bolts go through the middle handle. Secure each bolt with the plastic spacer, washer and wing nut from the bolt pack. The hardware order is different on the top bolts than the bottom bolts, so follow the picture.

Step 7 Final Check



Make sure all bolts and wing nuts are tight and the RotopaX and MAXTRAX are secure. Recheck the hardware after your first drive.