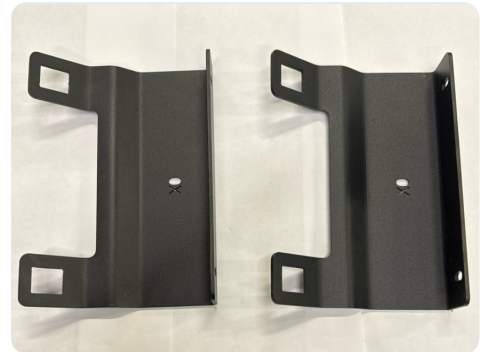


**Step 1** Upper Shelf Install for GX460

How to install the Upper Shelf on the GX460.

Install Video: https://www.youtube.com/watch?v=s_P0f6LAg4Q (Reference)


Questions or Support:

Phone: 269-353-1184

Email: info@[victory4x4.com](mailto:info@victory4x4.com)




Step 2 Mounting the Brackets

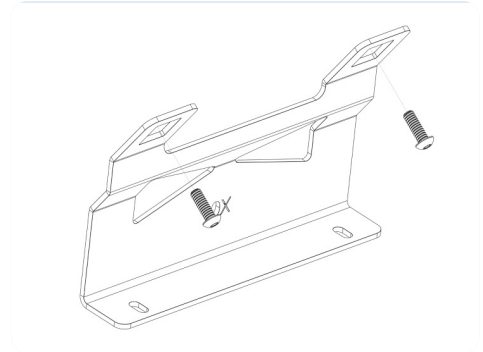

- Start by installing the mounts onto the handles on the ceiling of the cargo area. To do so you will need to first take them off. To do this, find the seams on either side of each handle and pop the outer covers off. It may be helpful to use something like a plastic pry tool but can be done by hand. Then simply take out the factory bolts. Then, pop the handles into the square cutouts in the mounting brackets and reinstall them using the provided 35 mm M6 button head bolts.




Step 3 Front Panel Attachment

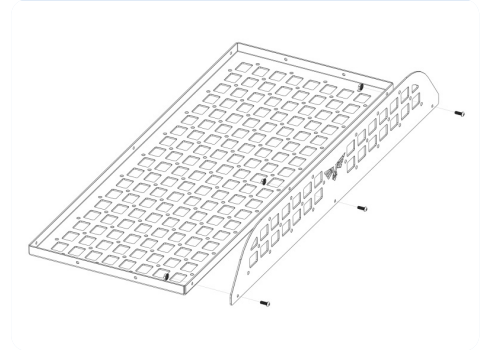

- Next, attach the front panel to the basket using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts.

Step 4 Install the Basket

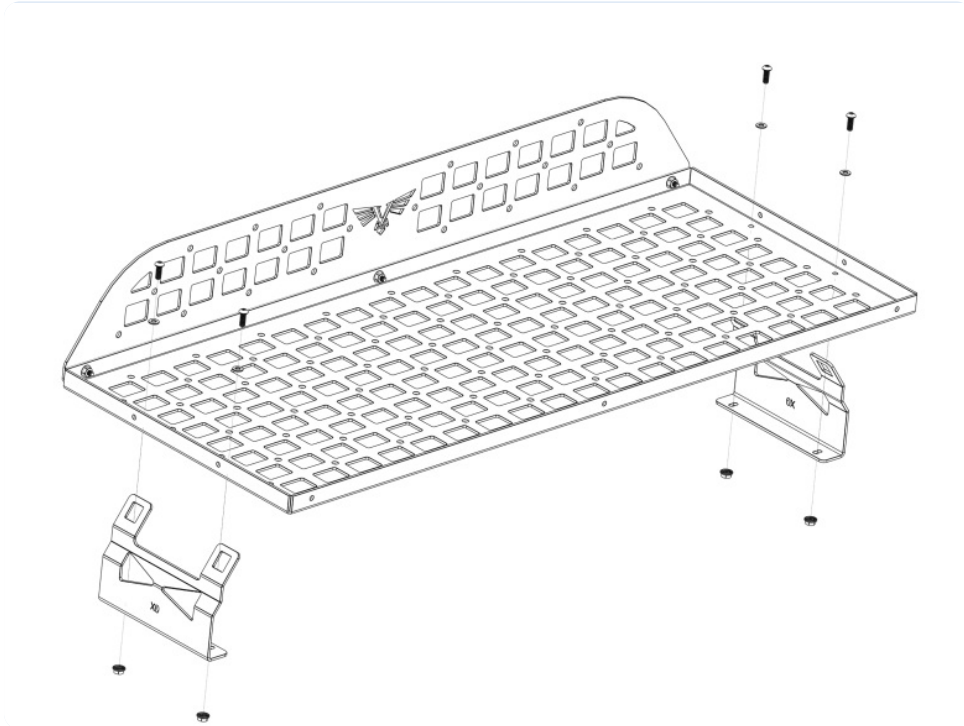

- Finally, set the basket on the lip of the two mounts and attach them together using two 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts per side.

**Step 5** Final Check

Double Check to make sure everything is fully tightened.

Install Complete, Enjoy!