
INST: VTUCC-22


Feedback?

1

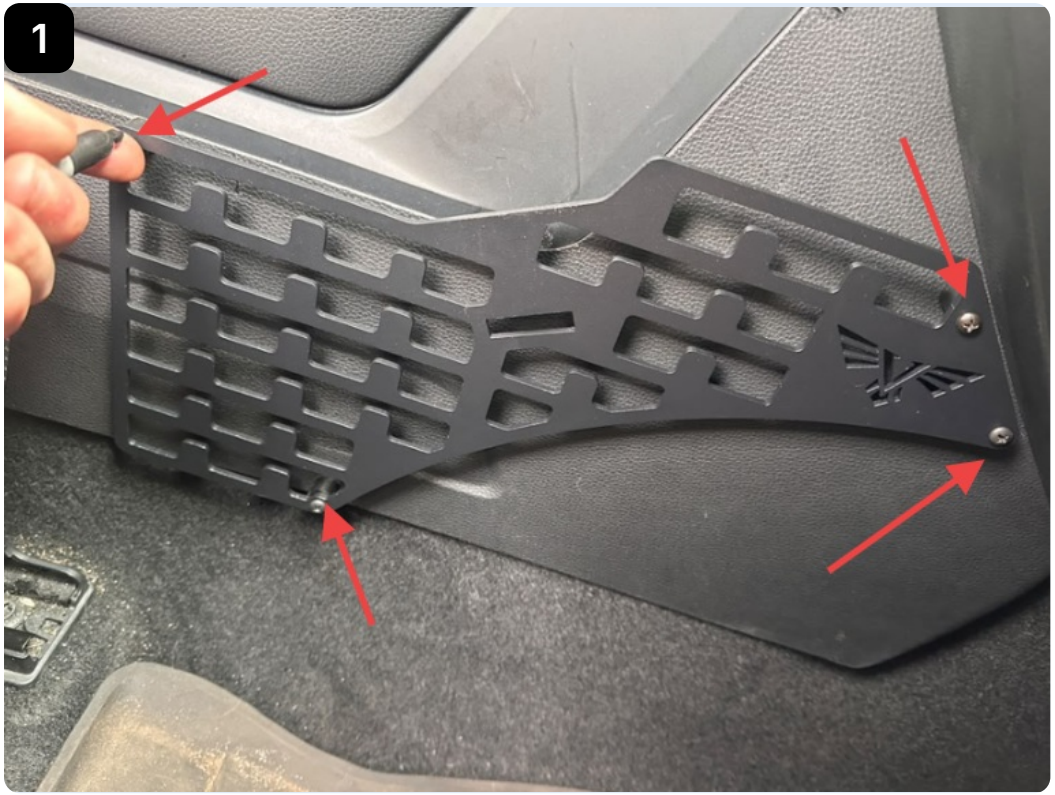


Move your seat all the way back to make as much room as possible before installing the panel. Line up the panel so its flush with the center console. Mark the screw holes with a pick or a sharpie.

2

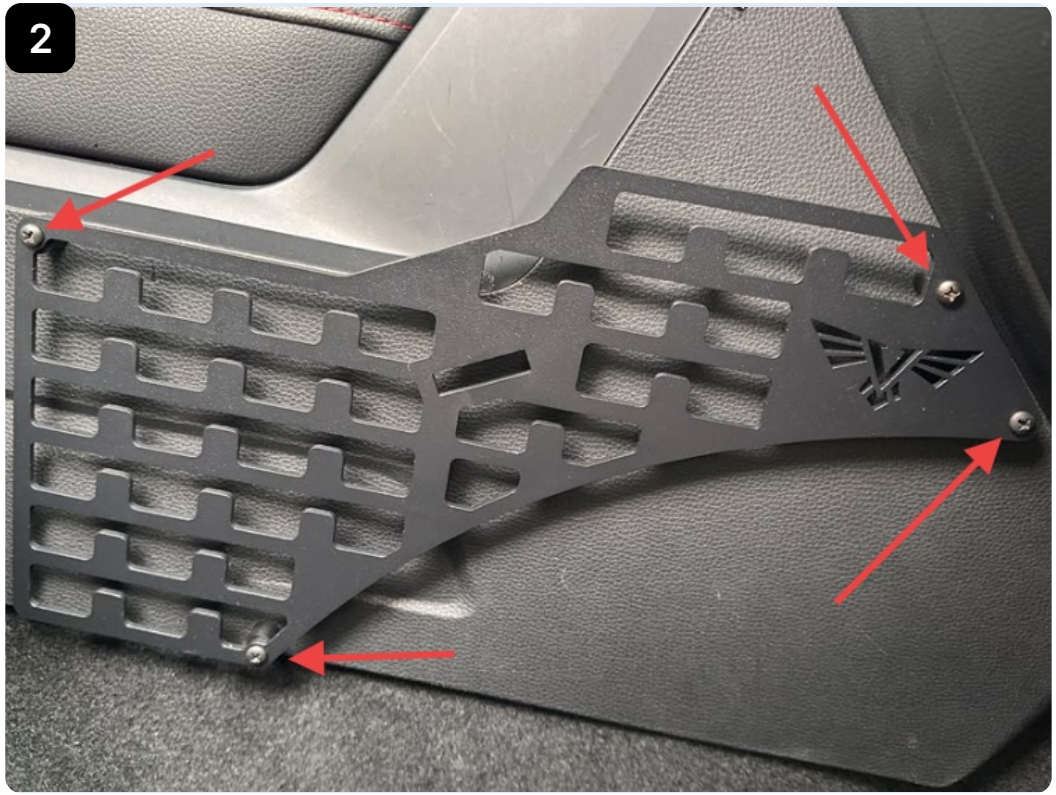


Use a drill bit or a pick to puncture a hole into the plastic but make sure the pick is smaller than the screw or use a 1/8″ drill bit. Be sure you only drill deep enough to get the screws started.

3

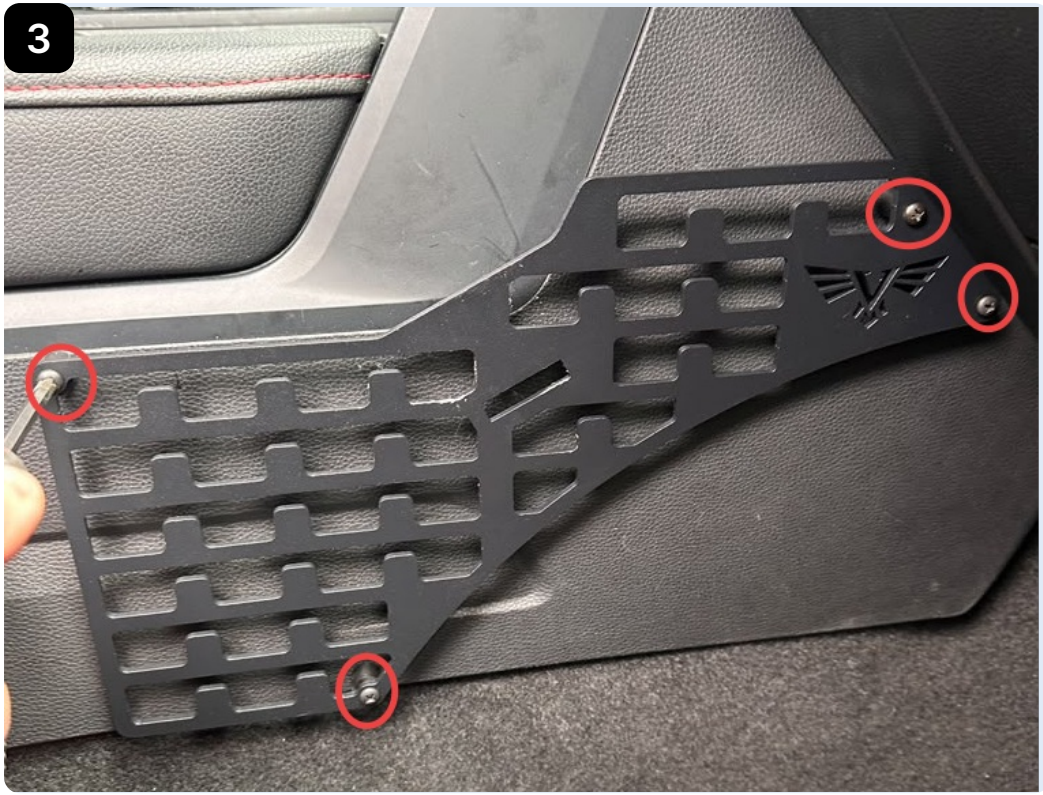

Install the panel using a Phillips screwdriver. Use 1 screw and 1 spacer per hole. The Panel will use 4 screws and spacers, with the spacers going on the back side of the molle panel.

4

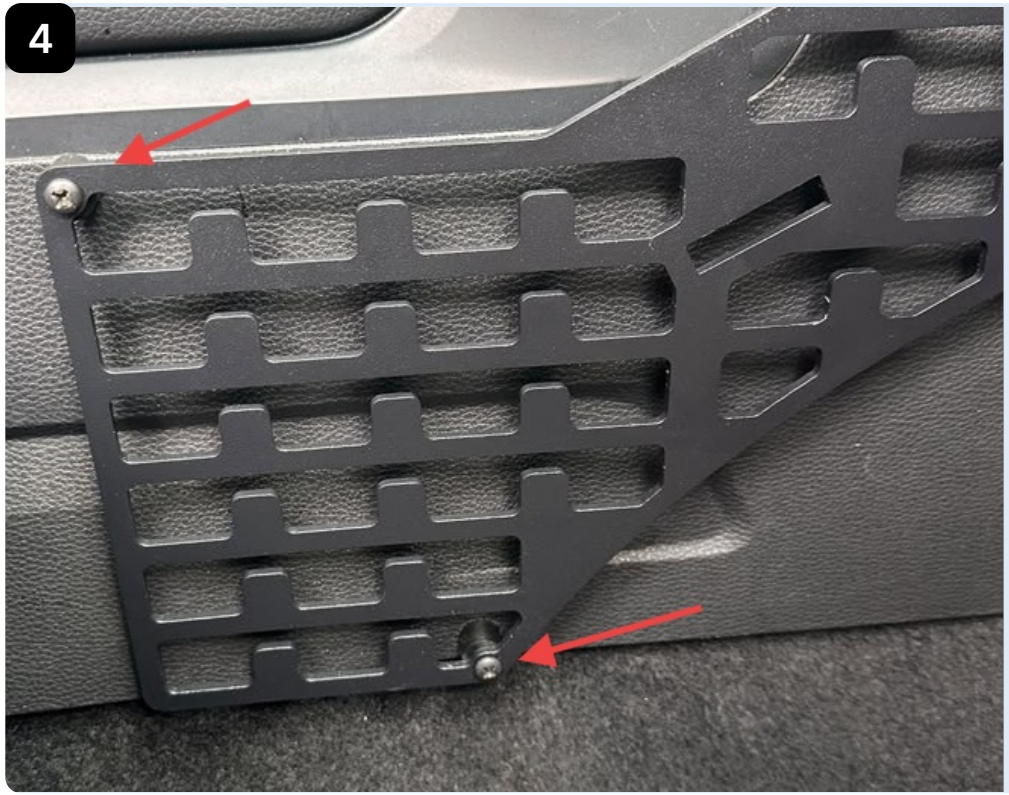


The Back two screws seen by the two red arrows, will use the smaller spacers

5



The front two screws seen by the red arrows will use the longer spacers.

6

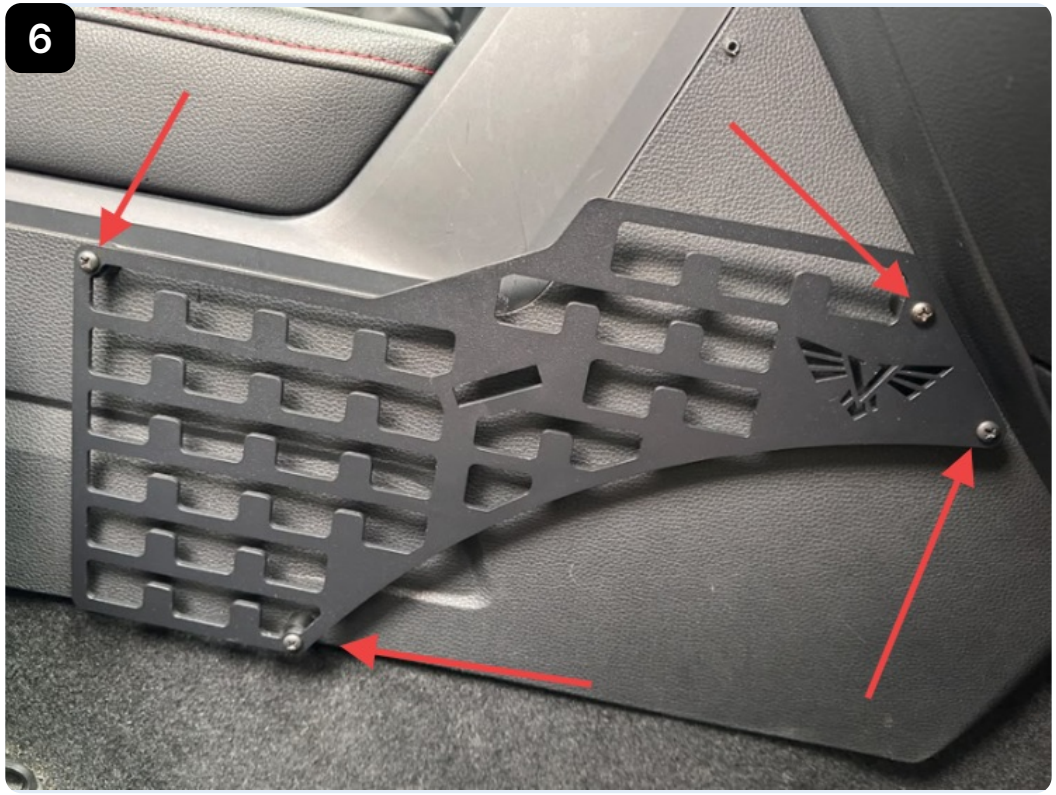

Do not over-tighten the screws but make sure they are snug. When you have completed 1 side, repeat the same steps on the other side. Look at the pictures Above to make sure your panel is installed just like ours.

7

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184