

INST: VRKF3-DBL

Feedback?

1

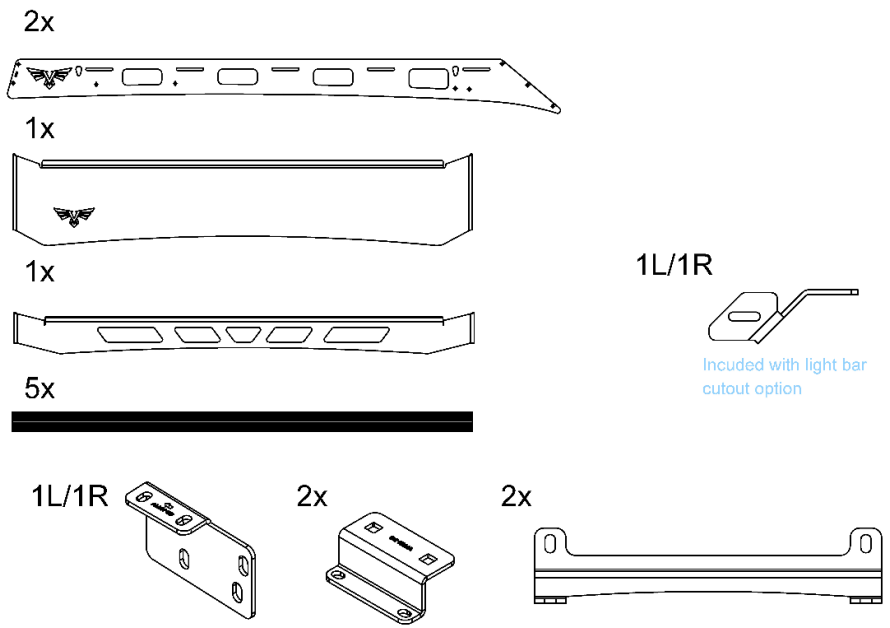


2

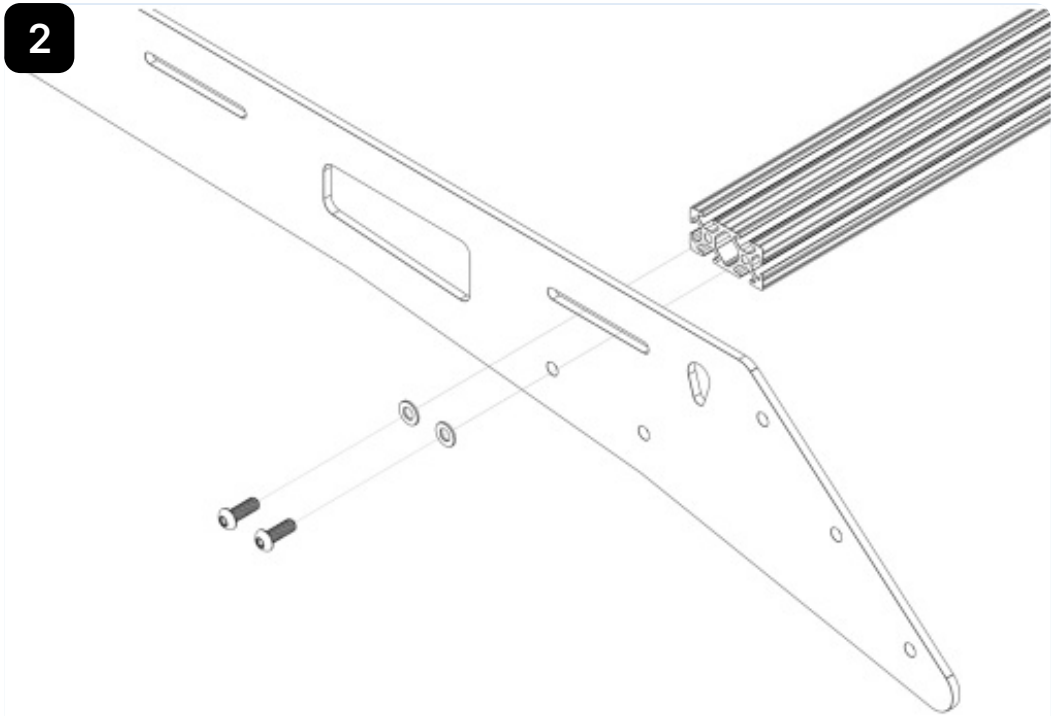

Included Parts:


Assemble the rack on the ground. Start by mounting the crossbars between the two side rails. For this, use the1/4”-20 X 3/4” button head bolts and the 1/4” ID washers (two per bar per side). Make sure the machined slot in the rail of the crossbar is facing up, so that you can easily add t-nuts to mount your gear.

3

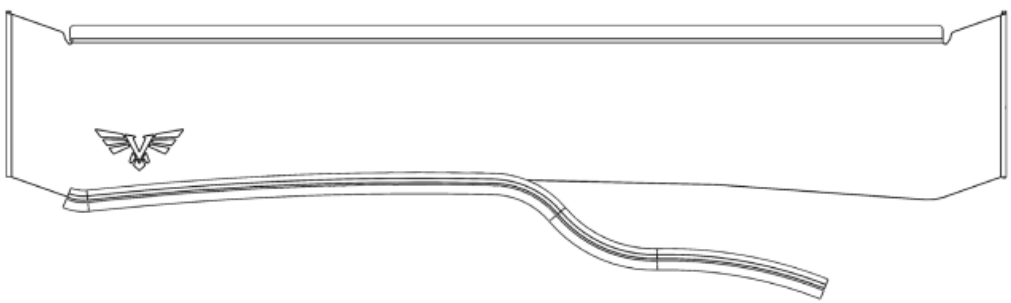

Next, mount the strip of trim to the bottom edge of the front fairing. Start just to the outside of the peak of the bottom edge and continue until it reaches the equivalent point on the other side of the fairing. Cut off any extra. Then, cut the extra in half and mount the two pieces onto the bottom edge of the rear fairing wherever it contacts the roof of the vehicle.


4

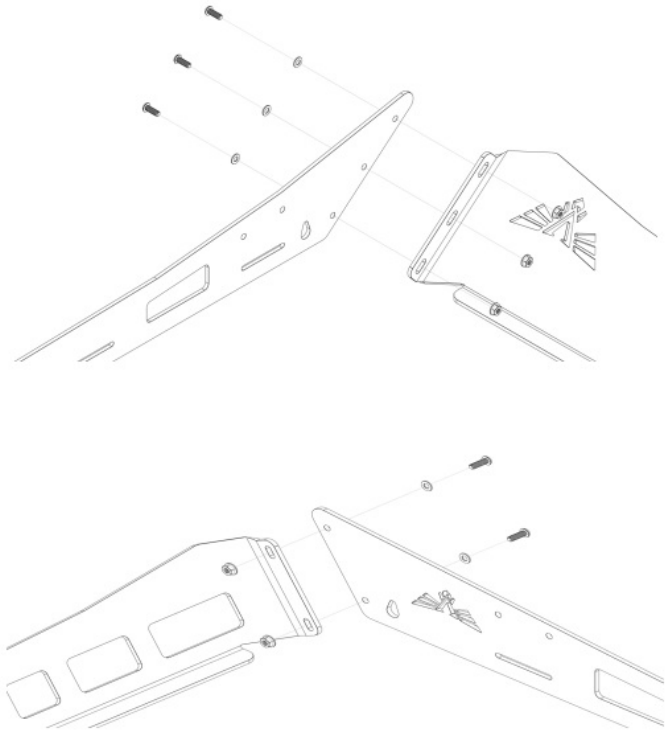

Mount the front and rear fairings. Use the1/4″-20 X 3/4″ button head bolts, 1/4″ ID washers, and 1/4″-20 serrated flange nuts. The front fairing needs three of each per side and the rear fairing needs two. When mounting the front fairing, adjust it all the way up to avoid contact with the roof and leave the bolts loose enough to be able to make adjustments once it is on the roof of the vehicle.

5 With the rack assembled, check out the install video for instructions on installing it onto the vehicle.

6

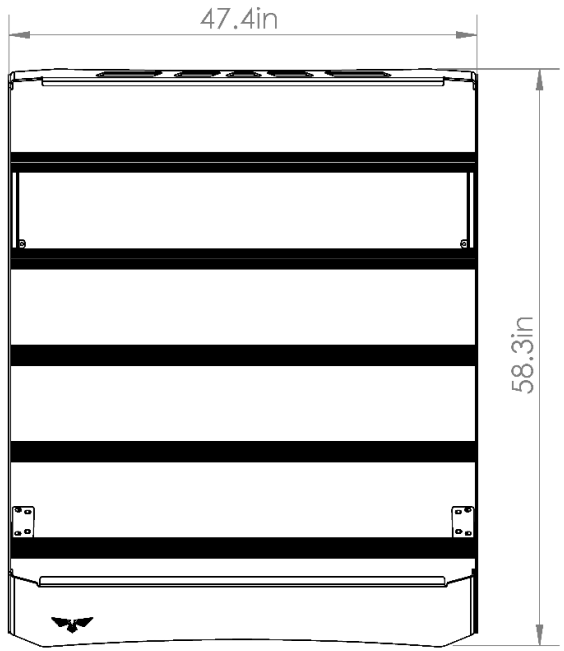

Dimensions:

7

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184