


250 Series Land Cruiser Transmission Skid Install

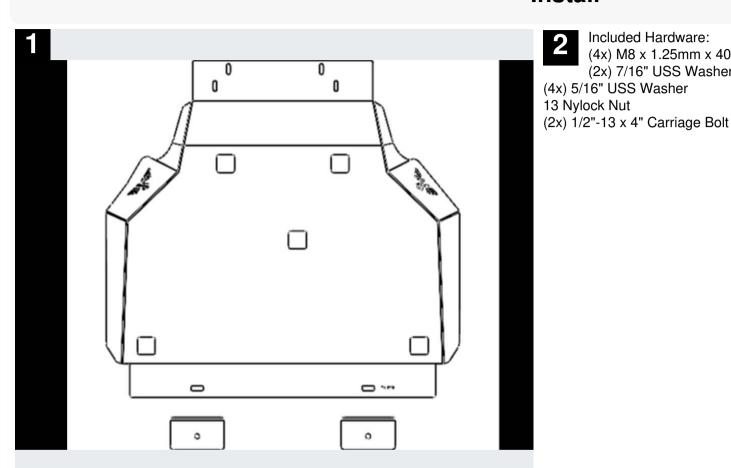



Included Hardware: (4x) M8 x 1.25mm x 40 mm Hex Head Bolt (2x) 7/16" USS Washer (4x) 5/16" USS Washer

(2x) 1/2"-

Included parts:

(1x) Transmission skid (2x) Spacer (2x) Square Washer

Process Ref. No: 735

Revision: 1.000 Revision date: 25/09/2024

Date: 25/09/2024

Page 1 of 4


CYCLE TIME: N/A Author: Colin G



250 Series Land Cruiser Transmission Skid Install





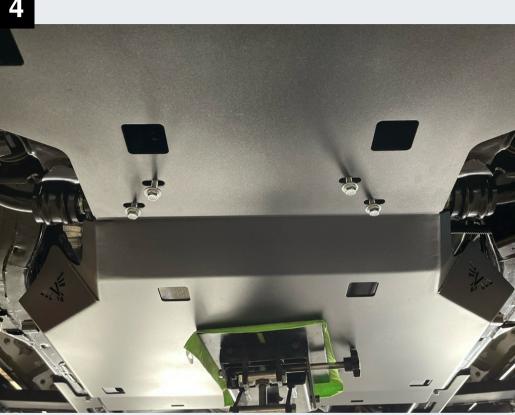

Begin by removing the plastic cover from the cross member. The points indicated in the image must all be pushed in to remove the cover.

Lift the skid up into place and loosely install the M8 bolts and 5/16" washers in the front of the skid. If installing our engine skid, slip it between the engine skid and the frame.

Process Ref. No: 735

Revision: 1.000 Revision date: 25/09/2024

Date: 25/09/2024


Page 2 of 4





250 Series Land Cruiser Transmission Skid Install



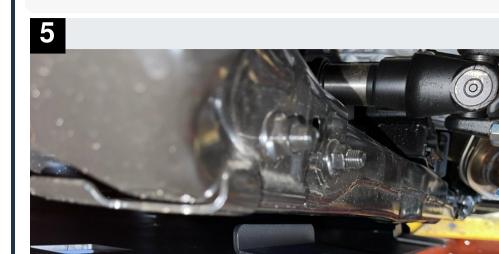



To secure the back side of the skid, place the spacers on top of the skid with the flange towards the front.

Insert the 1/2" carriage bolt up through the skid and frame from the bottom. On the top side of the cross member, stack the provided square washer, 7/16" washer and nylock nut in that order.

Process Ref. No: 735

Revision: 1.000 Revision date: 25/09/2024

Date: 25/09/2024

Page 3 of 4



250 Series Land Cruiser Transmission Skid Install





Finally, tighten all hardware to finish the install.

8

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com info@victory4x4.com info@squatch-proof.com info@fatamericanmfg.com

269-353-1184









Process Ref. No: 735

Revision: 1.000 Revision date: 25/09/2024

Date: 25/09/2024

Page 4 of 4

CYCLE TIME: N/A

Author: Colin G