



# 250 Series Land Cruiser Transmission Skid Install

Feedback?



- 1** Included parts:  
(1x) Transmission skid  
(2x) Spacer  
(2x) Square Washer

- 2** Included Hardware:  
(4x) M8 x 1.25mm x 40 mm Hex Head Bolt  
(2x) 7/16" USS Washer  
(4x) 5/16" USS Washer  
13 Nylock Nut  
(2x) 1/2"-13 x 4" Carriage Bolt

(2x) 1/2"-




## 250 Series Land Cruiser Transmission Skid Install

Feedback?




3

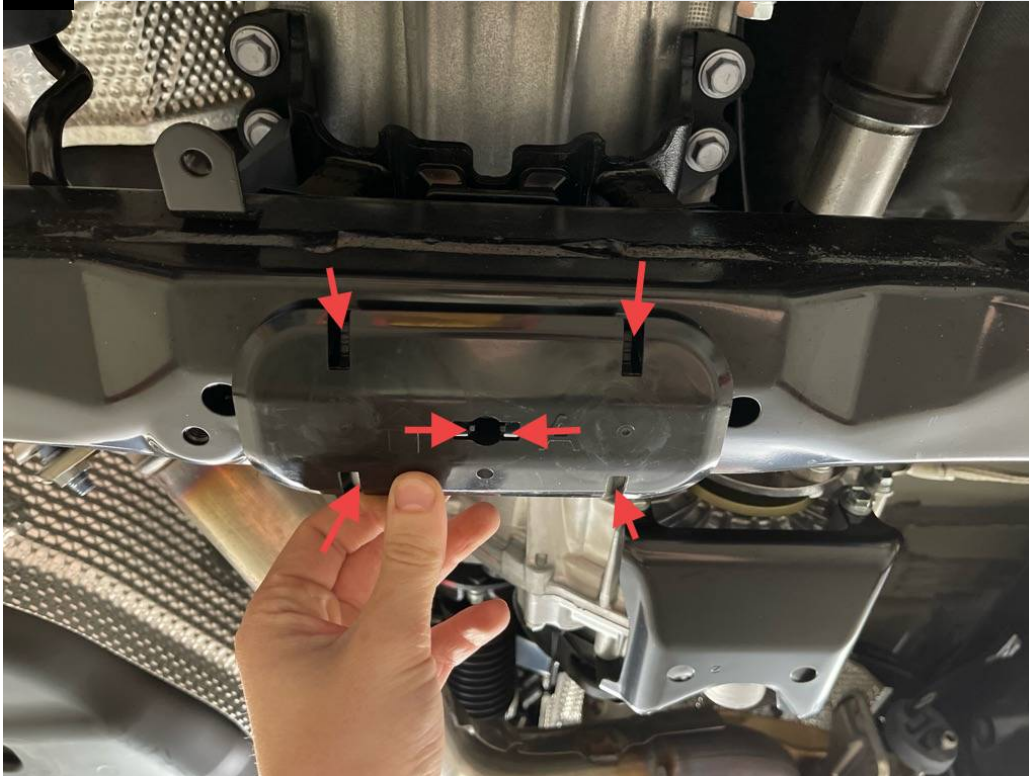

Begin by removing the plastic cover from the cross member. The points indicated in the image must all be pushed in in order to remove the cover.

4

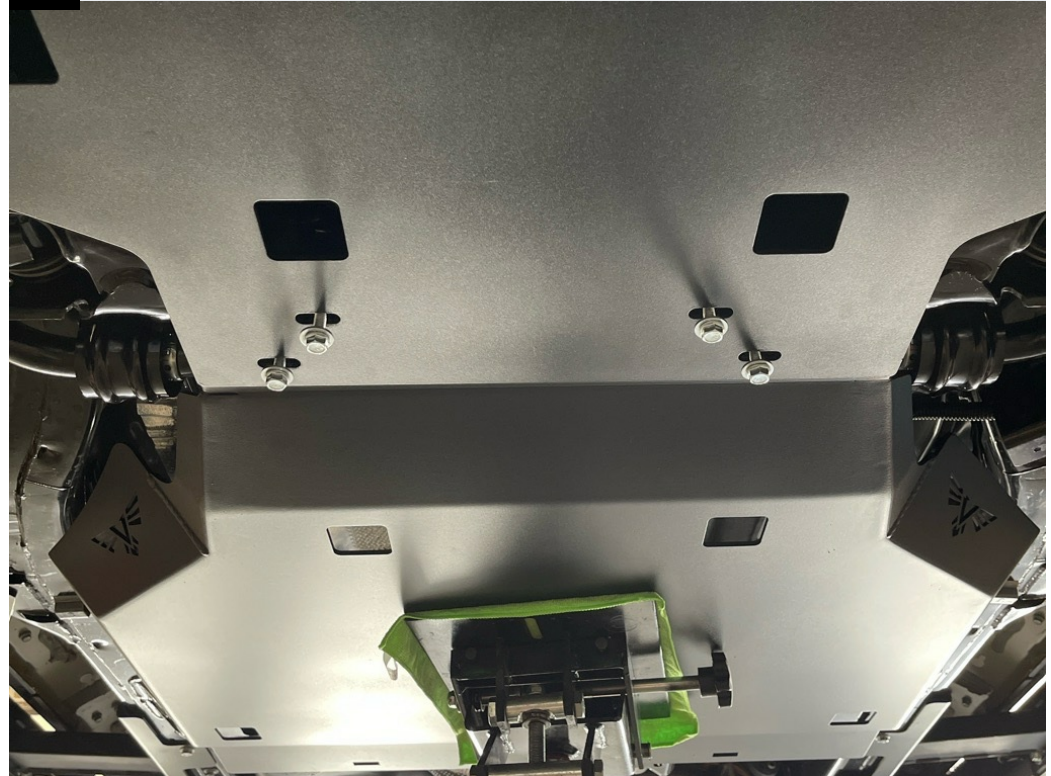

Lift the skid up into place and loosely install the M8 bolts and 5/16" washers in the front of the skid. If installing so the out engine skid, slip it between the engine skid and the frame.



## 250 Series Land Cruiser Transmission Skid Install

Feedback?



5



Place the spacers on top of the skid with the flange towards the front.

6



Insert the 1/2" carriage bolt up through the skid and frame from the bottom. On the top side of the cross member, stack the provided square washer, 7/16" washer and nylock nut in that order.





# 250 Series Land Cruiser Transmission Skid Install

Feedback?



**7** Finally, tighten all hardware to finish the install.

**8**

**Thank you for supporting  
American-made. We hope you  
enjoy your new product!**

If you have any questions or concerns  
please reach out to us.

[info@jcroffroad.com](mailto:info@jcroffroad.com)  
[info@victory4x4.com](mailto:info@victory4x4.com)  
[info@squatch-proof.com](mailto:info@squatch-proof.com)  
[info@fatamericanmfg.com](mailto:info@fatamericanmfg.com)

269-353-1184



**SQUATCH  
PROOF**

