
INST: VCCC-3G-EDC

Feedback?

1

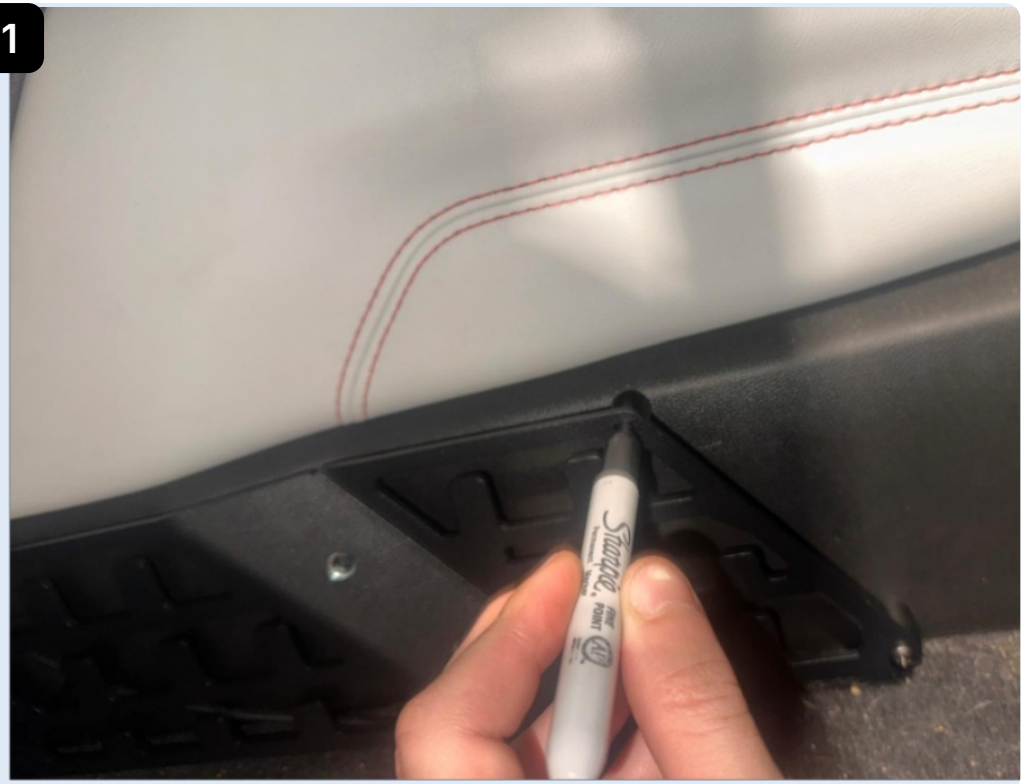

Move your seat all the way back to make as much room as possible before installing the panel. Line up the panel so its flush with the center console. Mark the screw holes with a pick or a sharpie.

2



Use a drill bit or a pick to puncture a hole into the plastic but make sure the pick is smaller than the screw or use a 1/8″ drill bit. Be sure you only drill deep enough to get the screws started.


INST: VCCC-3G-EDC

3



Install the panel using a Phillips screwdriver. Use 1 screw and 1 spacer per hole. The Panel will use 4 screws and spacers, with the spacers going on the back side of the molle panel. The two bigger spacers will go to the rear two most holes, and the smaller spacers are for the front two wholes seen here.

4

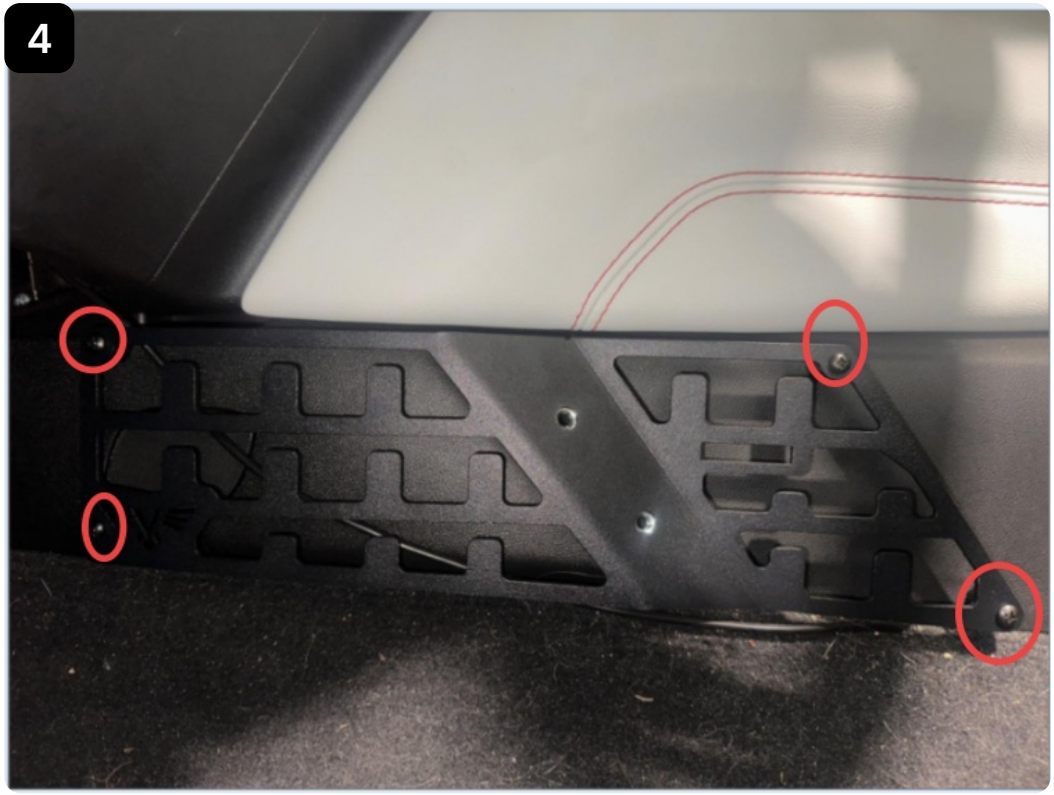

Do not over-tighten the screws but make sure they are snug. When you have completed 1 side, repeat the same steps on the other side. Look at the pictures Above to make sure your panel is installed just like ours.

5

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184

VICTORY 4X4

SQUATCH PROOF

FAT AMERICAN MFG.