




1

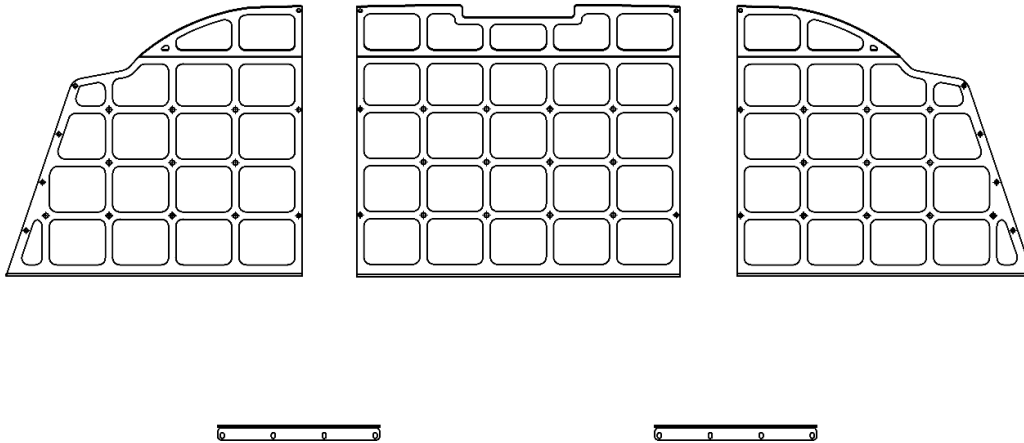


Included Parts: (1x) Center Panel | (L&R) Side Panel | (2x) Mounting Bracket

2

Included Hardware: (24x) 1/4"-20 x 1/2" Button Head Bolt | (24x) 1/4"-20 Serr. Flange Nut | (24x) 1/4" washers




3

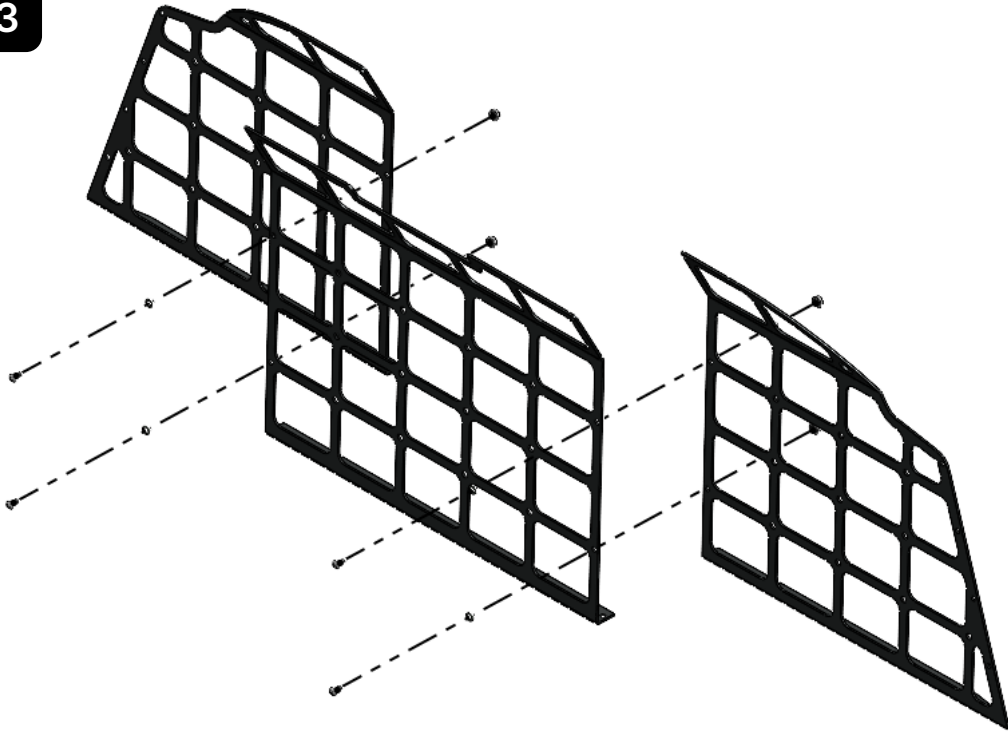

Begin by loosely connecting the three panels together as shown using the 1/4" hardware in the center of the panels


4

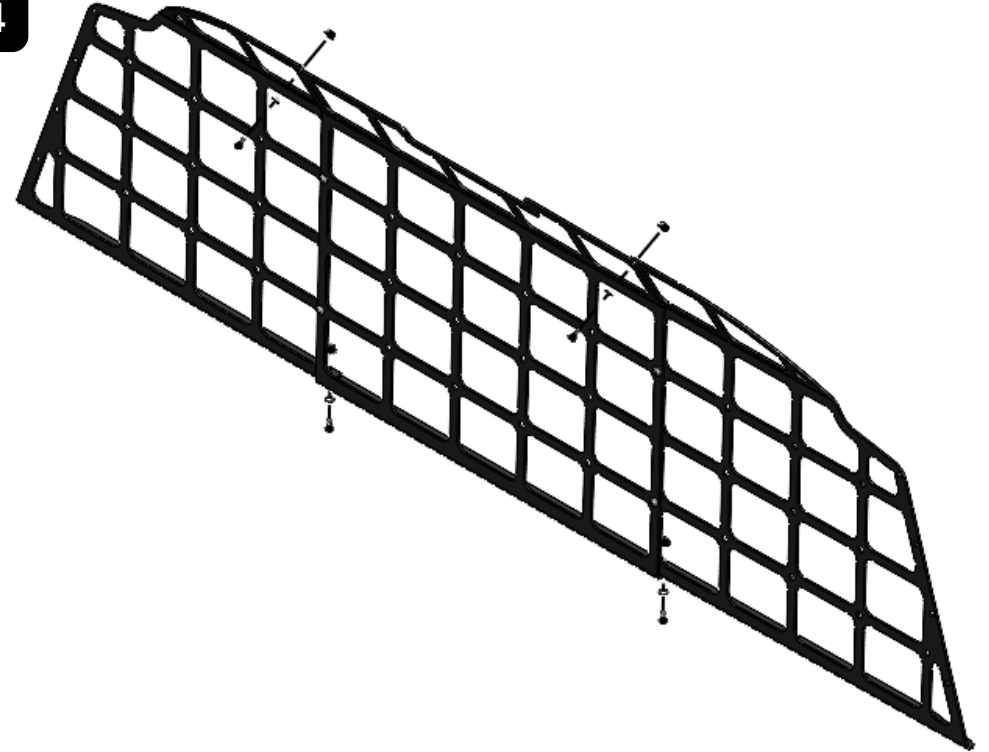

Install the 1/4" hardware into the top and bottom holes of the panels as show. With all hardware loosely in place, tighten the panels together completely.




5

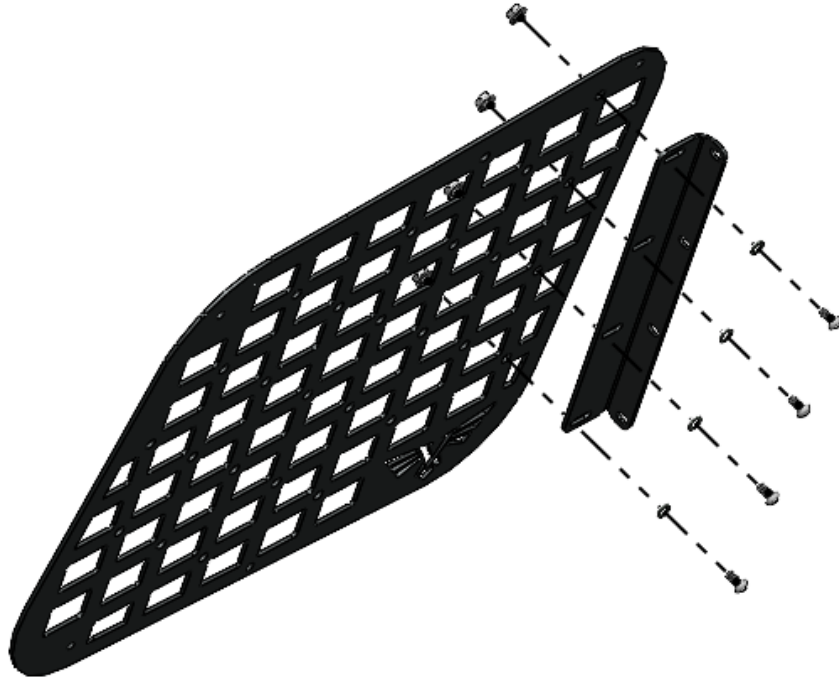

Inside the vehicle, mount the brackets to the molle panels as shown, again using the 1/4" hardware. Tighten the bolts most of the way to hold it in place but keep in mind the bracket may need to be adjusted later. Repeat on the other side.


6

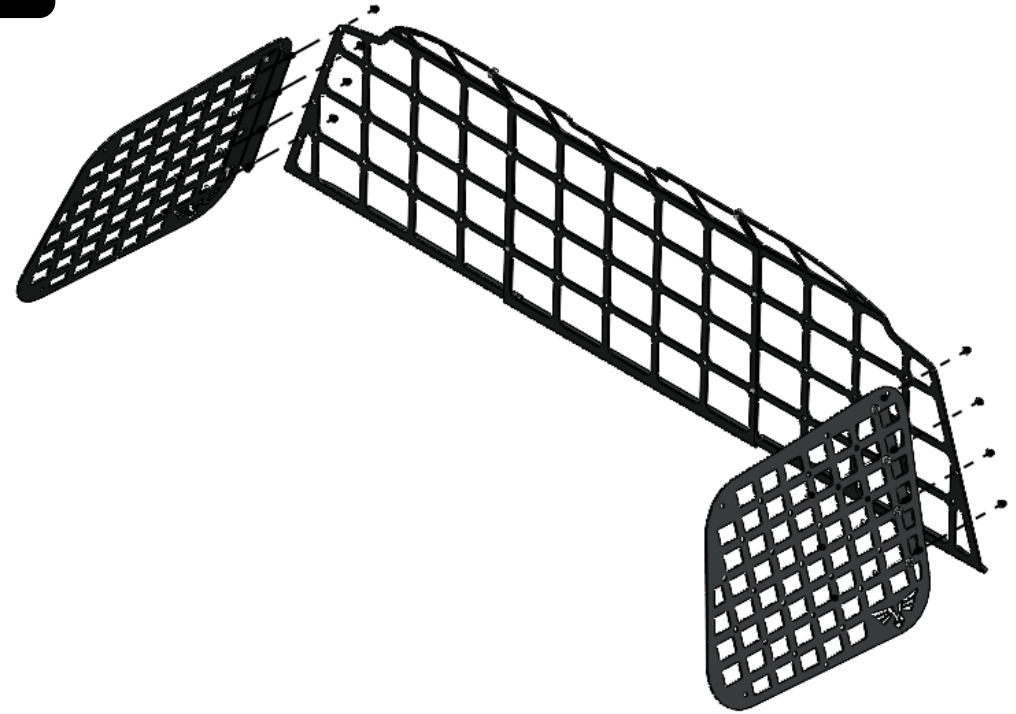

Loosely mount the pet divider to the brackets as shown, again using the 1/4" hardware.



7

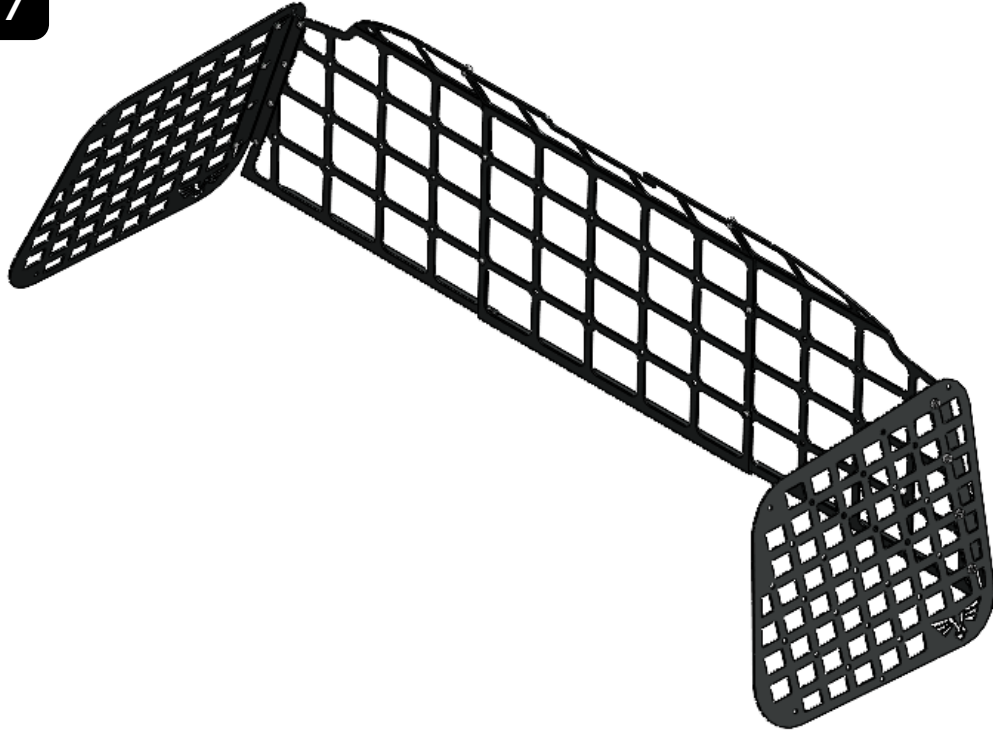

With the pet divider loosely installed, adjust the fitment as necessary and then tighten all hardware into fully. With that, the install is complete.

8

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184



**SQUATCH
PROOF**

**FAT
AMERICAN MFG.**