Step 1 Bronco Upper Shelf Install Instructions






Step by step on how to install the Ford Bronco (2021+) Upper Shelf.

Installation Video: https://www.youtube.com/watch?v=GZfaCfF26Pg

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware

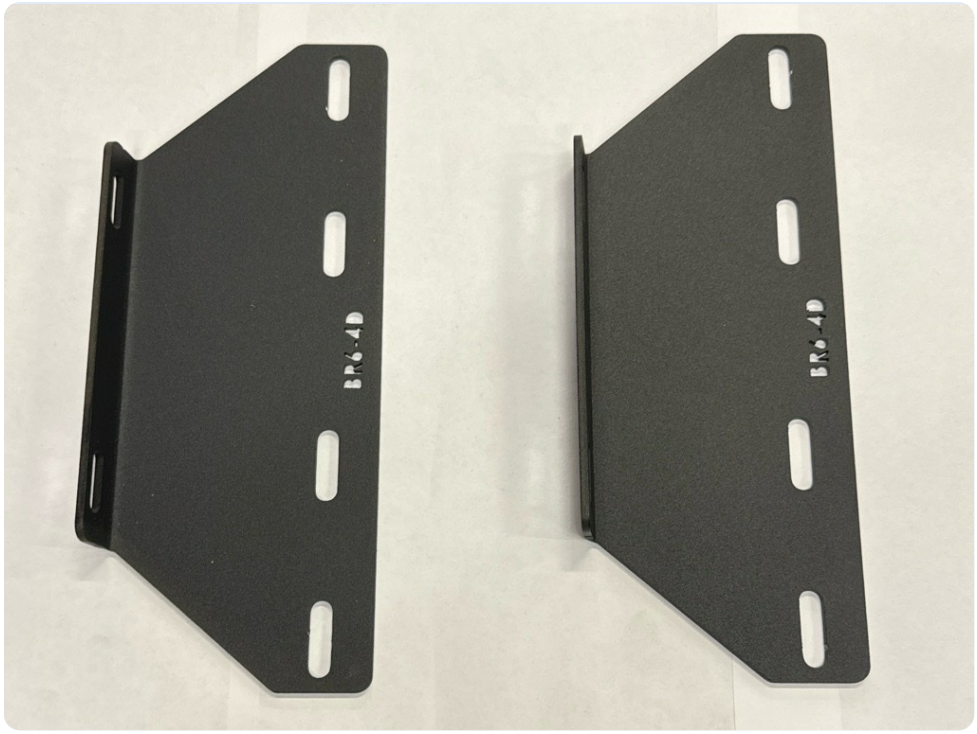



046-0103 BOLT PACK

VUPRS-BP • Bill of materials (per 1 bag)

PIECES / BAG 66


BIN	QTY	PART #	DESCRIPTION
1	14	040-0025	1/4-20 SERR FLANGE LOCKNUT GR5 ZNC
2	14	040-0051	1/4-20 x 1/2 BUTTON HD SOC CAP 18-8 SS BLK
3	4	040-0137	M6-1.0 x 25 BUTTON HD SOC CAP 18-8 SS
4	18	040-0147	1/4 MIL-SPEC FLAT WASHER 18-8 SS BLK
5	4	040-0148	1/4-20 x 3/4 BUTTON HD SOC CAP 18-8 SS BLK
6	4	040-0188	M6-1.0 x 35 SOC HD CAP SCREW 18-8 SS
7	4	040-0203	#12 SNAP-IN NYLON NUT
8	4	040-0135	1/4 MIL-SPEC FLAT WASHER 18-8 SS

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description


Check that you have all of the parts and hardware shown before starting.
Hardware pack: 046-0103 (every bolt, nut and washer is listed in the bill of materials picture).

Step 3 Install the Mounting Brackets

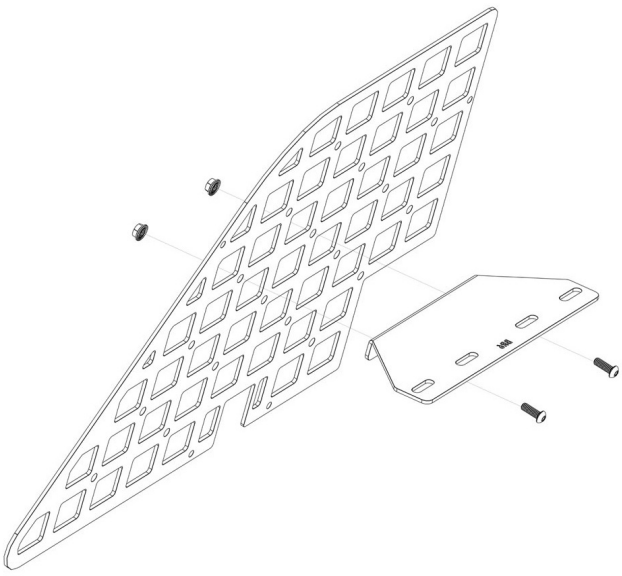

Loosely install the mounts onto the Rear Window MOLLE Panels. Line the bracket holes with the third set of MOLLE holes down, insert (2) 1/4-20 button heads, and hand tighten 1/4-20 flange nuts from the back of the window MOLLE on both sides.

Step 4 Install the Upper Shelf

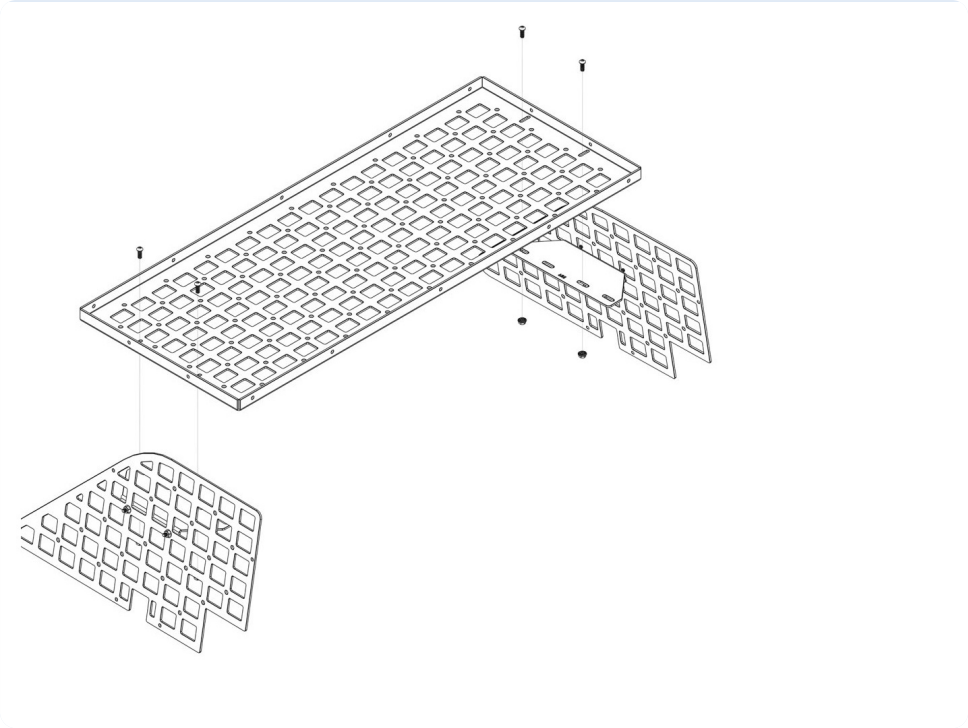



Place the Upper Shelf on the brackets and loosely bolt it with (2) 1/4-20 x 3/4 inch button heads and serrated flange nuts per side. Adjust the basket position, then tighten everything.

Step 5 Final Check



That’s it! Make sure all of your bolts are tight and enjoy your new Upper Shelf! Be sure to check out jcroffroad.com for even more Ford Bronco products.

Step 6 Installation Complete



Congratulations, you have completed the install of your new Bronco Upper Shelf! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com