Step 1 ARB Compressor Mount Install Instructions





Step by step on how to install the Ford Bronco (2021+) ARB Air Compressor Mount (under hood, passenger side). Please read all steps carefully before starting the install. Tools needed: Phillips screwdriver, panel pry tool, 10mm wrench, 8mm socket, hammer, 5/32" hex and 3/16" hex.

Installation Video: https://www.youtube.com/watch?v=jNwwPmQQTjM

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware

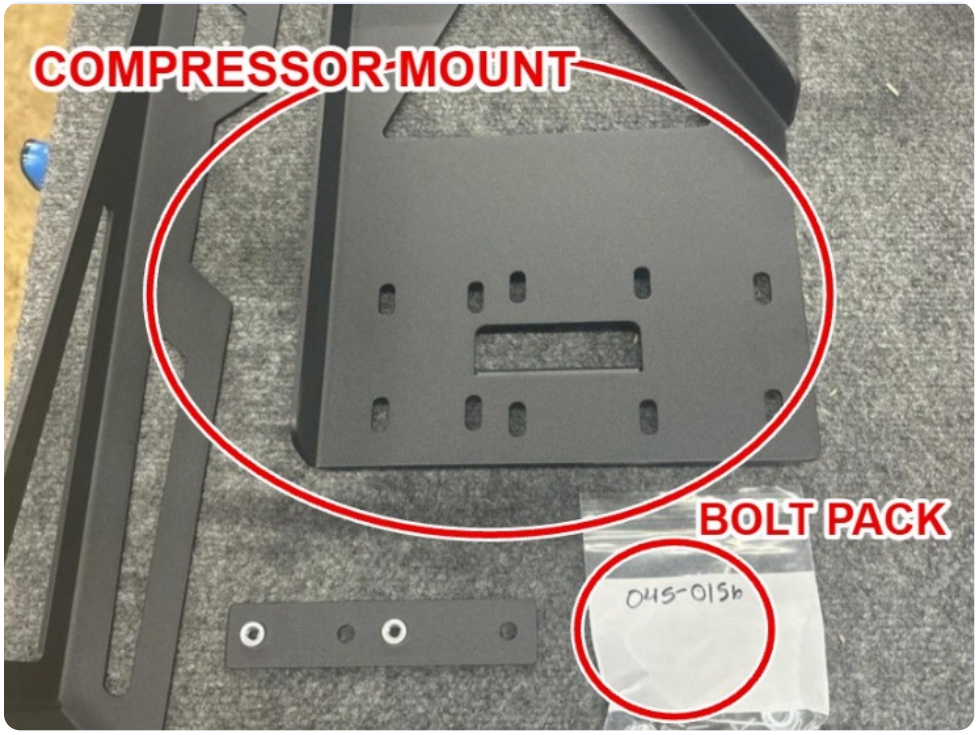

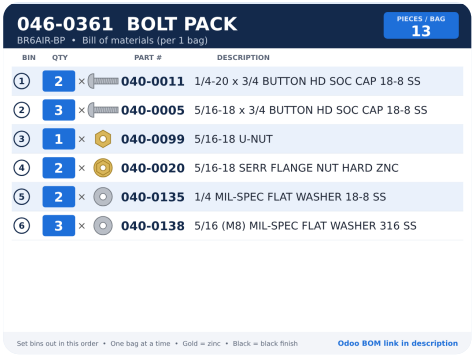

Check that you have all of the parts and hardware shown before starting. Hardware pack: 046-0361 (every bolt, nut and washer is listed in the bill of materials picture).

Step 3 Remove the Fender Liner Clips





Turn the wheel fully left. Remove the (8) fender liner clips with a Phillips, then peel the inner fender back far enough to reach into the engine bay.

Video timestamp: 0:15

Step 4 Remove the Fender Support Bracket



Reach up through the wheel well with a 10mm wrench and remove the head nut on the firewall holding the fender support bracket. Remove the clip holding that bracket and take it out.

Video timestamp: 1:26

Step 5 Install the Nut Plate





Slide out the stud from the 10mm nut toward the passenger side. Place the nut plate behind where the stud and bracket were, flat side toward the front and nuts toward the rear, inserting the nut end first.

Video timestamp: 2:45

Step 6 Install the Support Bracket





Feed the support bracket down from the top of the engine bay with the long slot facing down. Line it up with the nut plate, start the inner bolt, clip the inner fender support bracket over ours, and tighten both 1/4 inch button heads.

Video timestamp: 3:18

Step 7 Install the Clip Nut (Optional)



Optional step: if your Bronco has the body holes, insert the 5/16 inch clip nut through the square cutout so the threaded side lines up with the circle cutout.

Video timestamp: 4:43

Step 8 Remove the Computer Mount





Use an 8mm socket to remove the (3) factory bolts in a vertical line holding the computer mount. Slide the bracket up and out, then tap the tab on its backside flat with a hammer.

Video timestamp: 5:10

Step 9 Reinstall the Computer Mount





Feed the computer mount up through the cutout in the compressor mount bracket. Line up the bottom (2) holes, reinstall the factory 8mm bolts, and reconnect the top ground.

Video timestamp: 6:04

Step 10 Secure the Compressor Bracket





Optional: if you installed the clip nut, put a 5/16 inch button head through the slot on the back flange. Then secure the support bracket to the compressor mount bracket with (2) 5/16 inch button heads and flange nuts.

Video timestamp: 6:53

Step 11 Tighten and Mount Compressors





Check that all hardware is tight, using a 5/32 inch hex for the 1/4 inch bolts and a 3/16 inch hex for the 5/16 inch bolts. Fold the inner fender back and replace the (8) factory clips, then mount your ARB compressors. To mount a single compressor use the 4 wider holes in the center; for a dual compressor use the 6 narrower slots.

Video timestamp: 7:28

Step 12 Final Check



That’s it! Make sure all of your bolts are tight and enjoy your new ARB Air Compressor Mount! Be sure to check out jcroffroad.com for even more Ford Bronco products.

Video timestamp: 8:11

Step 13 Installation Complete



Congratulations, you have completed the install of your new ARB Compressor Mount! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com