Step 1 Gladiator Underseat Storage Basket Install






Step by step on how to install the Gladiator Underseat Storage Basket. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=C1WOYQR2FJc

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts

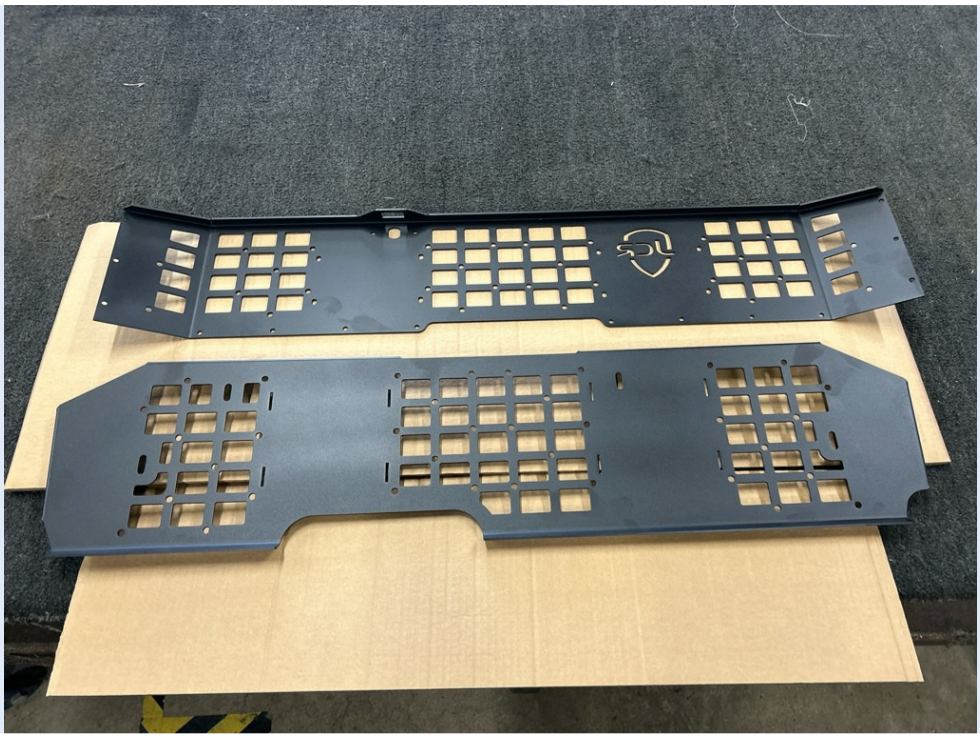

Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0091 BOLT PACK

VCBSK-BP • Bill of materials (per 1 bag)

PIECES / BAG 88


BIN	QTY	PART #	DESCRIPTION
1	29 ×	040-0051	1/4-20 x 1/2 BUTTON HD SOC CAP SS BLK
2	29 ×	040-0147	1/4 MIL-SPEC FLAT WASHER 18-8 SS BLK
3	29 ×	040-0025	1/4-20 SERR FLANGE LOCKNUT GR5 ZNC
4	1 ×	070-0052	18 IN U-CHANNEL EDGE TRIM BLK


Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting.

Step 4 Install Lock

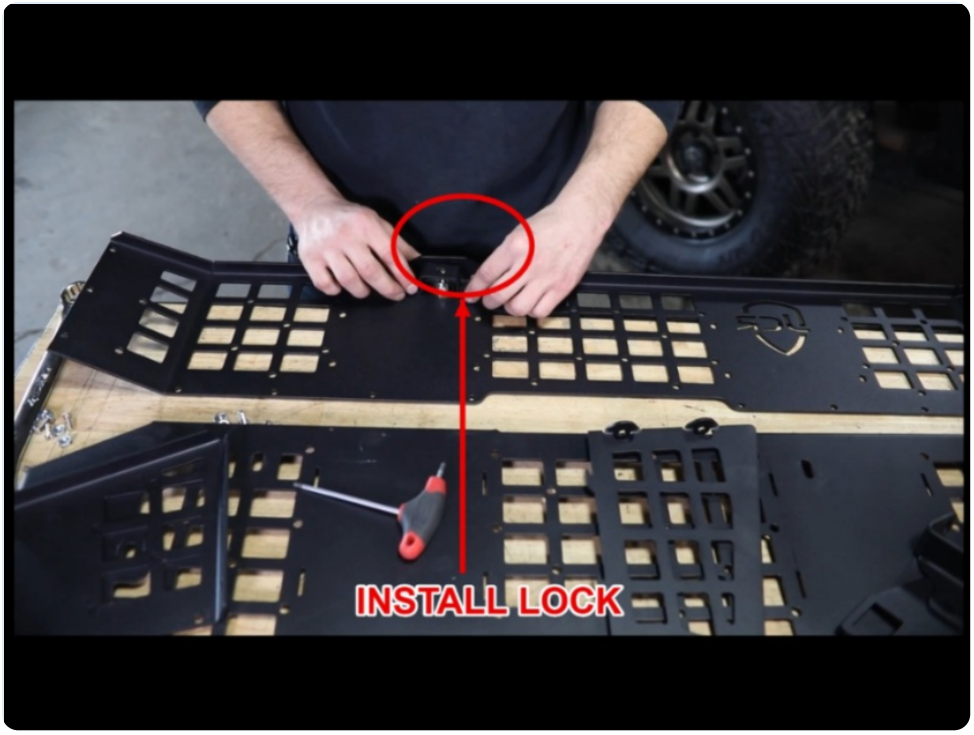

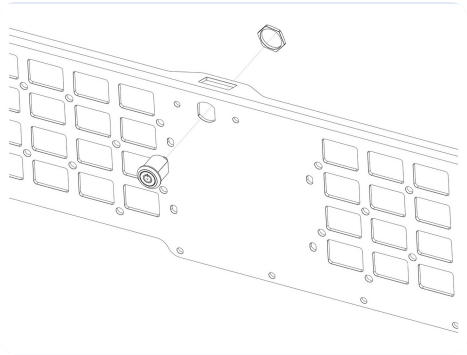


Attach the lock to the front panel of the basket. Insert it through the hole, right side up, and thread the nut onto the other side to secure it.

Video timestamp: 0:15

Step 5 Install Lock Bracket



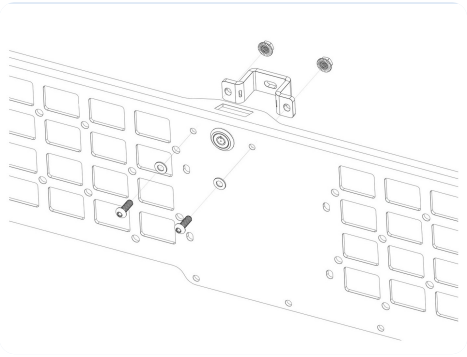


Attach the small bracket that goes behind the lock with two 1/4-20 x 3/4 in bolts, 1/4 in washers and 1/4-20 serrated flange nuts.

Video timestamp: 0:53

Step 6 Mount Side Panels



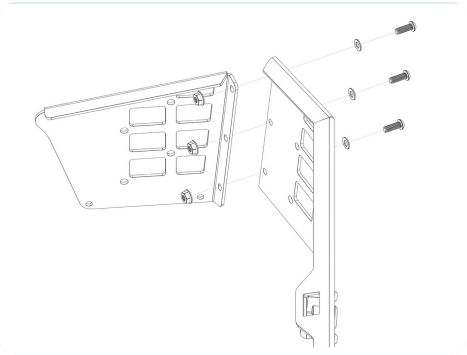


Mount both side panels to the sides of the front panel with three 1/4-20 x 3/4 in bolts, 1/4 in washers and serrated flange nuts per side. Leave the bolts a little loose to make attaching the bottom panel easier.

Video timestamp: 1:27

Step 7 Attach Bottom Panel



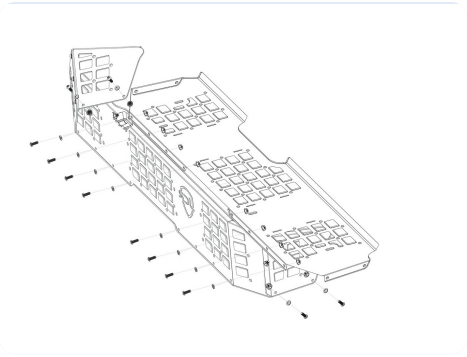


Attach the bottom panel with 1/4-20 x 3/4 in bolts, 1/4 in washers and serrated flange nuts. Once all bolts are started, go back and tighten them all, and tighten the side panels fully at the same time.

Video timestamp: 1:43

Step 8 Install Divider



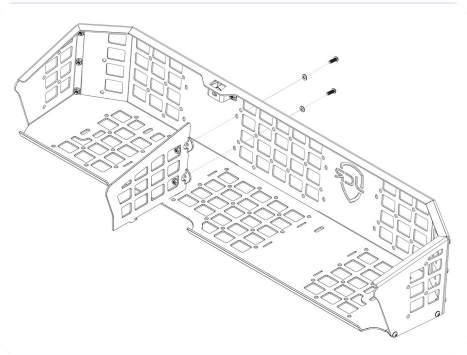


Decide whether to use the divider. It can go in any of the long thin slots on the bottom panel. Slip its bottom tabs into the slots, then attach it to the front panel with two 1/4-20 x 3/4 in bolts, 1/4 in washers and serrated flange nuts.

Video timestamp: 1:58

Step 9 Place Basket



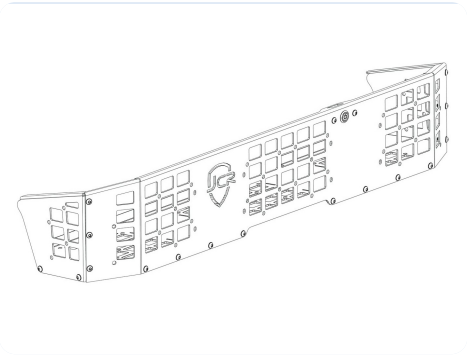


Place the basket in the Gladiator, lining the factory holes up with the mounting slots in the basket, and mount it with the factory hardware. Leave it a little loose to make mounting the latches easier.

Video timestamp: 8:28

Step 10 Mount Latch Brackets



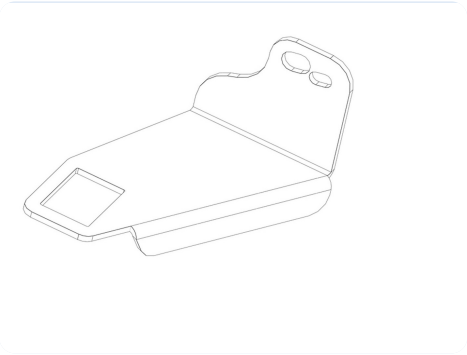

Mount the latch brackets to the bottom of the seats. The install video on the product page shows how.

Video timestamp: 8:59

Step 11 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Gladiator Underseat Storage Basket is now complete. Enjoy!