Step 1 Center Console MOLLE Panel Install Land Cruiser




Step by step on how to install a center console molle panel for the 100 Series Land Cruiser.

Installation Video: https://www.youtube.com/watch?v=pq8KSdl3oUg&t=2s

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Mounting - Marking Holes



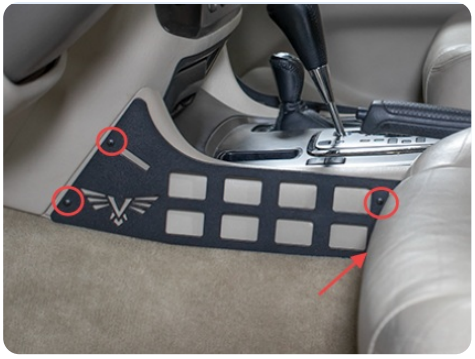

- Move your seat all the way back to make as much room as possible before installing the panel.

- Line up the panel so its flush with the center console. Mark the screw holes with a pick or a sharpie.

Step 3 Mounting - Drilling



- Use a drill bit or a pick to puncture a hole into the plastic but make sure the pick is smaller than the screw or use a 1/8″ drill bit. Be sure you only drill deep enough to get the screws started.

Step 4 Mounting - Installing the Panel





- Install the panel using a Phillips screwdriver. Use 1 screw and 1 spacer per hole.

Land Cruiser

- 8 screws (4 per side)
- 4 spacers (2 per side on the rear two holes)

Step 5 Final Check & Repeat!



- Do not over-tighten the screws but make sure they are snug. When you have completed 1 side, repeat the same steps on the other side.

- **Congrats! Your installation, is now complete. Enjoy!**