

**Step 1** Upper Shelf Install for 3rd Gen 4Runner

How to install the Upper Shelf on the 3rd Gen 4Runner.

Install Video: https://www.youtube.com/watch?v=s_P0f6LAq4Q (Reference)


Questions or Support:

Phone: 269-353-1184

Email: info@[victory4x4.com](mailto:info@victory4x4.com)




Step 2 Mounting the Brackets

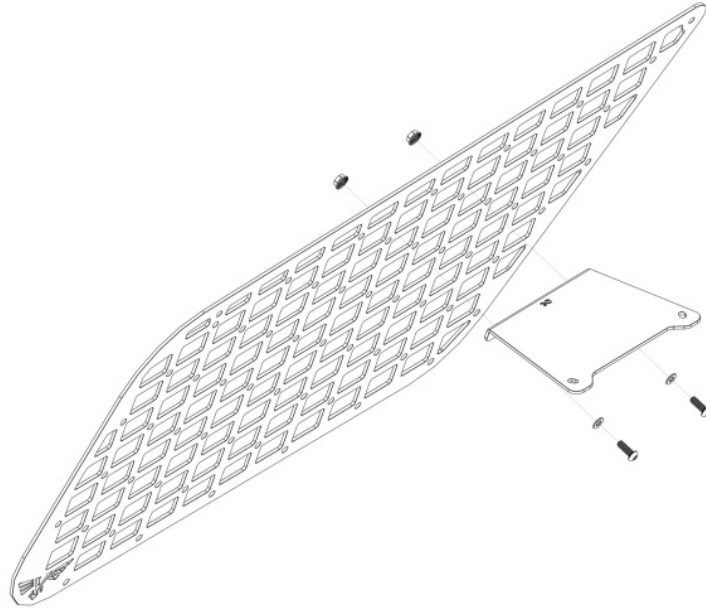


- Start by installing the mounts onto the Rear Window MOLLE Panels. Do this using two 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts per mount. Mount them to the second row of holes from the top of the panels, using the third and fourth holes from the front.

Step 3 Front Panel Attachment

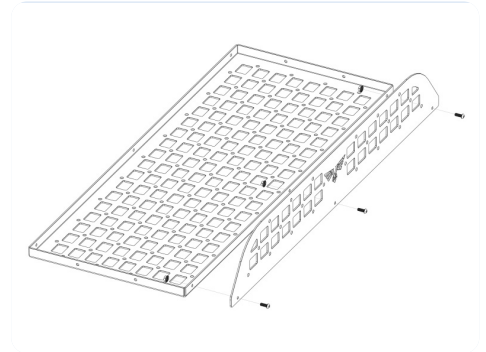

- Next, attach the front panel to the basket using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts.

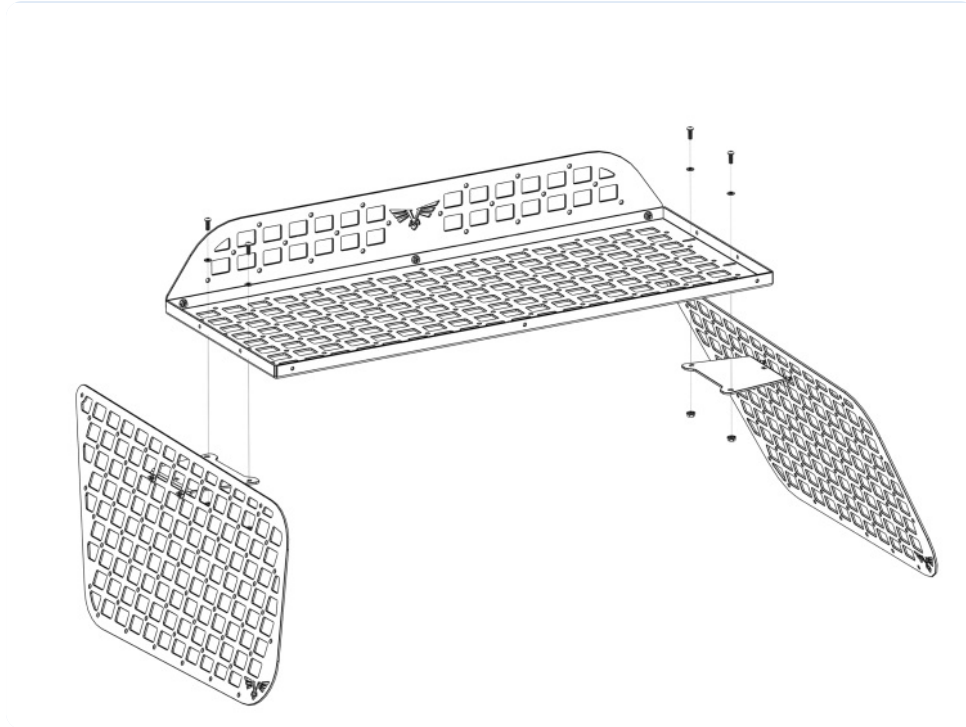**Step 4** Install the Basket

Finally, raise the basket up between the two mounts and attach them together using two 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts per side.

Step 5 Final Check

Double Check to make sure everything is fully tightened.

Install Complete, Enjoy!