Step 1 Bronco Console MOLLE Panel Install Instructions







Step by step on how to install the Ford Bronco (2021+) Center Console MOLLE Panels. Please read all steps carefully before starting the install. Tools needed: Phillips screwdriver, tape measure and a 1/8" drill bit or pick.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com


Step 2 Included Parts & Hardware

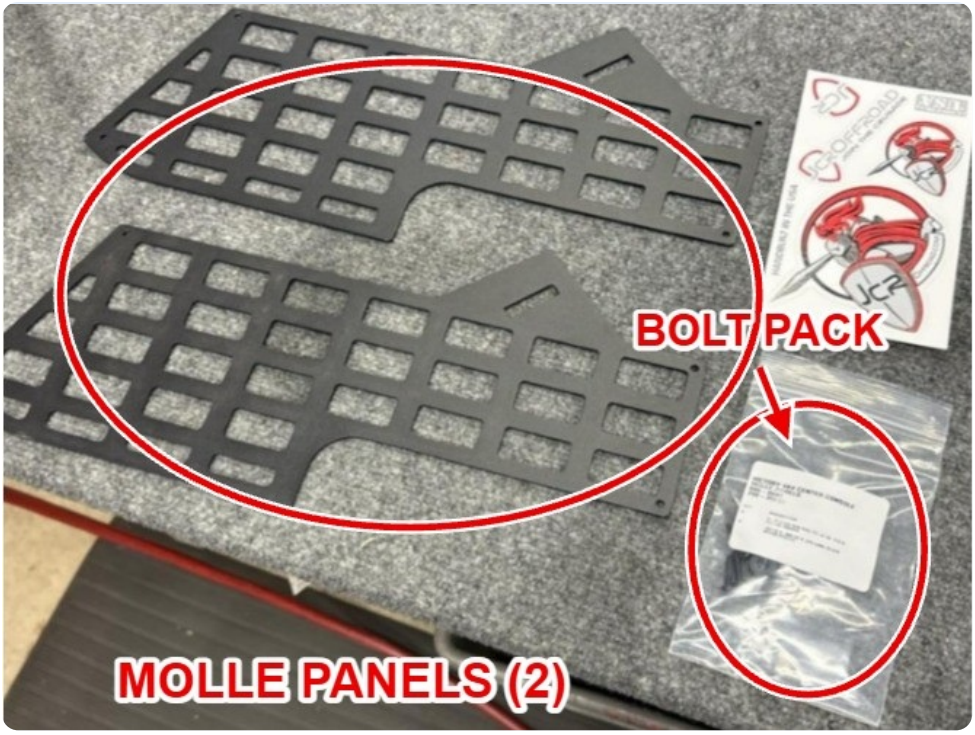

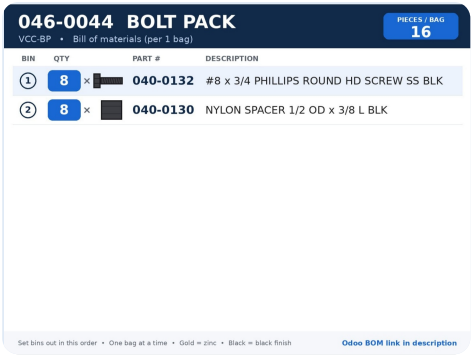

Check that you have all of the parts and hardware shown before starting. Hardware (046-0044): 8x #8 x 3/4" Phillips round head screws (black) and 8x 1/2" OD x 3/8" nylon spacers (black). The kit includes 2 panels, one for each side of the console.


Step 3 Position the Panel

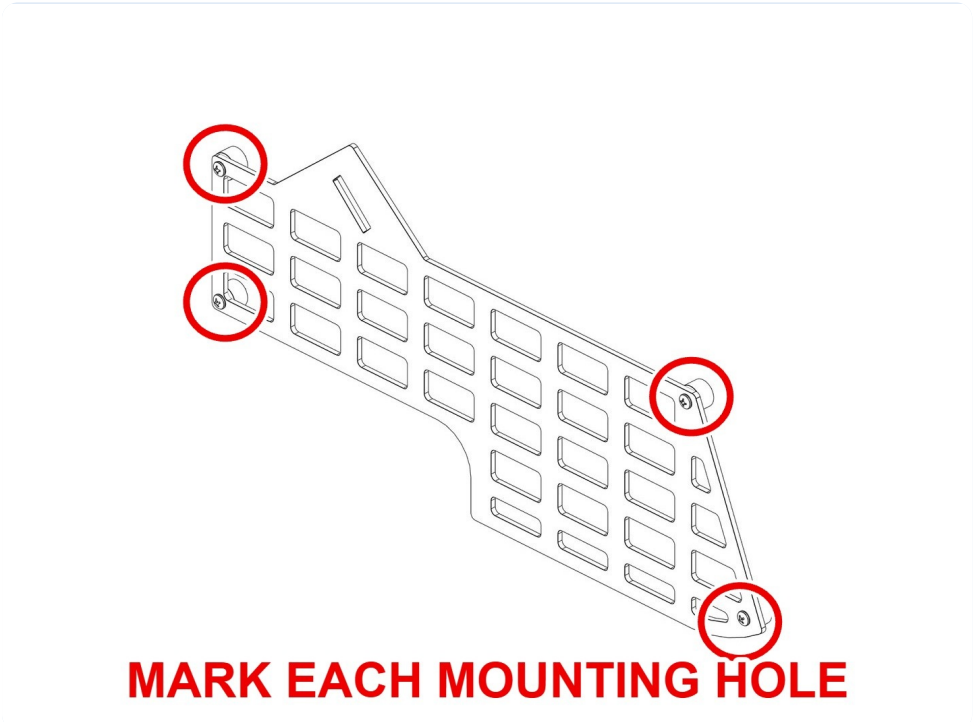



Position the panel with the seat back. The top edge of the panel should sit flush with the line on the top of the console side. Measure 2.5 inches back from the small rectangular cutout under the dash, then mark each mounting hole.

Step 4 Install the Panel

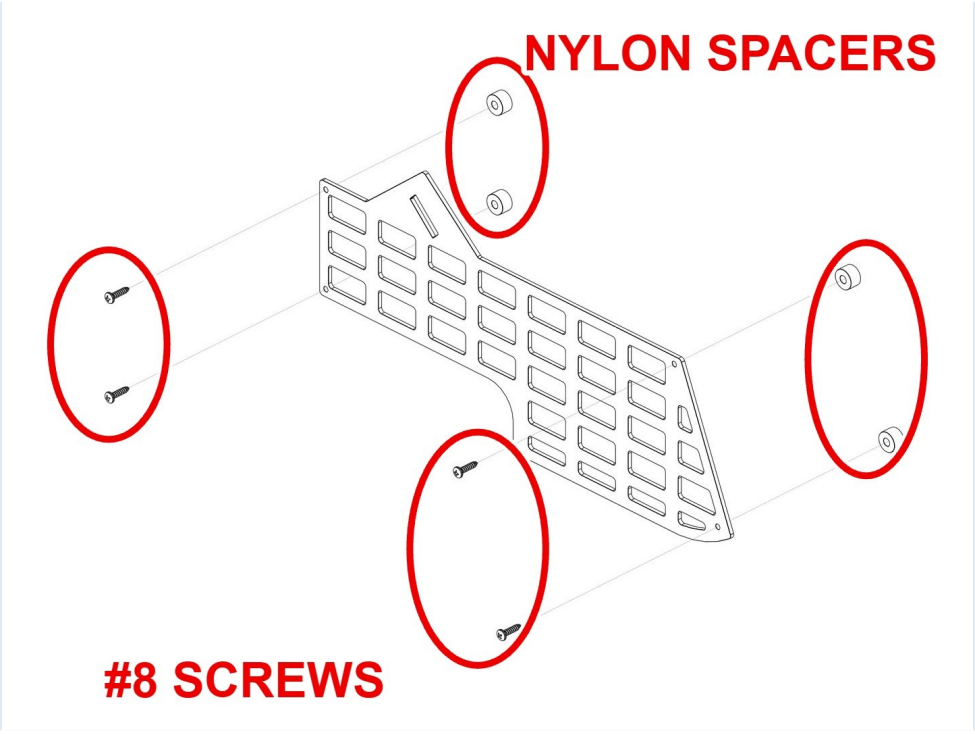

Make the holes with a 1/8 inch bit or a pick, only deep enough to start the screws. Install with a Phillips driver, using 1 screw and 1 spacer per hole.

Step 5 Final Check



That's it! Make sure all of your screws are snug and enjoy your new Center Console MOLLE Panels! Be sure to check out jcroffroad.com for even more Ford Bronco products.

Step 6 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Bronco Console MOLLE Panel is now complete. Enjoy!