




Included Hardware: (8x) Number 8 Screw | (8x) 3/8" Long Spacer

#### **Driver**

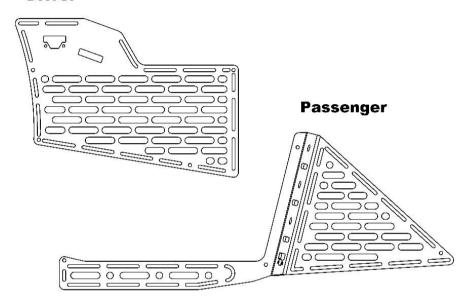

Included Parts: (1x) Driver's Side Panel (1x) Passenger's Side Panel

Process Ref. No: 1709

Revision: 1.005 Revision date: 14/04/2025


Date: 25/09/2024

Page 1 of 5







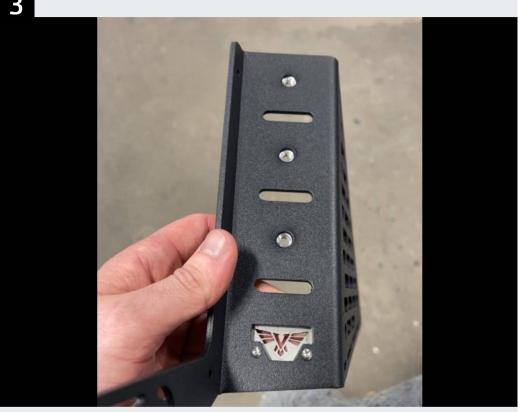



Install the stainless logo plate in both panels using the 10-24 hardware.

Starting on the driver's side, position the panel as desired on the center console. It should look something like the image shown. When it is correctly positioned, mark each of the small holes.

Process Ref. No: 1709

Revision: 1.005 Revision date: 14/04/2025


Date: 25/09/2024


Page 2 of 5







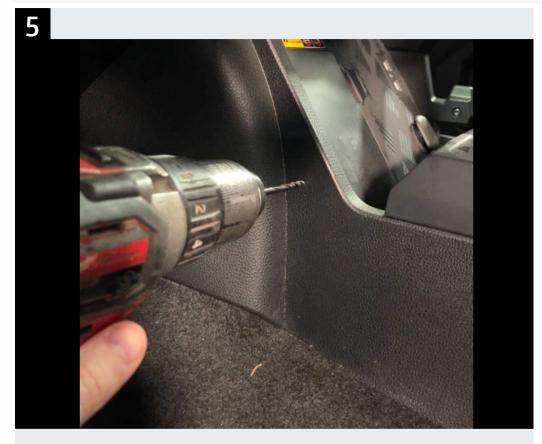

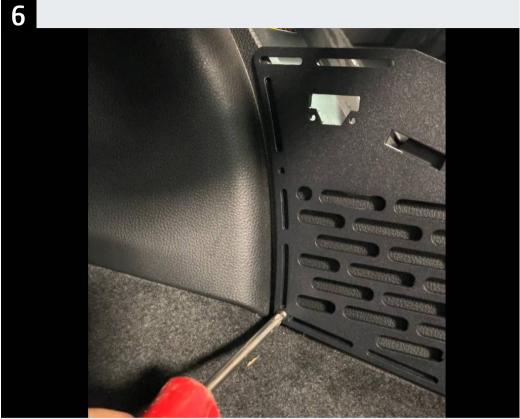

Drill a 1/8" hole at each mark.

Screw the panel into the holes in the center console with one spacer per screw on the back side of the panel. Make sure to not over tighten the screws.

Process Ref. No: 1709

Revision: 1.005 Revision date: 14/04/2025

Date: 25/09/2024

Page 3 of 5









When complete, the driver's side should look similar to the image shown.

Repeated the previous steps on the passenger's side. When complete, it should look something like the image shown.

Process Ref. No: 1709

**Revision:** 1.005 **Revision date:** 14/04/2025

Date: 25/09/2024

Page 4 of 5







9

# Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com info@victory4x4.com info@squatch-proof.com info@fatamericanmfg.com

269-353-1184









Process Ref. No: 1709

Revision: 1.005 Revision date: 14/04/2025

Date: 25/09/2024

Page 5 of 5