Step 1 Ranger Console MOLLE Panel Install Instructions



Step by step on how to install the JCR Offroad Center Console MOLLE Panel on the 2019-2023 Ford Ranger. The panel mounts to the side of the center console with screws and spacers. Please read all steps carefully before starting the install.


Tools needed: tape measure, 1/8" drill bit and drill (or a pick), Phillips screwdriver.

Questions or Support:

Phone: 269-353-1184


Email: info@jcroffroad.com

Step 2 Included Parts

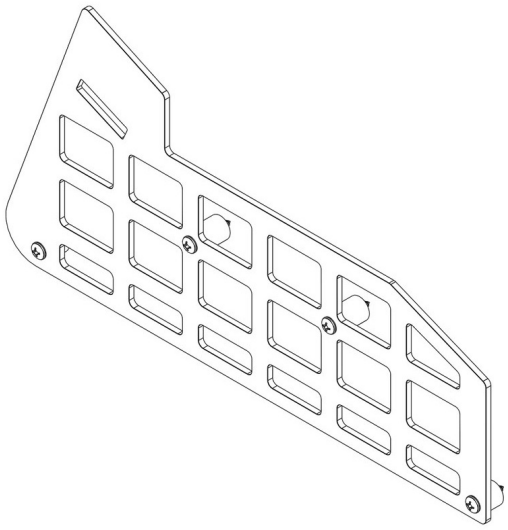

Check that you have the center console MOLLE panel shown before starting.

Step 3 Included Hardware

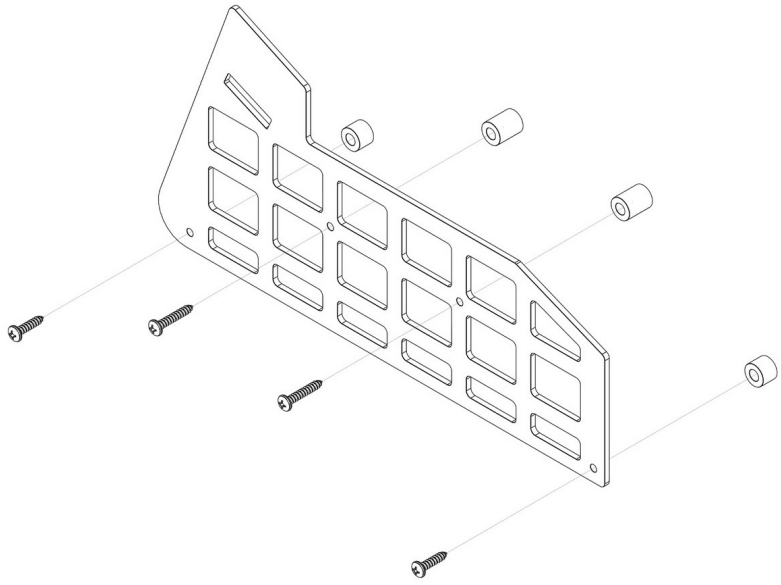

Check that you have all of the hardware shown before starting:

- Phillips screws, one for each mounting hole
- Spacers, one for each mounting hole

The two longer screws and longer spacers go in the middle two holes. The shorter ones go in the outer holes.

Step 4 Position the Panel



Move the seat all the way back to give yourself room.
Set the bottom edge of the panel on the seam that runs along the side of the center console. Follow that seam forward to where it meets the seam under the dash in a "T".
Measure back from that junction to the front mounting hole: 5" on the driver side, 5.5" on the passenger side. Hold the panel in place and mark each mounting hole.

Step 5 Make Pilot Holes and Install



At each mark, make a small pilot hole in the console with a 1/8" drill bit or a pick. Only go deep enough to start the screws.
Install the panel with a Phillips screwdriver, using one screw and one spacer at each hole. The spacer goes between the panel and the console. Use the longer screws and spacers in the middle two holes.
Snug the screws but do not overtighten them, or they can strip out of the plastic.

Step 6 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Ranger Console MOLLE Panel is now complete. Enjoy!