## Step 1 Fridge Slide Install Instructions







Step by step on how to install the Fridge Slide. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=JomIwPvkRSk

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

## Step 2 Included Parts

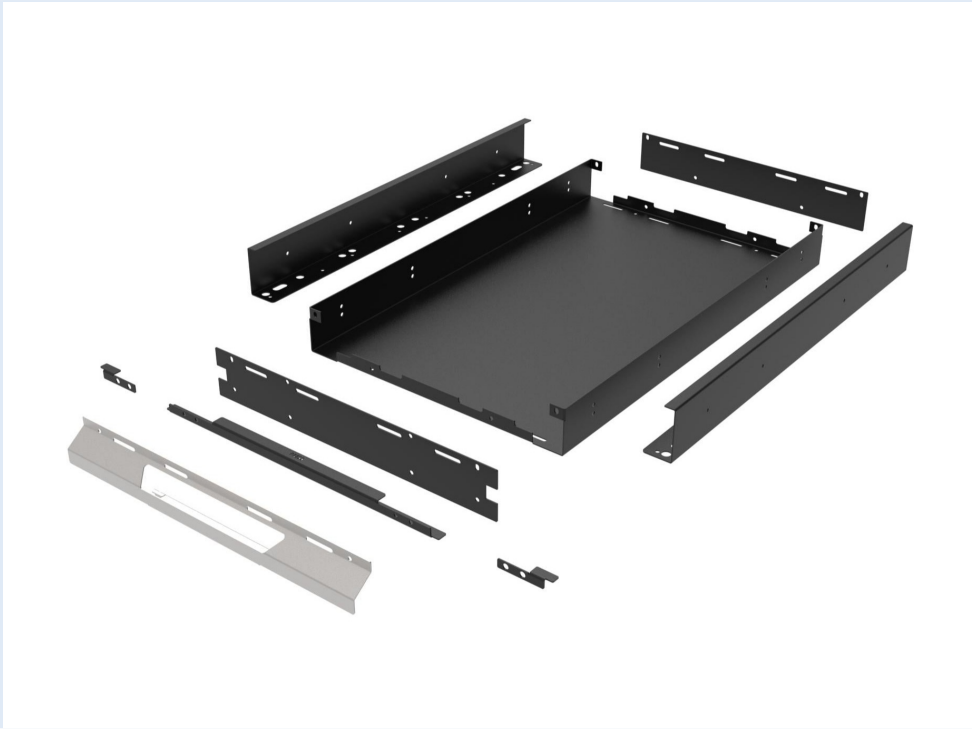

Check that you have all of the parts shown before starting.

## Step 3 Included Hardware

**046-0142 BOLT PACK**

Off-Grid Drawer/Fridge BP • Bill of materials (per 1 bag)

PIECES / BAG **178**

| BIN | QTY | PART # | DESCRIPTION |
|---|---|---|---|
| 1 | 34 × | 040-0051 | 1/4-20 x 1/2 BUTTON HD SOC CAP 18-8 SS BLK |
| 2 | 24 × | 040-0149 | 1/4-20 x 3/8 BUTTON HD SOC CAP 18-8 SS BLK |
| 3 | 58 × | 040-0147 | 1/4 MIL-SPEC FLAT WASHER 18-8 SS BLK |
| 4 | 36 × | 040-0025 | 1/4-20 SERR FLANGE LOCKNUT GR5 ZNC |
| 5 | 24 × | 040-0227 | 1/4-20 THIN HEX NUT GR5 ZNC |
| 6 | 1 × | 035-0034 | THREAD LOCKER BLUE TUBE |
| 7 | 1 × | 070-0052 | 18 IN U-CHANNEL EDGE TRIM BLK |


Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting.

## Step 4 Bolt Slides to Floor Mounts



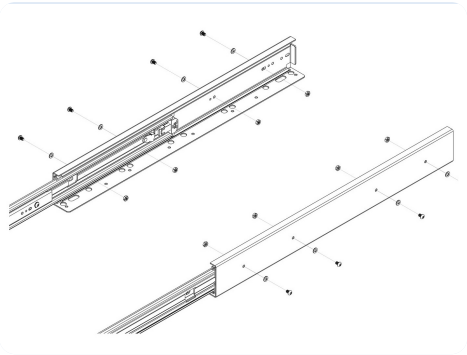



Bolt each slide to the inside of the floor mounts with the red handles pointing out. Use 4 short 1/4 inch button heads, washers and flat nuts per side, with the blue Loctite on the bolts before tightening. Extend the slide to reach the inside holes.

Video timestamp: 0:16

## Step 5 Bolt Assembly to Floor



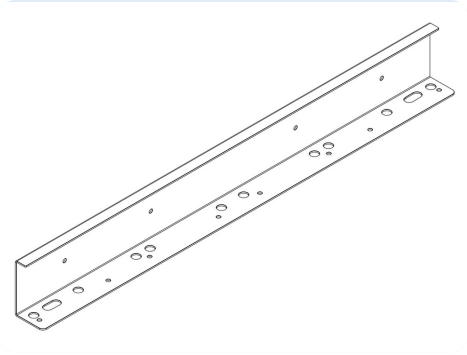



Bolt the assembly to your floor through the bottom mounting holes on each side, using the longer 1/4 inch button heads and washers into the nutstrips. See the product page and install video for your vehicle specific floor system.

Video timestamp: 0:32

## Step 6 Choose Platform Orientation



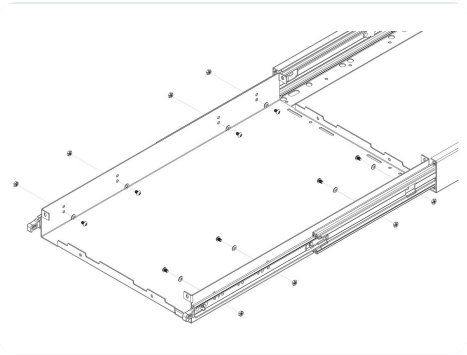


Choose upright or upside down for the U-shaped platform. A fridge wider than 18 inches goes upside down so it can overhang the sides, and it will sit 3.5 inches taller. Mount the platform to the slides with 1/4 inch button heads, washers and flat nuts.

Video timestamp: 1:04

## Step 7 Install Back Piece




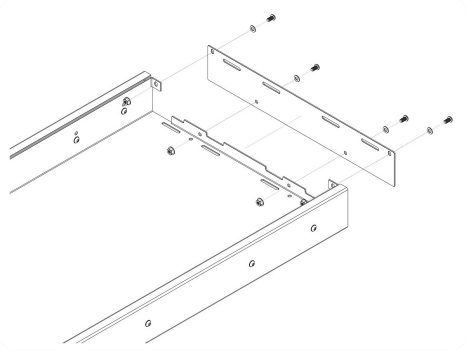



With the platform on the slides in your chosen orientation, bolt the back piece to the platform using 1/4 inch button heads, washers and nuts, as shown.

Video timestamp: 1:22

## Step 8 Install Front Bracket

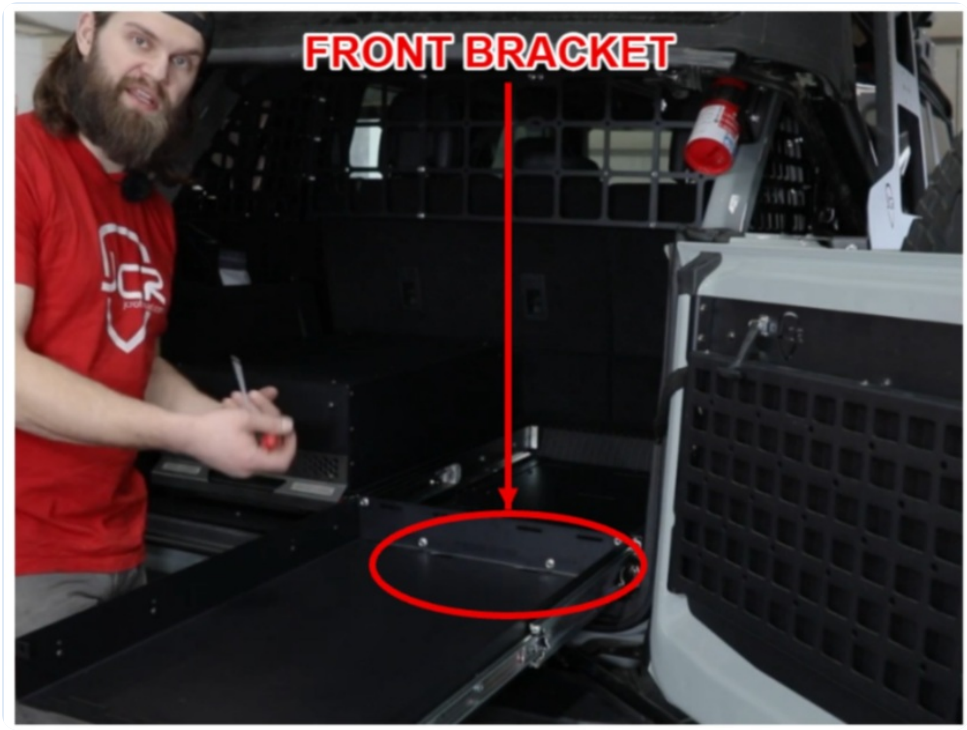

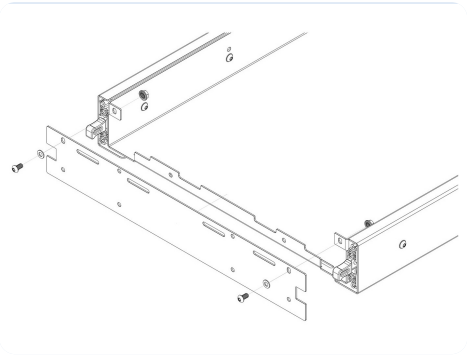



Bolt the front bracket on with 2 button heads, washers and flange nuts. With the tray upright, this hardware is temporary until the handle is built in step 6. Upside down, use the bottom holes and leave it in place.

Video timestamp: 5:23

## Step 9 Assemble Handle



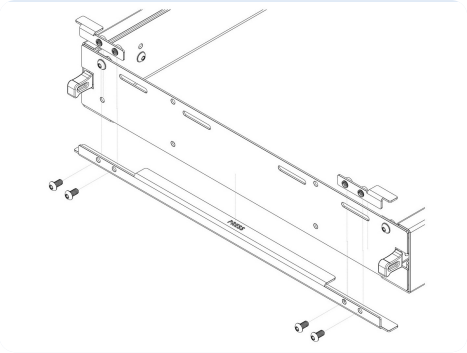



Build the handle around the red latches. Run 4 button heads through the PRESS bracket into the pem nut bracket so they sandwich the red grab handles.

Video timestamp: 9:12

## Step 10 Install Cover



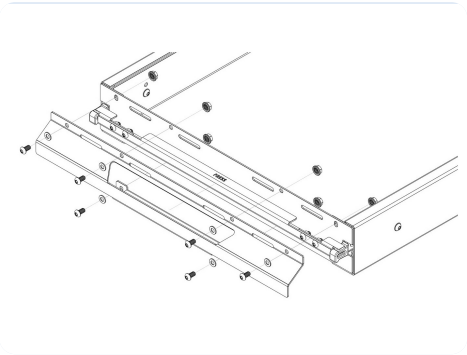



Place the cover over the assembly with 6 button heads, washers and flange nuts. With the tray upright, remove the step 5 hardware first and reinstall it over the cover piece.

Video timestamp: 11:17

## Step 11 Final Check

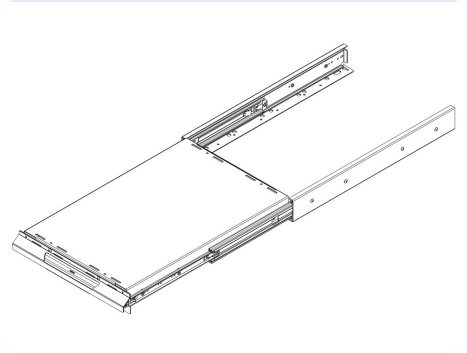

Your fridge slide is fully assembled. Set your fridge in place and strap it down through the front and back tray slots, using the fridge handles.

Video timestamp: 11:33

## Step 12 Installation Complete




Confirm all hardware is tightened. Congrats! Your installation of the Fridge Slide is now complete. Enjoy!