
Step 1 XJ Unibody Tie-In Kit Install Instructions

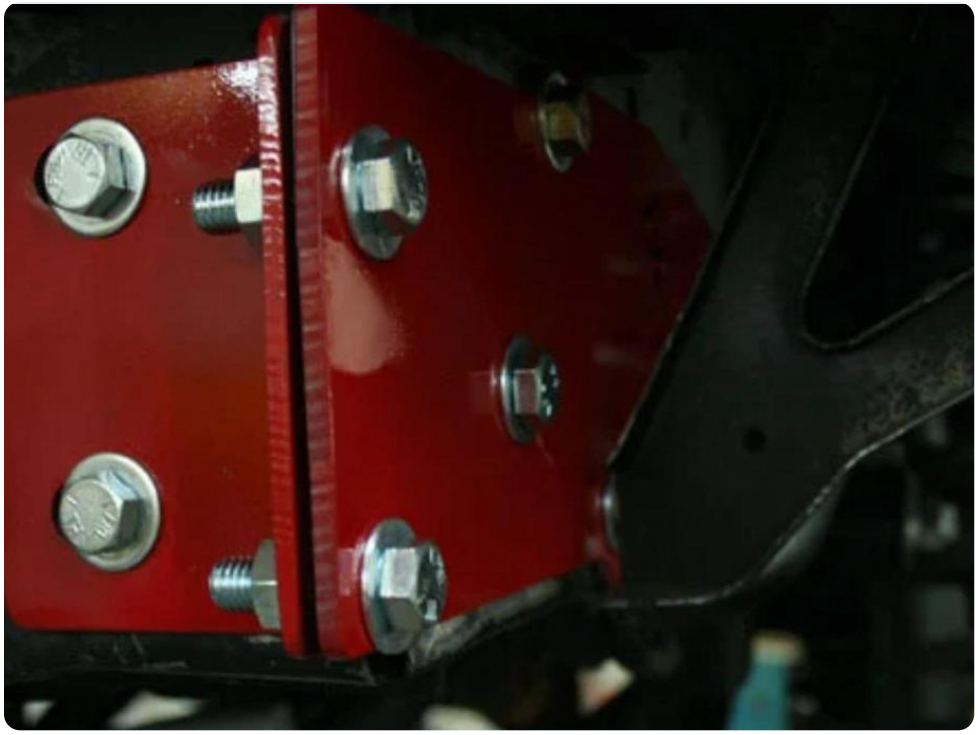



Step by step on how to install the Unibody Tie-In Kit with Steering Spacer on the 1984-2001 Jeep Cherokee XJ.

Installation Video: https://www.youtube.com/watch?v=ysq0RJDetZ4

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Hardware Check



Double check you have all the correct hardware as shown in the image before starting.

Step 3 Included Parts



Check that you have all of the parts shown before starting.


Step 4 Identify Hardware & Prep Fender Support





Identify your hardware using the numbers in the picture. Remove or trim the fender angle support so the front brackets fit. It is held in by four 10mm bolts, and many people remove it entirely.


Step 5 Remove Steering Box Bolts

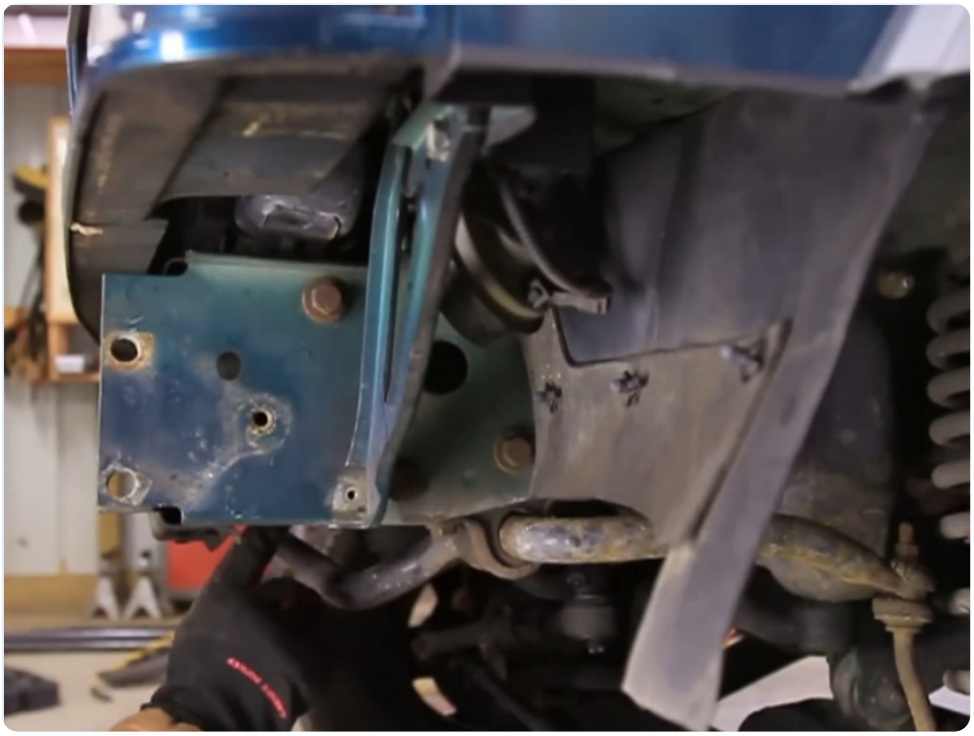



Remove the three factory steering box bolts on the driver side. If they fight you, apply heat to the bolt threads at the steering box, or soak with penetrating oil for a few days.

Step 6 Install Tie-In Bracket

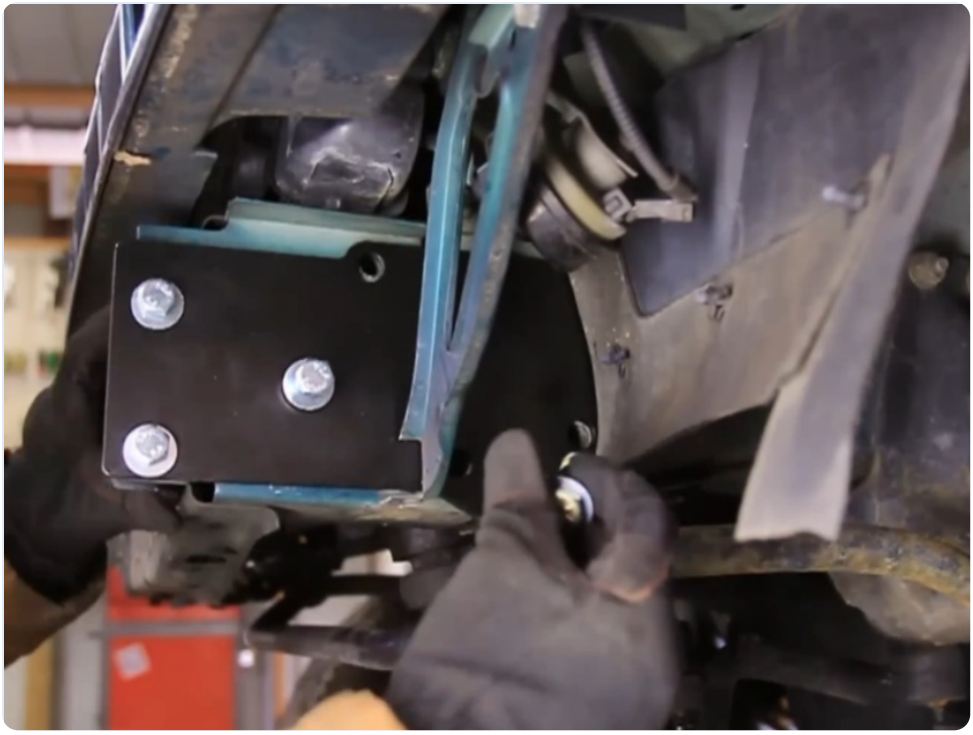



Place the tie-in bracket against the frame and loosely install the long 1/2" bolts (#5) in the rearmost hole. Use blue Loctite on the replacement steering box bolts (#4), reinstall the steering box, and leave all bolts slightly loose.


Step 7 Final Check





That’s it! Once everything is lined up, tighten all of your bolts and enjoy your new Unibody Tie-In Kit!

Step 8 Installation Complete

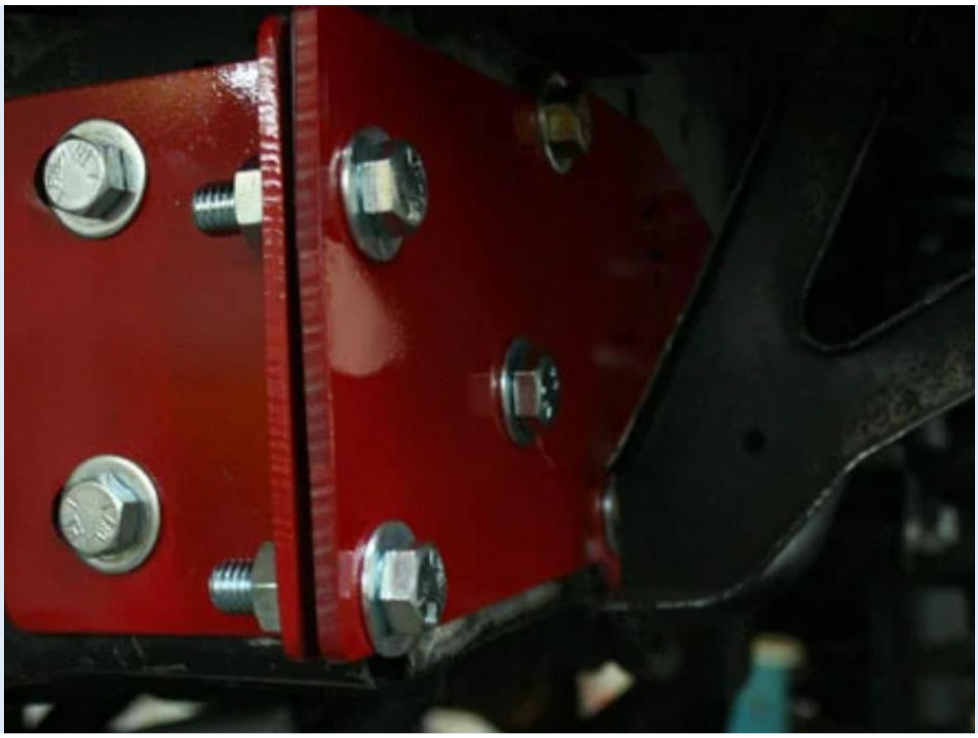

Congratulations, you have completed the install of your new XJ Unibody Tie-In Kit! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com