





1

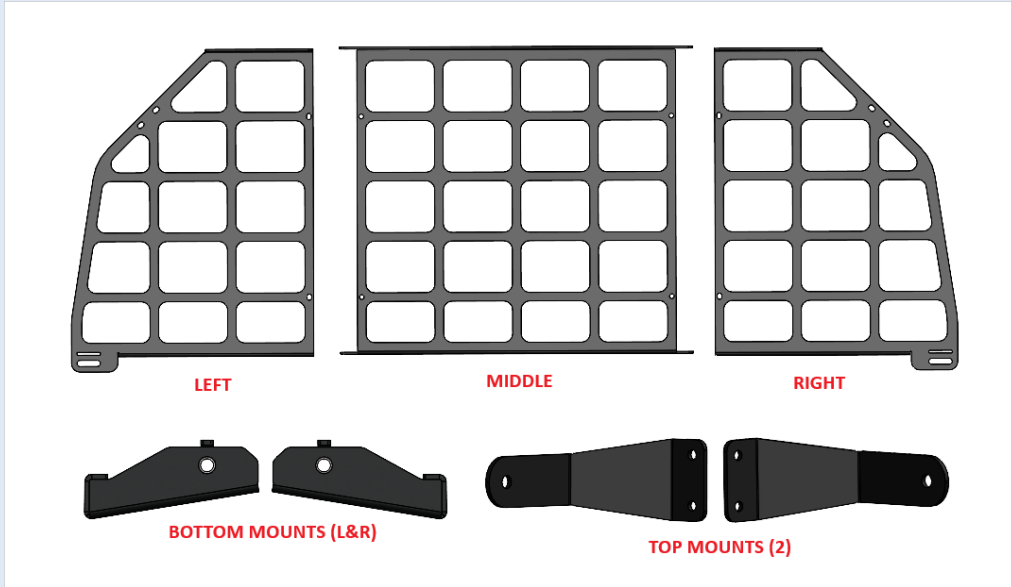

Included parts: (1) Left Panel, (1) Middle Panel, (1) Right Panel, (L&R) Bottom Mounts, (2) Top Mounts, Hardware pack (046-0286)


2

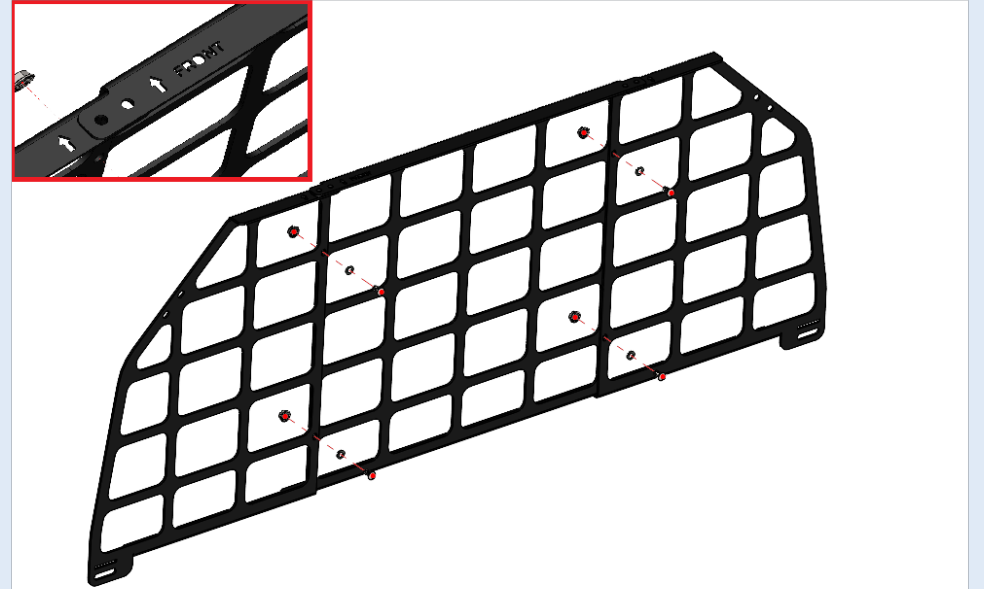

Using (4) of the supplied 1/4" button heads, washers, and flange nuts, fasten the three panels together as shown. Leave hardware loose for now.




3

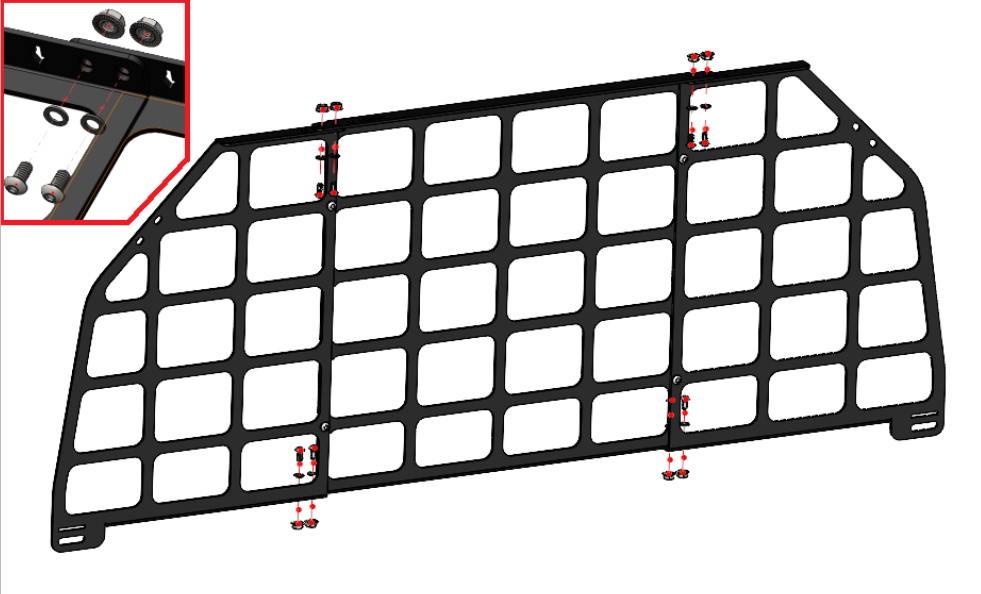

Using (8) of the supplied 1/4" button heads, washers, and flange nuts, fasten the flanges of the three panels together as shown.


4

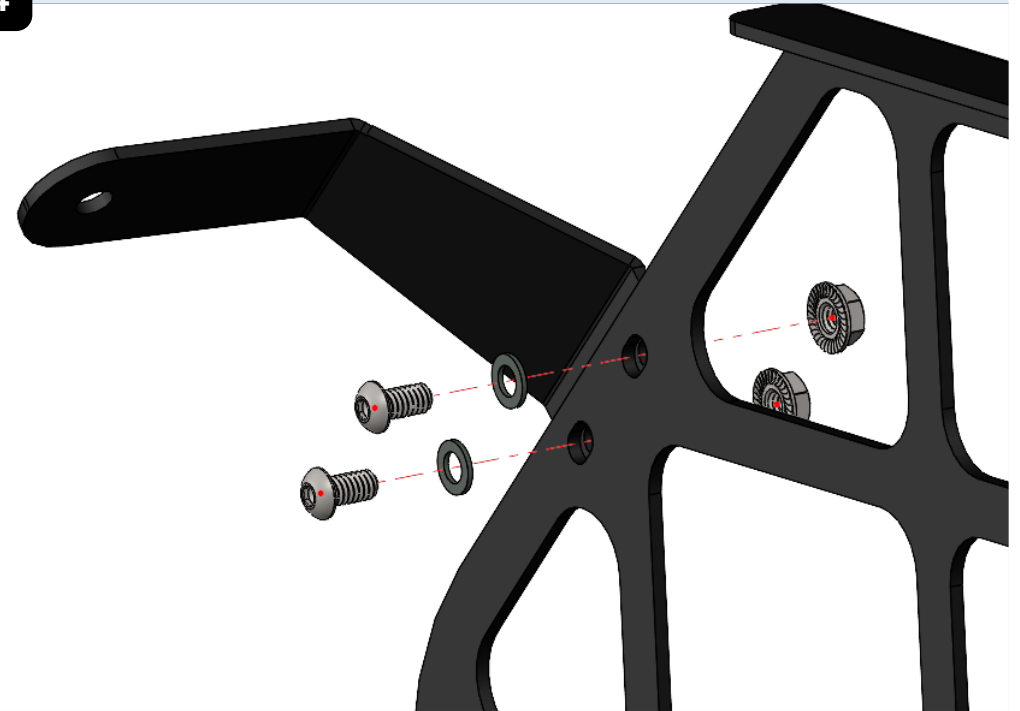

Using (2) of the 1/4" button heads, washers, and flange nuts, fasten the upper mounting bracket to the panel as shown (Left side shown). Repeat on other side.




5

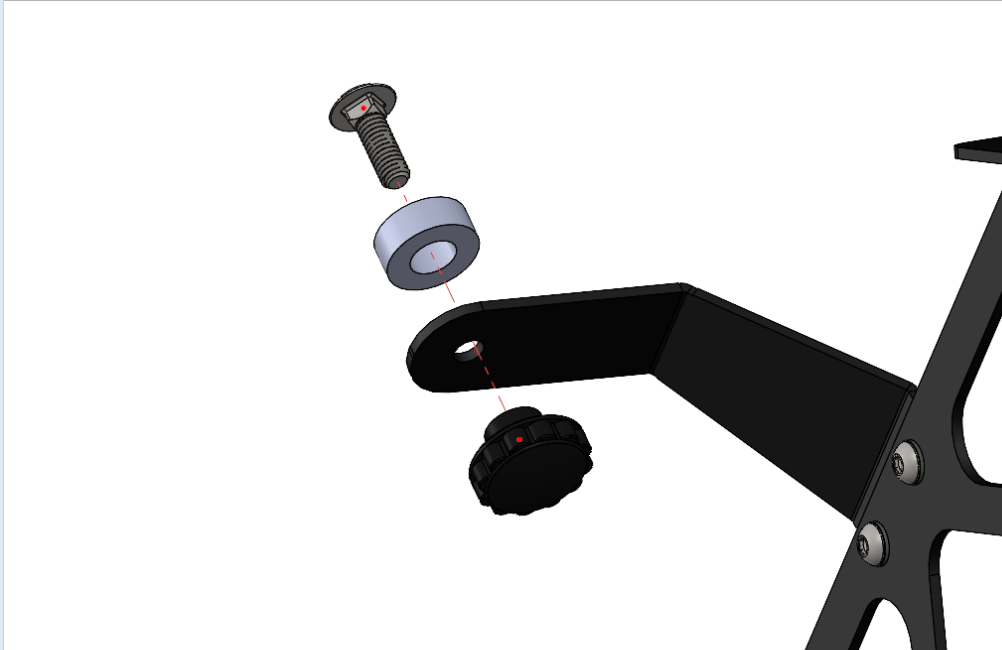

Assemble the upper mounting hardware in the orientation shown above. Leave this loosely assembled for now.

6

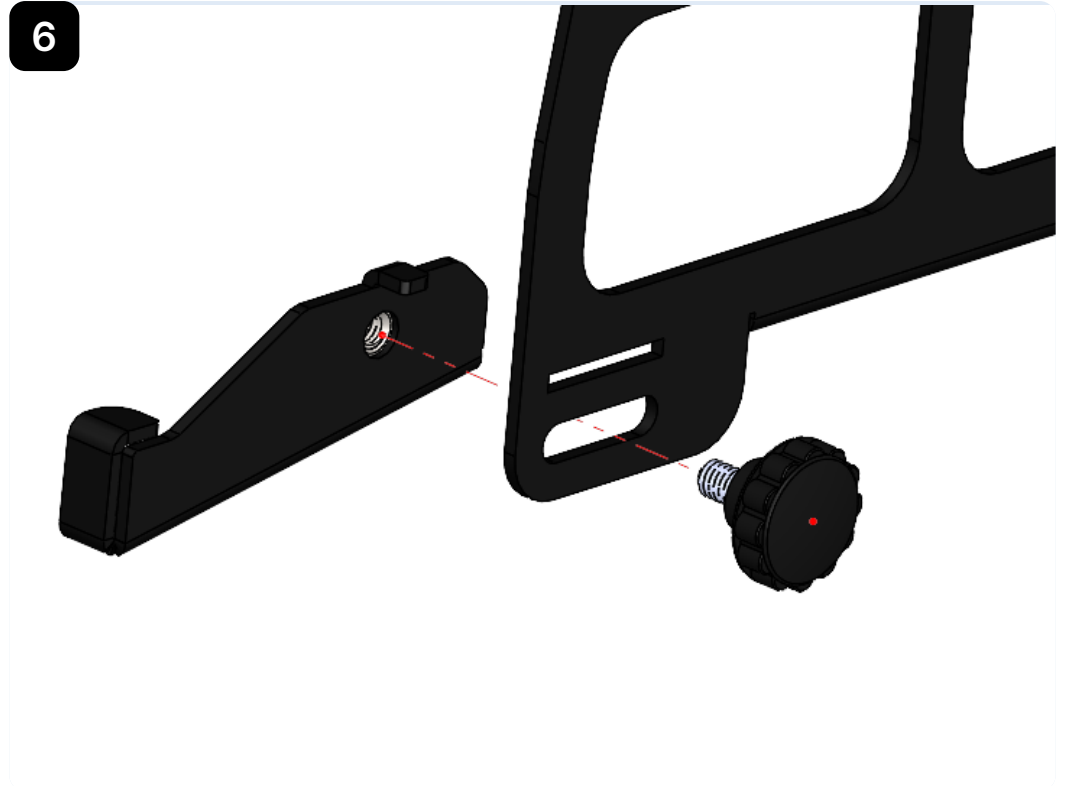

Using the supplied knob loosely install the lower mounting bracket using the supplied studed knob. Repeat on other side.



7



Use a small screwdriver or pry tool to remove the factory trim pieces shown above. Once they are pried loose, they can be removed fully by pulling the plastic tethers out of their retainers.


8



Using an 8mm socket with an extension, carefully remove the bolt and bracket shown above (if equipped). In this step, leave the socket on the bolt head and remove the bracket and bolt together. **TAKE CARE TO NOT DROP THE BOLT INTO THE HEADLINER.**



9

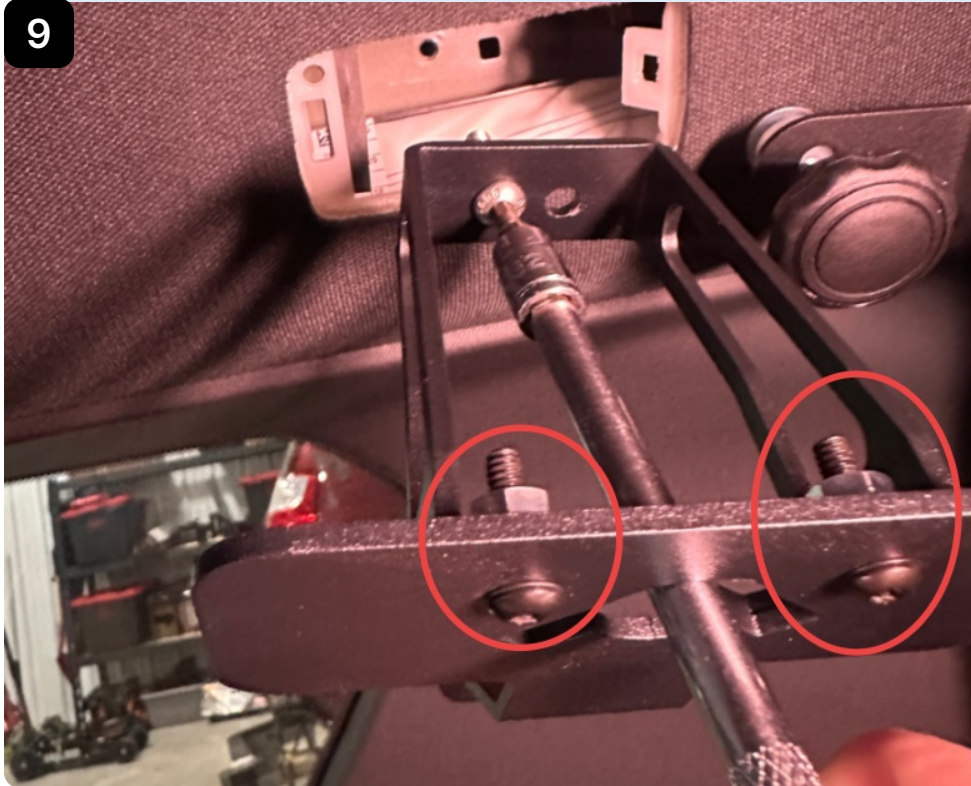

Using the (2) supplied 10-24 button heads, washers, and flange nuts, fasten the supplied bracket to the factory bracket as shown. Snug these bolts up by hand, we will fully tighten in a later step. **NOTE: These are the (2) skinnier bolts and smaller black washers in the bolt pack. (#10-24 x 3/4" button head).**

10



Install the assembly using an extension and socket as shown. If your vehicle did not have a bolt here, you can use the supplied M6 button head with a flat washer. Guide the bolt with the bracket into place as shown so you do not drop the hardware into the headliner. Make sure use the hole closest to the rear of the vehicle. **Leave this hand tight only, we will tighten fully in a later step.**



11



Using an 8mm or 10mm socket and extension (or a 4mm allen), fully tighten the screw in the headliner. **NOTE: Take care when pulling the extension and socket out of the access hole to not lose socket behind headliner.**

12



Using a 1/8" allen wrench, tighten the mounting bolts into the top front mounting bracket. (Molle panel version of this bracket shown).



13



Install the pet divider in place and press the lower knobs outward while tightening.

14



Ensure top mounts are in place as shown, with the carriage bolt nested into the front squared opening in the headliner. Tighten the knob.



INST: VPAPET-4G-PC

Feedback?



15

**Thank you for supporting
American-made. We hope you
enjoy your new product!**

If you have any questions or concerns
please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184



**SQUATCH
PROOF**

