
Step 1 Bronco Cargo Floor Install Instructions



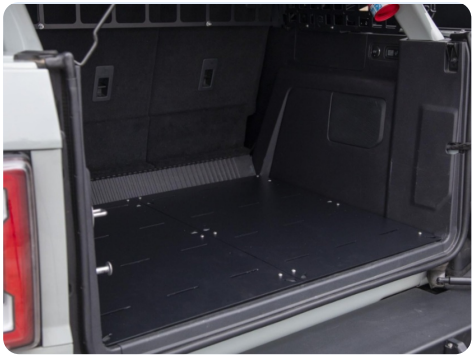



Step by step on how to assemble and install the Off-Grid Modular Drawer System floor in a Ford Bronco 4 Door (21+). Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=7ubL0_FwBHA

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware

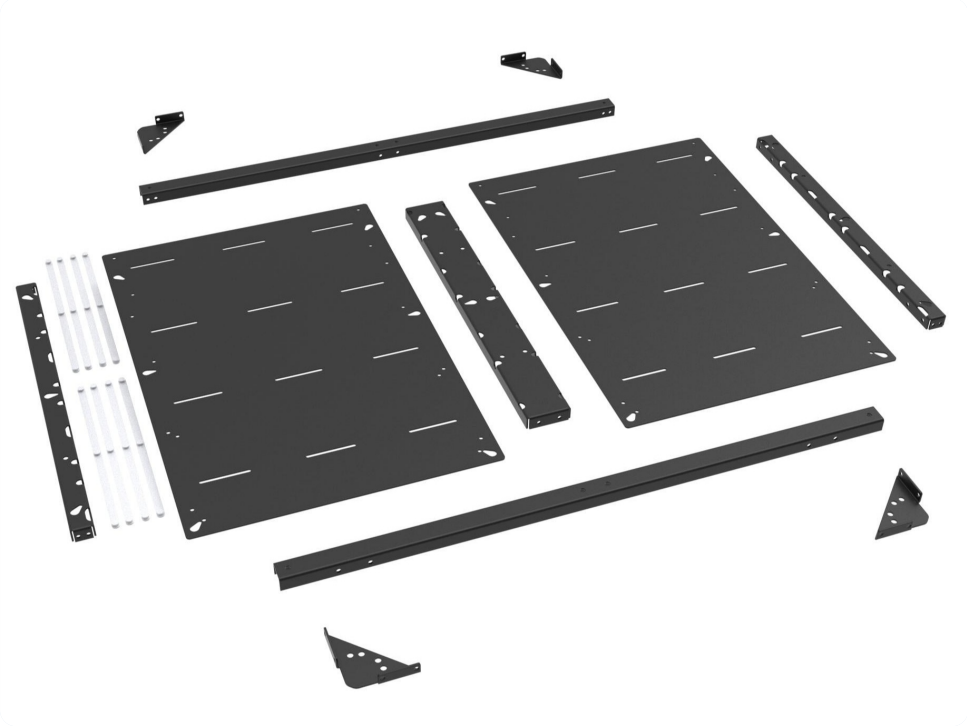

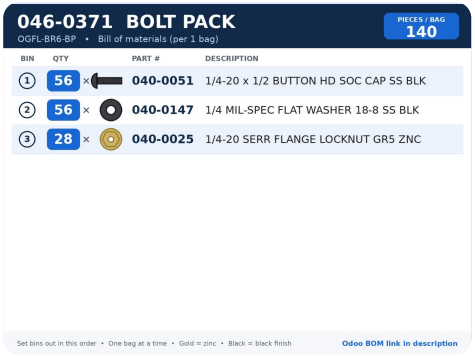

Check that you have all of the parts and hardware shown before starting. Hardware pack: 046-0371 (every bolt, nut and washer is listed in the bill of materials picture).

Step 3 Bolt Side Rails to Front and Back




Lay out one side rail with the front rail. The two small holes about 1 in. apart on the front and back rails line up with the holes on the ends of the side rails. Make sure the small ends of the teardrop cut outs on the side rails face in toward the center.

Video timestamp: 0:32

Step 4 Install Rail Hardware



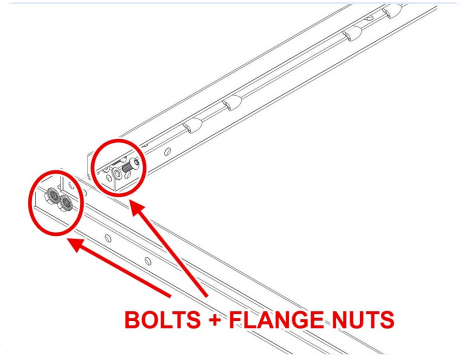


Bolt the rails together through the small holes with 1/4-20 button head bolts. The flange nuts go on the inside of the rails. Leave the hardware loose for now.

Video timestamp: 1:04

Step 5 Install Corner Braces




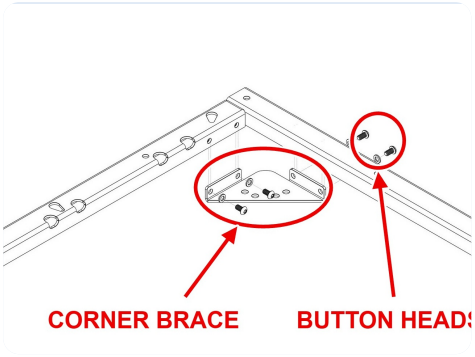

Tuck one end of a corner brace down inside the front rail and bolt the other flange to the inside edge of the side rail with 1/4-20 button heads, running the bolts from the outside in with the nuts on the inside.

Video timestamp: 1:20


Step 6 Finish Outer Frame

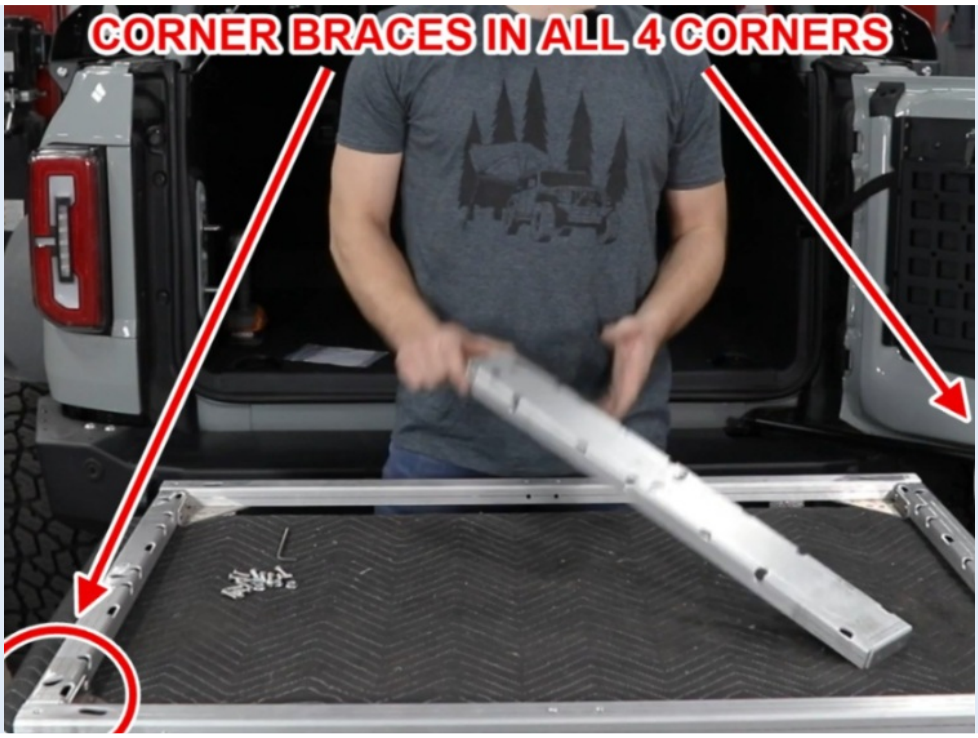

Work around the frame until all four rails and all four corner braces are installed and you have a complete rectangle.

Video timestamp: 2:11

Step 7 Install Center Rail

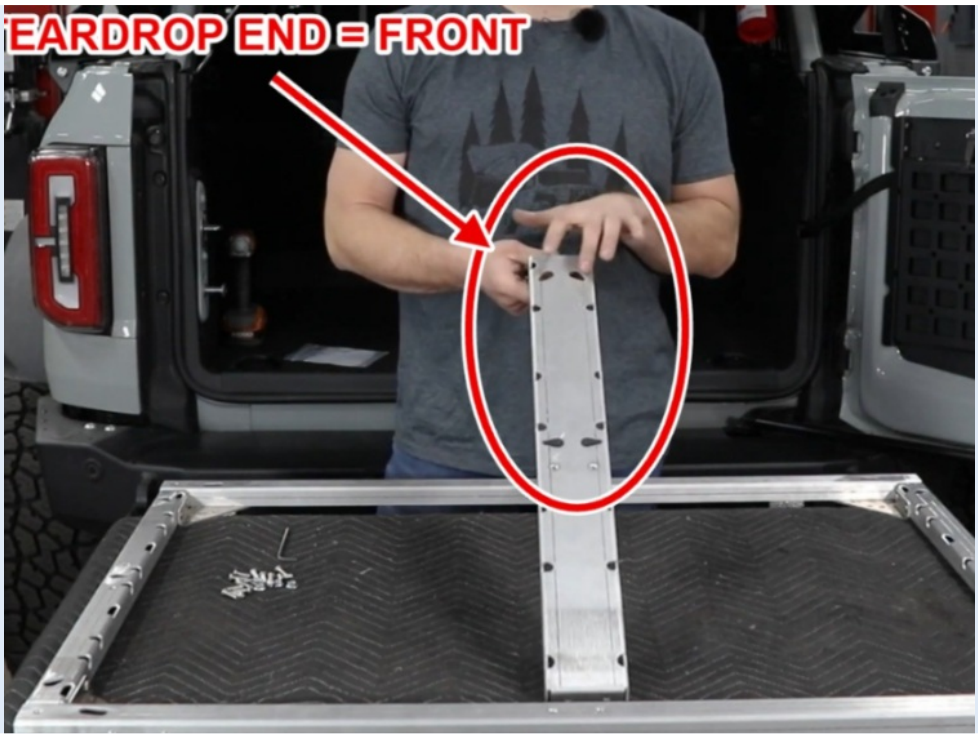

Bolt the center rail between the front and back rails with button head hardware, the same way as the side rails. The end with the teardrop cut outs is the front of the frame.

Video timestamp: 2:26

Step 8 Tighten Frame Hardware



With the frame fully assembled, tighten all of the hardware with a 5/32 in. hex.

Video timestamp: 2:59


Step 9 Remove Tie Down Covers



In the vehicle, push in the tab on the front of each plastic tie down cover and pop it up and out. Do this on all four tie down hooks.

Video timestamp: 3:16

Step 10 Remove Tie Down Hooks

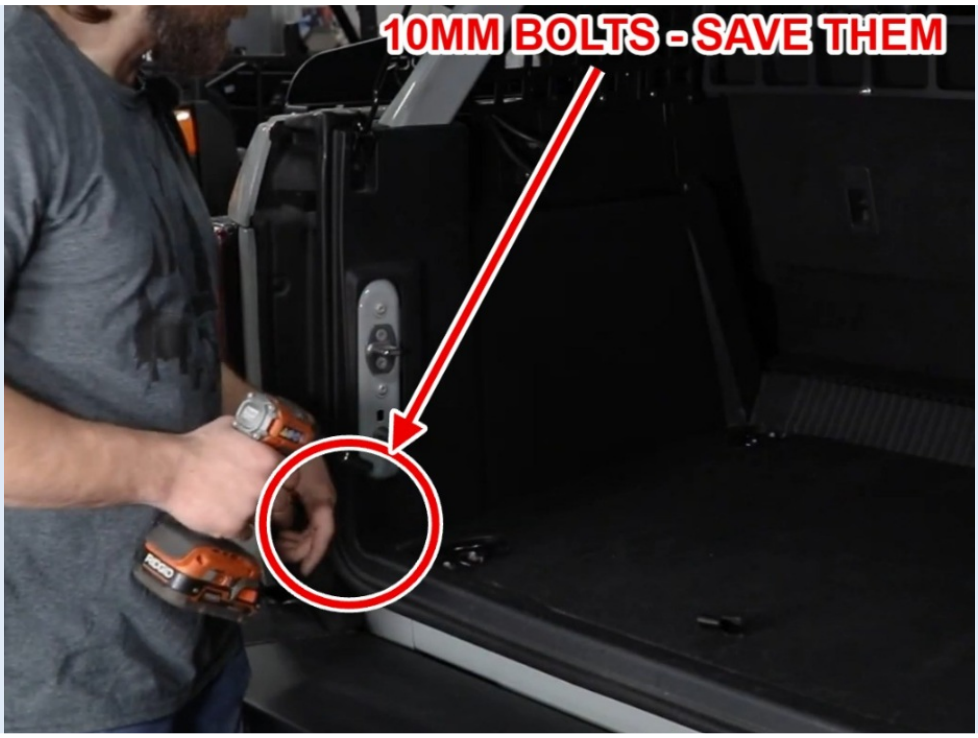

Remove the two 10mm bolts from each tie down hook and lift the hooks out. Save the bolts, they are used to install the frame.

Video timestamp: 3:32


Step 11 Remove Factory Floor



Lift the pull strap in the center of the factory rear floor and lift the floor up and out of the vehicle.

Video timestamp: 3:49

Step 12 Place Frame in Vehicle

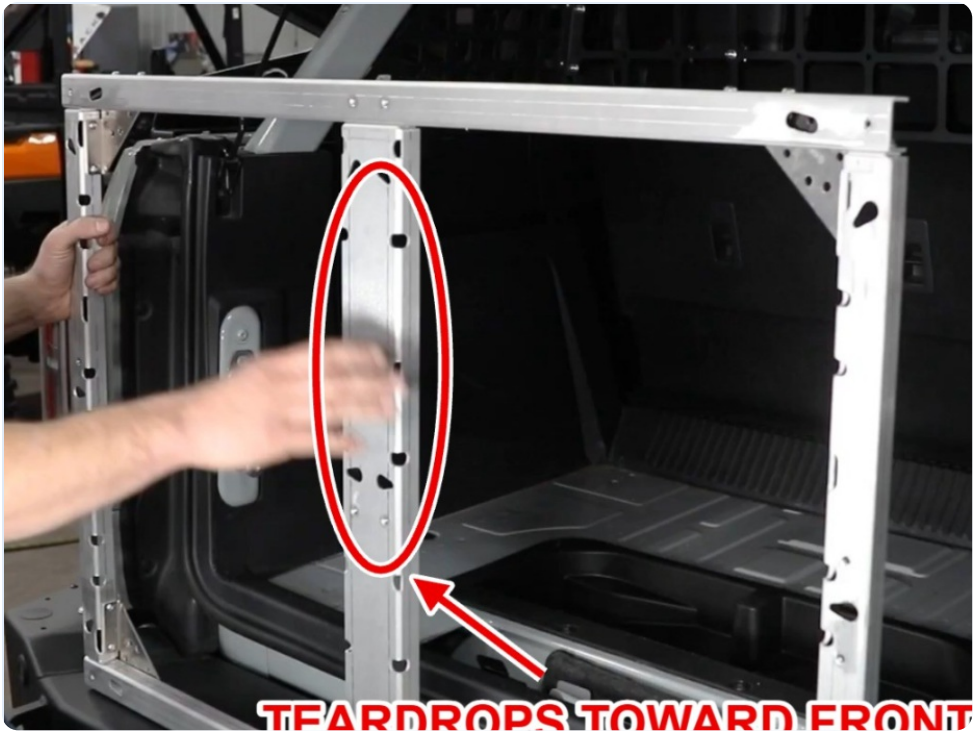




Set the frame in the cargo area with the teardrop cut outs toward the front of the vehicle. Go in at an angle if needed, get the front down and centered first, then lay it flat and push forward and down until it snaps in place.

Video timestamp: 4:05


Step 13 Install Factory Bolts

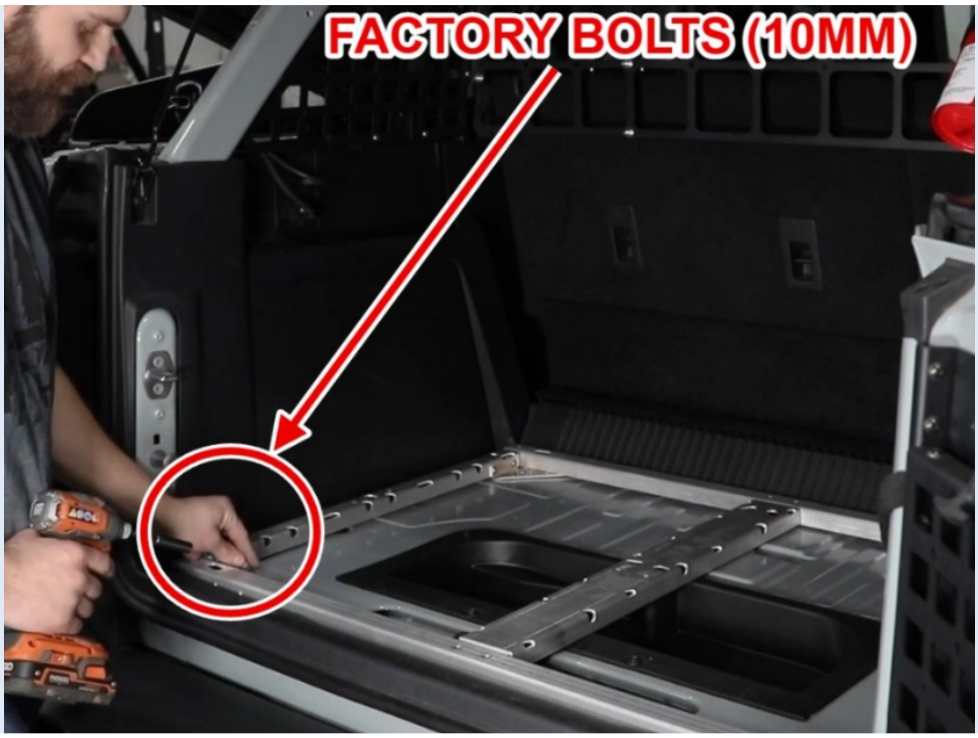


Thread four of the factory tie down bolts through the corner braces into the factory threaded holes. Start all four by hand, then tighten them with a 10mm socket.

Video timestamp: 4:39

Step 14 Install Floor Panels

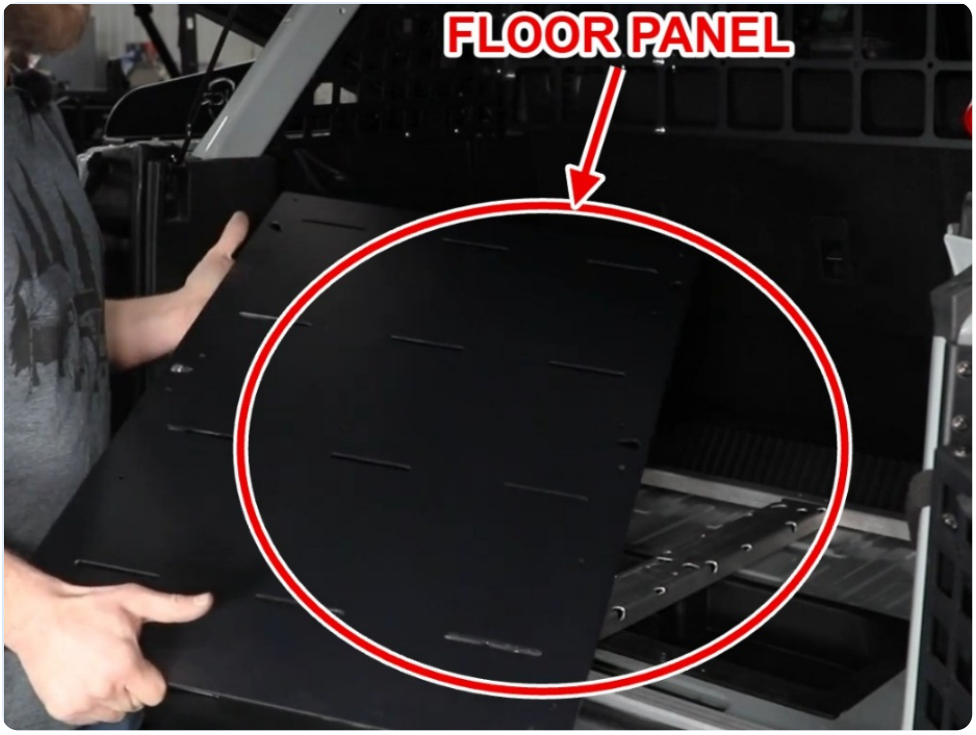

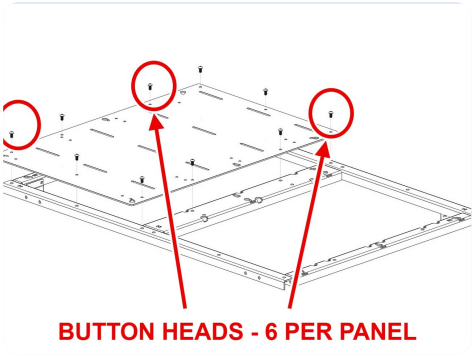

Lay a floor panel on either side of the frame and line up its six mounting holes, two at each end and two in the center. Bolt it down loosely with 1/4-20 button heads, then install the second panel the same way.

Video timestamp: 5:12

Step 15 Tighten Floor Panels



Adjust both panels for alignment, then tighten all of the panel bolts with a 5/32 in. hex.

Video timestamp: 5:49

Step 16 Mount Accessories



To mount a drawer or fridge slide, loosen or remove the floor panel, bolt the accessory on from underneath, then set the panel back down and bolt it in. See the drawer or fridge slide install doc for details.

Video timestamp: 6:06

Step 17 Installation Complete



Congratulations, you have completed the install of your new Bronco Cargo Floor! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com