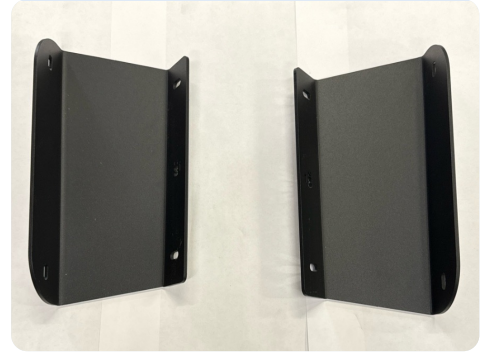


**Step 1 Upper Shelf Install for 200 Series**

How to install the Upper Shelf on the 200 Series.

Install Video: https://www.youtube.com/watch?v=s_P0f6LAq4Q


Questions or Support:

Phone: 269-353-1184

Email: info@[victory4x4.com](mailto:info@victory4x4.com)




Step 2 Mounting the Brackets

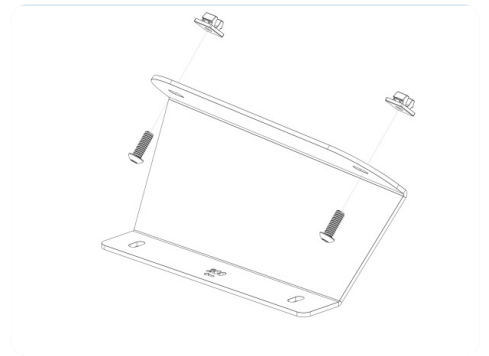

- Start by installing the mounts into the holes that mount the grab handles to the ceiling of the cargo area. To do so you will need to first take them off. To do this, find the seams on either side of each handle and pop the outer covers off. It may be helpful to use something like a plastic pry tool but can be done by hand. Then, pinch the metal clips and pull the handle off of the ceiling. Once that is out of the way, pull the metal clips out of the holes too. Then, install the mount into the ceiling using 1/4"-20 X 3/4" bolts and # 12 expansion nuts. Insert the bolts slots in the unlabeled side of the mount and then thread the expansion nuts onto them about one turn. Then, making sure that the expansion nuts are oriented so that they expand vertically, pop them into the holes in the ceiling and tighten the bolts into place. Make sure that the arrow in the mount is pointing towards the front of the vehicle.




Step 3 Front Panel Attachment

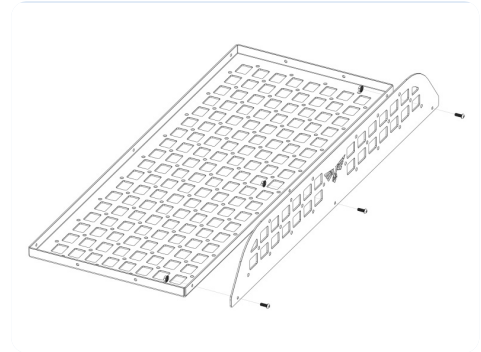

- Next, attach the front panel to the basket using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts.

Step 4 Install the Basket

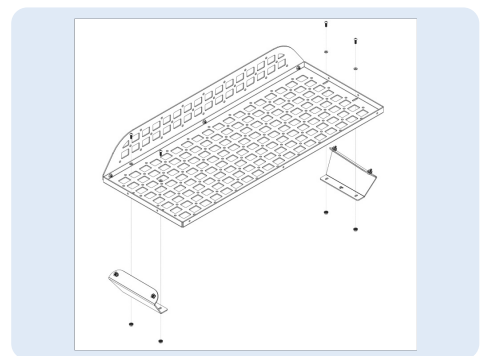

- Finally, set the basket on the lip of the two mounts and attach them together using two 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. Flange nuts per side.

**Step 5** Final Check

Double Check to make sure everything is fully tightened.

Install Complete, Enjoy!