Step 1 Colorado/Canyon Strike Sliders Install





Step by step on how to install the Strike Rock Sliders on a Chevy Colorado / GMC Canyon 2nd Gen (15-22). The slider bolts up through the body mounts and into the back of the rocker. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=yhUMulfh-qQ

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts & Hardware



Check that you have all of the parts and hardware shown before starting.

Step 3 Remove Body Mounts





Remove the two body mount bolts with a 13/16 in. socket and set the body mounts aside. Discard the small cap on the front mount.

Video timestamp: 1:15

Step 4 Install Clip Nuts





Trucks without factory running boards have plastic caps in the rocker holes. Pop the caps out with a screwdriver and snap the supplied clip nuts in (hat side up). Skip any holes that already have nut certs.

Video timestamp: 2:00

Step 5 Hang the Slider







Lift the slider into place and reinstall the body mount bolts through the slider. Start them and leave them loose.

Video timestamp: 2:50

Step 6 Install Rocker Bolts

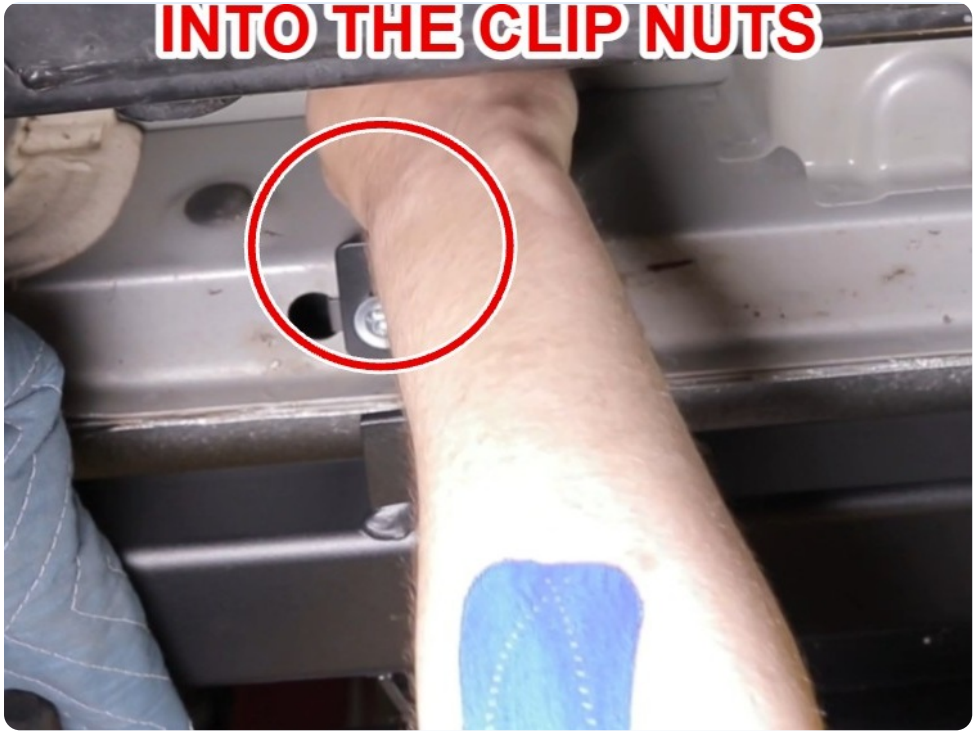

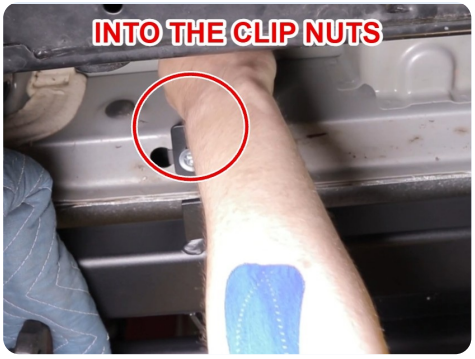

Install the button head bolts with washers into the clip nuts with a 3/16 in. Allen, plus the one on the back side. Leave them loose.

Video timestamp: 3:10

Step 7 Tighten Bottom Bolt First





Pull the slider in against the inner rocker and tighten the bottom bolt first so there is no gap, then the others.

Video timestamp: 4:00

Step 8 Tighten Body Mounts





Tighten the two body mount bolts.

Video timestamp: 4:25

Step 9 Final Check and Passenger Side





Go back and make sure every rocker bolt is tight, then repeat the install on the passenger side.

Video timestamp: 4:45