Step 1 Bronco Baja Bolt-On Hoop Install Instructions





Step by step on how to install the Baja Bolt-On Hoop on the 6th Gen Ford Bronco MOD Steel Bumper.


Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware




Check that you have all of the parts and hardware shown before starting.

Step 3 Remove Bumper Bolts

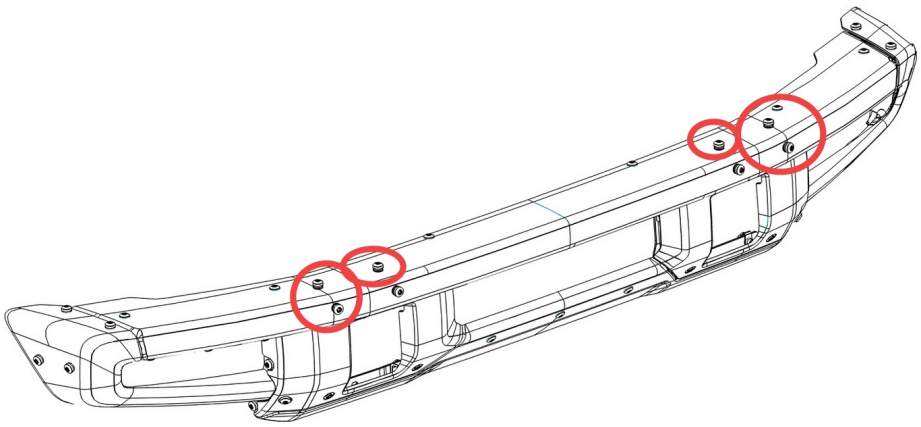

Start by removing the six bolts circled on the bumper.

Step 4 Install Hoop

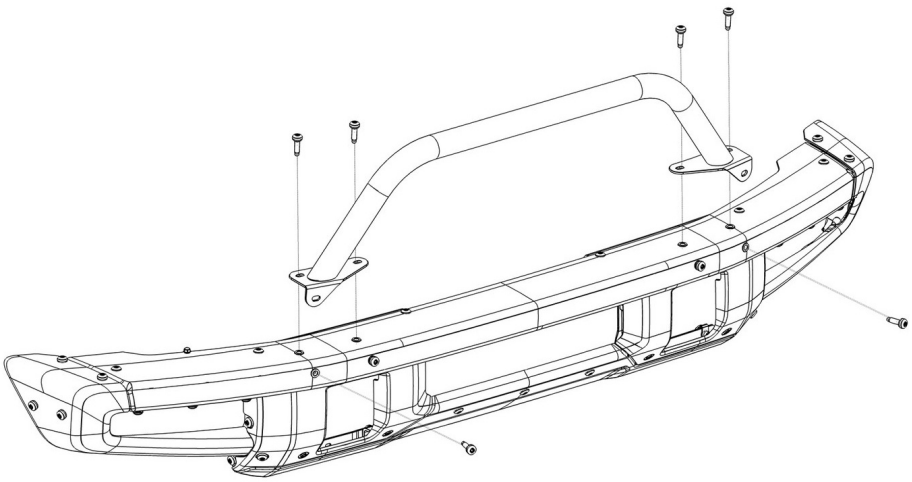

Place the hoop tube onto the bumper and install it into the holes you just cleared, using the factory bolts.

Step 5 Tighten Bolts



Tighten all of the bolts. Your Baja bolt-on hoop is now installed. Thank you for choosing JcrOffroad!

Step 6 Final Check



That’s it! Make sure all of your bolts are tight and enjoy your new Baja Bolt-On Hoop! Be sure to check out jcroffroad.com for even more Bronco products.

Step 7 Installation Complete



Congratulations, you have completed the install of your new Bronco Baja Bolt-On Hoop! Enjoy your new product.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com