Step 1 XJ Interior MOLLE Panel Install Instructions






Step by step on how to install the XJ Interior MOLLE Panel. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts

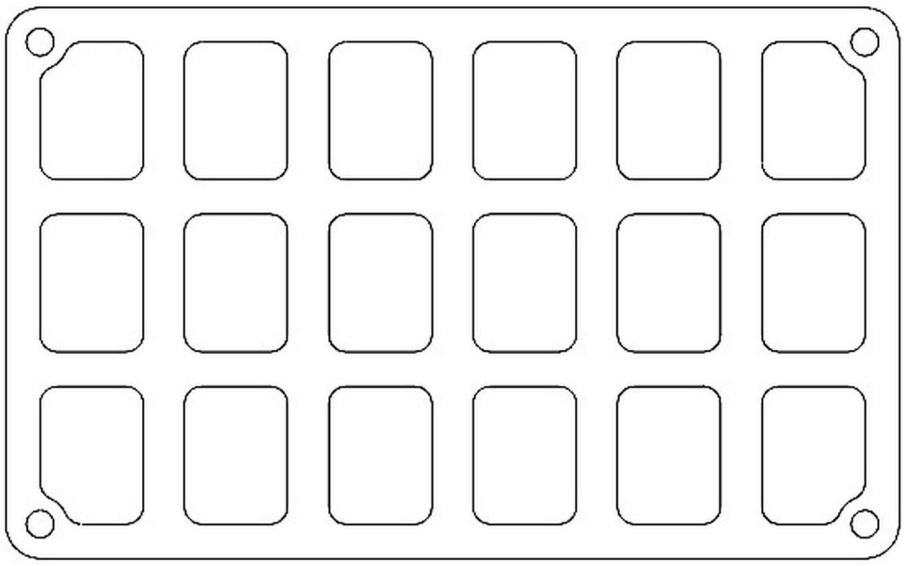

Check that you have the MOLLE panel shown before starting.

Step 3 Included Hardware

046-0044 BOLT PACK

VCC-BP • Bill of materials (per 1 bag)

PIECES / BAG 16

BIN	QTY	PART #	DESCRIPTION
1	8 ×	040-0132	#8 x 3/4 PHILLIPS ROUND HD SCREW SS BLK
2	8 ×	040-0130	NYLON SPACER 1/2 OD x 3/8 L BLK

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description


Check that you have all of the hardware shown before starting (hardware pack 046-0044).

Step 4 Line Up Panel




This panel fits the Cherokee XJ and Ford Maverick center console. Hold the panel against the top or back face of the console and center it. Mark the 4 corner hole locations with a marker or awl.

Step 5 Pre-Thread Screws

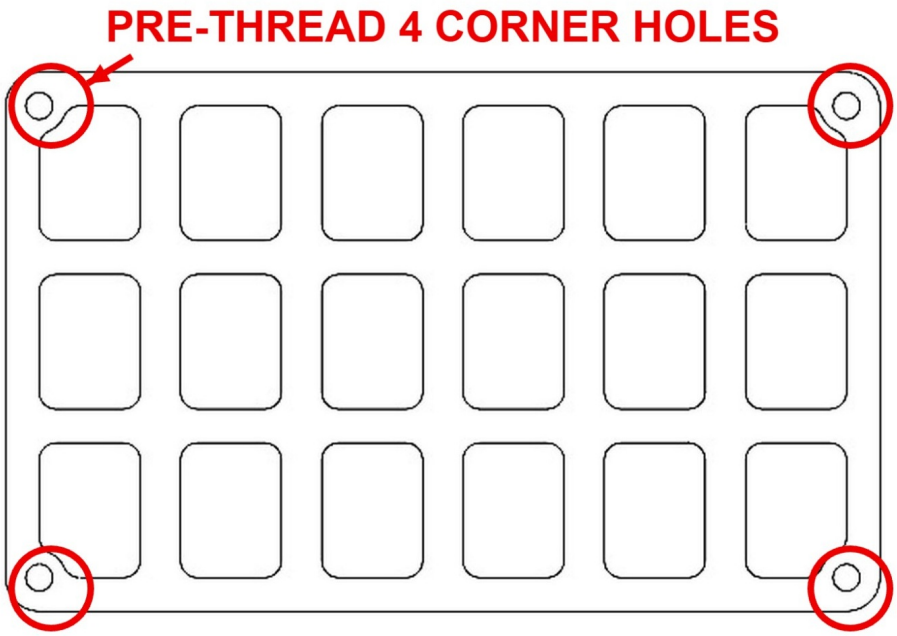

Remove the panel. Thread one of the provided screws into each of the 4 marked spots to start the holes, then back them out. Do not push the screws too far through the plastic.

Step 6 Install Panel

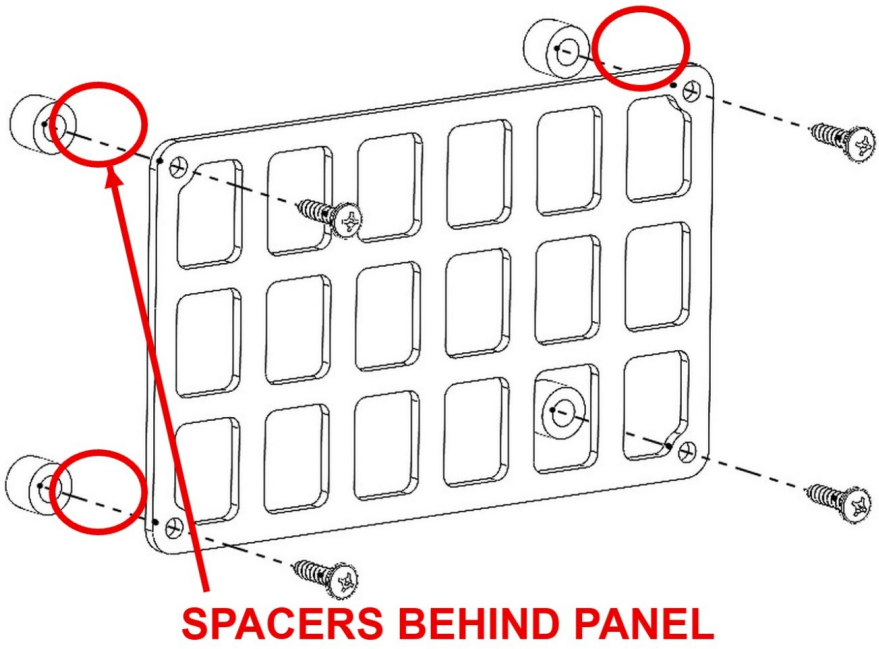

Set a spacer behind each corner hole, line the panel back up with the started holes and thread the 4 screws in with a screwdriver until snug.

Step 7 Installation Complete



Do not over tighten the screws, as this can strip the plastic. Congrats! Your installation of the XJ Interior MOLLE Panel is now complete. Enjoy!